



# Bobcat®

## Service Manual



### Compact Excavator

E145 S/N B4WU11001 & Above





# Table of Contents

## **1 Safety**

1 Track Excavator Maintenance Safety

## **2 Specifications**

1 Specifications

## **3 General Maintenance**

1 General Maintenance Instructions

2 Standard Torques

## **4 Engine**

1 Engine

## **5 Upper Structure**

1 Cabin

2 Counterweight

3 Hydraulic Oil Tank

4 Fuel Tank

5 Main Pump

6 Drive Coupling (Main Pump)

7 Main Control Valve

8 Swing Device

9 Joystick Valve (Work Lever)

10 Dozer Joystick Valve

11 Travel Control Valve (with Damper)

12 Solenoid Valve

13 EPPR Valve (One or Two-way)

14 Accumulator

15 Gear Pump (Rotating)

16 One Spool Valve (Rotating)

## **6 Lower Structure and Chassis**

- 1 Swing Bearing
- 2 Center Joint
- 3 Center Joint (Dozer)
- 4 Travel Device
- 5 Track Assembly
- 6 Dozer System

## **7 Front**

- 1 Boom and Arm
- 2 Bucket
- 3 Cylinders

## **8 Hydraulic System**

- 1 Hydraulic System
- 2 Hydraulic System Testing and Adjustment
- 3 Hydraulic System Troubleshooting

## **9 Electrical System**

- 1 Electrical System

## **10 Options**

- 1 One Way
- 2 Two-way
- 3 Rotating
- 4 Quick Coupler (S/N 1199 & Below)
- 5 Quick Coupler (S/N 1200 & Above)

## **11 Schematic**

- 1 Hydraulic Schematic/Electrical Schematic

# Safety

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$