



Bobcat®

Service Manual



Compact Excavator

S/N B53W11001 & Above



Table of Contents

1 Safety

1 Track Excavator Maintenance Safety

2 Specifications

1 Specifications

3 General Maintenance

1 General Maintenance Instructions

2 Standard Torques

4 Engine

1 Engine

5 Upper Structure

1 Cabin

2 Counterweight

3 Hydraulic Oil Tank

4 Fuel Tank

5 Main Pump

6 Drive Coupling (Main Pump)

7 Main Control Valve

8 Swing Device

9 Joystick Valve (Work Lever)

10 Travel Control Valve (with Damper)

11 Solenoid Valve

12 EPPR Valve (One or Two-way)

13 Accumulator

14 One Spool Valve (Rotating)

6 Lower Structure and Chassis	<ul style="list-style-type: none"> 1 Swing Bearing 2 Center Joint 3 Travel Device 4 Track Assembly
7 Front	<ul style="list-style-type: none"> 1 Boom and Arm 2 Bucket 3 Cylinders
8 Hydraulic System	<ul style="list-style-type: none"> 1 Hydraulic System 2 Hydraulic System Testing and Adjustment
9 Electrical System	<ul style="list-style-type: none"> 1 Electrical System
10 Options	<ul style="list-style-type: none"> 1 One Way 2 Two-way 3 Rotating Kit (Optional) 4 Quick Coupler (S/N 1011 & Below) 5 Quick Coupler (S/N 1012 & Above) 6 Two Pump
11 Schematic	<ul style="list-style-type: none"> 1 Hydraulic Schematic/Electrical Schematic

Safety

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$