



Bobcat®


Service Manual



UV34 UV34XL

Utility Vehicle

(UV34) S/N B4LW11001 & Above
(UV34XL) S/N B4LZ11001 & Above
(UV34) S/N B53611001 & Above
(UV34XL) S/N B53711001 & Above

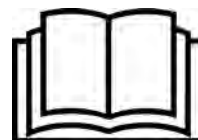

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing the utility vehicle. Read and understand the Operation & Maintenance Manual and signs (decals) on utility vehicle. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2859-0510



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



NA3047

⚠ Never service the utility vehicle without instructions.


CORRECT



NA5187

⚠ Cleaning and maintenance are required daily.

WRONG

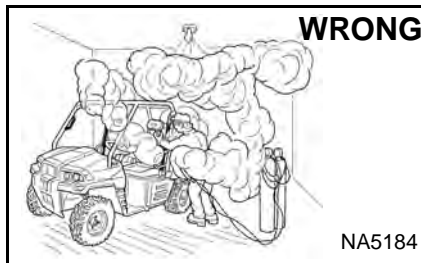

NA5184

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG



NA5201

⚠ Never modify equipment or add attachments and accessories not approved by Bobcat Company.

WRONG

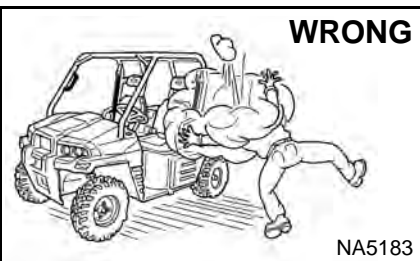

NA5183

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust utility vehicle with the engine running unless instructed to do so in the manual.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.


WRONG



186

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep access doors closed except for service.

WRONG

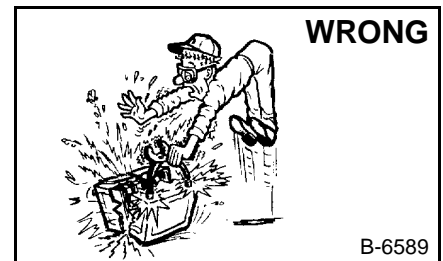

B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

MSW41-0421



Bobcat®

CONTENTS

SAFETY & MAINTENANCE	10-01
DRIVE SYSTEM	20-01
MAINFRAME	30-01
ELECTRICAL SYSTEM & ANALYSIS	40-01
ENGINE SERVICE	50-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$