



Workshop Manual

competence level 2

TCD 4.1 L4

Industry
EU Stage IV / US EPA Tier 4

0312 4458 en

This document is copyright protected.
Distribution in either printed or electronic form is not
allowed without our prior agreement.

Regarding copyright questions and licensing agreements
please contact :

MC-IL, Mr. Lippke
Phone: 0221 822-2599
E-mail: lippke.d@deutz.com

DEUTZ AG
Sales & Service
Information Systems
Ottostraße 1
D-51149 Köln (Cologne)
Phone: +49 (0) 221-822-0
Fax: +49 (0) 221-822-3525
Internet: www.deutz.com
E-mail: info@deutz.com

Workshop Manual	1
General	6
Safety information / User information	7
Special tools	13
Job cards	27
W 01-01-01 Removing and installing the crankcase ventilation	27
W 01-02-01 Replacing the crankshaft sealing ring (opposite side to flywheel)	32
W 01-02-02 Mounting / dismounting shaft sleeve on the crankshaft (opposite side to flywheel)	37
W 01-03-01 Removing and fitting the front cover (Fastening parts)	41
W 01-90-01 Sealing parts (Crankcase)	45
W 01-90-32 Venting line	46
W 01-90-34 Guide tube	47
W 02-01-01 Removing and installing the lubricating oil pan (metal sheet lubricating oil pan)	48
W 05-02-01 Removing and installing the torsional vibration damper	54
W 05-03-01 Removing and installing the flywheel (Fastening parts)	57
W 05-07-01 Removing and installing the sensor wheel	61
W 08-00-01 Checking the compression pressure	63
W 08-01-01 Removing and installing the cylinder head cover	67
W 08-90-14 Transport eye	70
W 09-01-01 Replacing the crankshaft sealing ring (Flywheel side)	71
W 11-01-01 Checking and setting valve clearance (4 cylinders)	75
W 15-02-01 Removing and installing the lubricating oil cooler	79
W 15-02-02 Removing and installing the lubricating oil cooler housing	82
W 15-90-01 Sealing parts (Lubricating oil cooler housing)	85
W 16-01-01 Removing and installing the oil suction pipe	86
W 17-01-01 Removing and installing the control block (Fastening parts)	88
W 17-01-04 Removing and installing the high-pressure pump (Fastening parts)	91
W 19-01-01 Removing and installing the injector (1600xbar injection system)	96
W 20-02-01 Removing and installing the fuel supply pump (Fastening parts)	107
W 20-90-01 Sealing parts (Fuel supply pump)	109
W 20-90-16 Fuel pre-filter	110
W 20-90-17 Fuel filter	112
W 21-01-02 Removing and installing the fuel line (control block - high-pressure pumps)	114
W 21-01-05 Removing and installing the fuel line (Control block)	117
W 21-04-01 Removing and installing the rail (1600xbar injection system)	120
W 21-04-03 Removing and installing the pressure relief valve (Rail)	126
W 21-04-05 Removing and installing the rail pressure sensor	129
W 21-05-04 Removing and installing the fuel line (Rail, cylinder head, control block)	132
W 21-90-71 Vibration damper (installation position) (High pressure lines)	136
W 22-01-01 Removing and installing the charge air line	138
W 22-90-35 Connecting line	140
W 22-90-74 Adapter (Charge air)	141
W 37-03-01 Removing and installing the coolant pump (V-rib belt, level 1)	142
W 37-90-06 Drive components	145
W 38-01-01 Removing and installing the thermostat	146

W 38-01-02 Checking the thermostat (when removed)	149
W 38-02-01 Removing and installing the thermostat housing (Fastening parts)	151
W 38-05-02 Removing and installing the breather pipe (Cooler - thermostat housing, exhaust gas recirculation)	154
W 38-90-01 Sealing parts (Coolant pump - thermostat housing)	157
W 38-90-04 Connection (Compensation tank)	158
W 38-90-32 Line (cylinder head - exhaust gas recirculation)	159
W 39-01-01 Removing and installing the belt tensioner (V-rib belt, level 1)	161
W 39-90-05 Fastening parts (Fan bearing).....	163
W 39-90-05 Fastening parts (Fan).....	164
W 39-90-52 Suction fan	165
W 41-01-01 Removing and installing the exhaust pipe	166
W 41-05-01 Removing and installing the flutter valve	169
W 41-05-02 Removing and installing the cooler	174
W 41-05-03 Removing and installing the actuator	186
W 41-05-10 Removing and installing the Venturi tube	191
W 41-06-01 Removing and installing the temperature sensor.....	194
W 41-06-02 Removing and installing the pressure sensor (Venturi tube)	198
W 41-90-20 Pressure sensor (Exhaust gas back pressure)	203
W 43-01-01 Removing and installing the exhaust gas turbocharger	205
W 43-04-01 Removing and installing the lubricating oil line (Exhaust turbocharger)	208
W 43-05-01 Removing and installing the lubricating oil return line (Exhaust turbocharger)	211
W 43-05-02 Removing and installing the lubricating oil return line (Crankcase)	213
W 44-02-01 Removing and installing the generator (V-rib belt, level 1)	217
W 44-02-03 Removing and installing the V-ribbed pulley	219
W 44-02-06 Removing and installing the console (V-rib belt, level 1)	222
W 44-90-04 Connection (Starter).....	224
W 44-90-05 Fastening parts (Starter)	225
W 44-90-08 Shield plate (Starter)	226
W 46-90-12 Add-on parts (Engine mounting)	227
W 46-90-12 Add-on parts (Engine mounting)	228
W 46-90-12 Add-on parts (Engine mounting)	229
W 47-90-15 Engine mounting (Fastening parts).....	230
W 48-02-01 Removing and installing the engine speed sensor (crankshaft) (Fastening parts)	231
W 48-02-03 Removing and installing the speed sensor (camshaft) (add-on parts).....	234
W 48-03-01 Removing and installing pressure/temperature sensor (Charge air)	236
W 48-90-05 Fastening parts (Relay - generator)	238
W 48-90-09 Holder (Relay).....	239
W 48-90-19 Temperature sensor	240
W 48-90-40 Level sensor.....	241
W 49-01-03 Check cooling system for leaks	242
W 49-02-01 Installing and removing the turning gear (Auxiliary power take-off PTO-C)	244
W 49-02-02 Installing and removing the turning gear (Torsional vibration damper)	246
W 52-01-01 Installing and removing the connection housing	248
W 52-90-07 Cover sheet.....	251

W 63-01-01 Removing and installing the heating flange	252
W 63-06-01 Removing and installing the mixing pipe.....	255
W 63-07-01 Removing and installing the throttle valve	257
W 71-06-02 Removing and installing the metering unit SCR (Selective Catalytic Reduction)	259
W 71-90-02 Locking screw (Exhaust after treatment)	262
W 71-90-09 Holder	263
W 71-90-21 Compensator installation	264
W 71-90-22 Clip.....	266
W 71-90-22 V-belt clip (System 3").....	267
W 71-90-22 V-belt clip (System 6").....	268
W 71-90-22 V-belt clip (System 8.5").....	270
W 71-90-29 Solenoid valve SCR (Selective Catalytic Reduction).....	272
W 71-90-32 Coolant line SCR (Selective Catalytic Reduction)	273
W 71-90-47 Supply pump SCR (Selective Catalytic Reduction)	274
W 71-90-56 Tank SCR (Selective Catalytic Reduction).....	276
W 71-90-80 Mixing pipe (screw connection) SCR (Selective Catalytic Reduction)	278
W 75-90-72 Heat connection (Lubricating oil cooler housing)	279
W 75-90-72 Heat connection (Thermostat housing).....	280
W 83-90-01 Sealing parts (Auxiliary power take-off PTO-B)	281
W 83-90-01 Sealing parts (Crankcase, auxiliary power take-off PTO-A).....	282
W 83-90-01 Sealing parts (Gear case, auxiliary power take-off PTO-C)	283
W 87-90-01 Sealing parts (Mixing pipe - charge air)	284

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$