

Shop Manual

HYDRAULIC
EXCAVATOR

PC1250 -8R
PC1250SP-8R

SERIAL NUMBERS

PC1250- 35001
PC1250SP- 35001

and up

KOMATSU

HYDRAULIC EXCAVATOR

PC1250-8R PC1250SP-8R

Machine model	Serial number
PC1250-8R	35001 and up
PC1250SP-8R	35001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02048-08
00 Index and foreword	SEN02049-08
Index	SEN02050-08 ●
Foreword and general information	SEN02051-02
01 Specification	SEN02052-02
Specification and technical data	SEN02053-02
10 Structure, function and maintenance standard	SEN02054-03
Engine and cooling system	SEN02055-02
Power train	SEN02056-01
Undercarriage and frame	SEN02057-00
Air system	SEN02058-00
Hydraulic system, Part 1	SEN02059-01
Hydraulic system, Part 2	SEN02060-01
Work equipment	SEN02061-00
Cab and its attachments	SEN02062-01
Electrical system	SEN02063-02
20 Standard value table	SEN02064-02
Standard service value table	SEN02071-02
30 Testing and adjusting	SEN02065-04
Testing and adjusting, Part 1	SEN02072-03 ●
Testing and adjusting, Part 2	SEN02073-02
Testing and adjusting, Part 3	SEN02074-02
Testing and adjusting, Part 4	SEN02075-04 ●
Testing and adjusting, Part 5	SEN02076-01 ●
Testing and adjusting, Part 6	SEN02077-01

40 Troubleshooting	SEN02066-04
Failure code table and fuse locations	SEN02078-00
General information on troubleshooting	SEN02079-04
Troubleshooting by failure code (Display of code), Part 1	SEN02080-00
Troubleshooting by failure code (Display of code), Part 2	SEN02081-00
Troubleshooting by failure code (Display of code), Part 3	SEN02082-00
Troubleshooting by failure code (Display of code), Part 4	SEN02083-00
Troubleshooting of electrical system (E-mode)	SEN02085-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02086-01
Troubleshooting of engine (S-mode)	SEN02087-02
50 Disassembly and assembly	SEN02067-03
General information on disassembly and assembly	SEN02785-03
Engine and cooling system (SAA6D170E-5)	SEN02786-00
Engine (SAA6D170E-5)	SEN02787-01
Power train	SEN02788-02
Undercarriage and frame	SEN02789-03
Hydraulic system	SEN02790-02
Work equipment	SEN02791-00
Cab and its attachments	SEN02792-00
Electrical system	SEN02793-00
90 Diagrams and drawings	SEN02068-04
Hydraulic circuit diagrams	SEN02069-02
Electrical diagrams and drawings	SEN02070-02

Table of contents

00 Index and foreword

Index	SEN02050-08
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN02051-02
Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36

01 Specification

Specification and technical data	SEN02053-02
Backhoe specification.....	2
Loading shovel specification	4
Specifications	6
Weight table	18
Table of fuel, coolant and lubricants	26

10 Structure, function and maintenance standard

Engine and cooling system	SEN02055-02
PTO	2
PTO lubrication system	4
Radiator and oil cooler	6
Power train	SEN02056-01
Power train	2
Swing machinery	4
Swing circle	8
Final drive.....	9
Sprocket	12
Undercarriage and frame	SEN02057-00
Track frame, recoil spring	2
Idler	4
Carrier roller	6
Track roller.....	7
Track shoe.....	8
Air system	SEN02058-00
Air piping drawing.....	2
Air circuit diagram.....	3
Air governor.....	4
Air tank	5
Safety valve.....	6
Horn valve	7
Grease pump.....	8
Hydraulic system, Part 1	SEN02059-01
Hydraulic piping drawing	2
Hydraulic tank.....	5
Hydraulic pump	7
Line oil filter	48

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$