

Shop Manual

HYDRAULIC EXCAVATOR

PC220LC-12

PC220LCi-12

SERIAL NUMBERS

PC220LC-800001

PC220LCi-900001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-27
Foreword, Safety, Basic Information	00-30
How to Read the Shop Manual	00-30
Safety Notice for Operation	00-32
Precautions to Prevent Fire	00-40
Procedures If Fire Occurs	00-42
Precautions for Disposing of Waste Materials	00-43
Engine Technology to Conform Exhaust Gas Emission	00-44
Precautions for DEF	00-45
Store DEF	00-46
Precautions When You Handle Hydraulic Equipment	00-47
Precautions When You Disconnect and Connect Pipings	00-50
Precautions When You Handle Electrical Equipment	00-57
Precautions When You Handle Fuel System Equipment	00-59
Precautions When You Handle Intake System Equipment	00-60
Practical Use of KOMTRAX	00-61
Disconnect and Connect Push-Pull Type Coupler	00-62
Precautions for Disconnection and Connection of Connectors	00-66
How to Disconnect and Connect Deutsch Connector	00-71
How to Disconnect and Connect Slide Lock Type Connector	00-72
How to Disconnect and Connect Connector with Lock to Pull	00-79
How to Disconnect and Connect Connector with Lock to Push	00-80
How to Disconnect and Connect Connector with Housing to Rotate	00-83
Standard Tightening Torque Table	00-84
Conversion Table	00-91
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-9
Fuel, Coolant, Lubricant	01-11
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-6
Urea SCR System Diagram	10-9
Function of Urea SCR System	10-10
Component Parts of Urea SCR System	10-19
Boot-up System	10-27
Layout Drawing of Boot-up System	10-27
System Operating Lamp System	10-28
Battery Disconnect Switch	10-29
Starter Signal Unit System	10-30
Component Parts of Boot-Up System	10-33
Engine System	10-35
Layout Drawing of Engine System	10-35
Engine Control System	10-36
Auto-Deceleration System	10-38
Engine Automatic Warm-up System	10-40
Overheat Prevention System	10-42
Turbocharger Protection System	10-45
Automatic Idle Stop System	10-47
Delayed Engine Shutdown	10-50

Auto Power Off.....	10-52
Component Parts of Engine System	10-54
Cooling System.....	10-65
Layout Drawing of Cooling System	10-65
Fan Speed Control System of Fan Clutch	10-67
Engine Output Control System of Fan Clutch	10-69
Component Parts of Cooling System	10-71
Control System	10-72
Layout Drawing of Control System	10-72
Machine Monitor System.....	10-76
KomVision System.....	10-78
KOMTRAX System	10-80
Seat Belt Reminder System	10-81
Radio Sound System	10-83
Remote Courtesy Lights System.....	10-85
Switch of Work Equipment Control Lever	10-88
Travel Heading Indicator	10-89
Rollover Warning System.....	10-90
Component Parts of Control System	10-91
Hydraulic System	10-142
Layout Drawing of Hydraulic System.....	10-142
Electric and Hydraulic System (EHS)	10-147
Engine and Pump Combined Control System	10-159
Pump and Valve Control System.....	10-163
Component Parts of Hydraulic System.....	10-165
Work Equipment System.....	10-245
Layout Drawing of Work Equipment System	10-245
Structure of Valve Control	10-249
One-Touch Power Maximizing System	10-251
PPC Lock System	10-253
Work Equipment and Travel Automatic Lock System	10-254
Cushion System for Boom Raise End	10-257
Cushion System for Arm IN End.....	10-259
Attachment Oil Flow Adjuster System	10-261
Tool Control System	10-263
Component Parts of Work Equipment System	10-265
ICT System (3D Machine Control).....	10-283
Layout Drawing of ICT System (3D Machine Control)	10-283
System Diagram of Bucket Edge Position Detection System (3D Machine Control).....	10-285
Bucket Edge Position Detection System (3D Machine Control).....	10-286
The Intelligent Machine Control System	10-288
Component Parts of ICT System.....	10-305
Swing System	10-325
Layout Drawing of Swing System.....	10-325
Swing Control System Diagram	10-328
Component Parts of Swing System.....	10-332
Travel System	10-347
Layout Drawing of Travel System.....	10-347
System Diagram of Travel Control System.....	10-351
Component Parts of Travel System.....	10-353
Undercarriage and Frame	10-371
Layout Drawing of Undercarriage.....	10-371
Work Equipment	10-373
Structure of Work Equipment	10-373
Function of Work Equipment	10-375
Work Equipment Clearance Adjustment Shim.....	10-376
Bucket Clearance Adjustment Shim	10-377
CAB Related Parts	10-378

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$