

Shop Manual

WHEEL LOADER

WA50-6

SERIAL NUMBERS 60001 and up

KOMATSU

WHEEL LOADER

WA50-6

Machine model	Serial number
WA50-6	60001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04670-03
00 Index and foreword	SEN04684-03
100 Index	SEN04685-03 ●
200 Foreword and general information	SEN04686-01
01 Specification	SEN04687-00
100 Specification and technical data	SEN04688-00
10 Structure, function and maintenance standard	SEN04689-01
100 Engine and cooling system	SEN04690-00
200 Power train	SEN04691-00
300 Steering system	SEN04692-00
400 Brake system	SEN04693-00
500 Undercarriage and frame	SEN04694-00
600 Hydraulic system	SEN04695-00
700 Work equipment	SEN04696-00
800 Cab and its attachments	SEN04697-01
910 Electrical system, Part 1	SEN04698-00
920 Electrical system, Part 2	SEN04699-00
20 Standard value table	SEN04700-01
100 Standard service value table	SEN04707-01 ●
30 Testing and adjusting	SEN04701-01
110 Testing and adjusting, Part 1	SEN04708-01 ●
120 Testing and adjusting, Part 2	SEN04709-01 ●
40 Troubleshooting	SEN04702-01
100 Failure code table and fuse locations	SEN04710-01 ●
200 General information on troubleshooting	SEN04711-01 ●
300 Troubleshooting by failure code (Display of code)	SEN04712-01 ●
400 Troubleshooting of electrical system (E-mode)	SEN04713-01 ●
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04714-01 ●
600 Troubleshooting of engine (S-mode)	SEN04715-00

50 Disassembly and assembly	SEN04703-01
100 General information on disassembly and assembly	SEN04716-01 ●
200 Engine and cooling system	SEN04717-01 ●
300 Power train	SEN04718-01 ●
400 Undercarriage and frame	SEN04719-01 ●
500 Hydraulic system	SEN04720-01 ●
600 Work equipment	SEN04721-00
700 Cab and its attachments	SEN04722-01 ●
800 Electrical system	SEN04723-01 ●
90 Diagrams and drawings	SEN04704-01
100 Hydraulic diagrams and drawings	SEN04705-00
200 Electrical diagrams and drawings	SEN04706-01 ●

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$