

Shop Manual

WHEEL LOADER

WA800-3E0

WA900-3E0

SERIAL NUMBERS

WA800-70001

WA900-60001

and up

KOMATSU

WHEEL LOADER

WA800-3E0
WA900-3E0

Machine model	Serial number
WA800-3E0	70001 and up
WA900-3E0	60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02034-13
00 Index and foreword	SEN02035-13
Index	SEN02036-13 ●
Foreword and general information	SEN02037-04
01 Specification	SEN02038-02
Specification and technical data	SEN02039-02
10 Structure, function and maintenance standard	SEN02040-07
Engine and cooling system	SEN02351-01
Power train, Part 1	SEN02352-01 ●
Power train, Part 2	SEN02470-02 ●
Steering system	SEN02353-01
Brake system	SEN02354-01
Undercarriage and frame	SEN02355-00
Hydraulic system, Part 1	SEN02356-00
Hydraulic system, Part 2	SEN02471-00
Work equipment	SEN02357-00
Cab and its attachments	SEN02358-00
Electrical system, Part 1	SEN02359-00
Electrical system, Part 2	SEN02360-02
Electrical system, Part 3	SEN02361-03 ●
20 Standard value table	SEN02041-02
Standard service value table	SEN02154-02 ●
30 Testing and adjusting	SEN02042-06
Testing and adjusting, Part 1	SEN02155-04
Testing and adjusting, Part 2	SEN02156-03 ●
Testing and adjusting, Part 3	SEN02157-04
40 Troubleshooting	SEN02043-06
Failure code table, fuse and relay locations	SEN02142-04
General information on troubleshooting	SEN02143-02
Troubleshooting by failure code (Display of code), Part 1	SEN02144-01

Troubleshooting by failure code (Display of code), Part 2	SEN02145-01
Troubleshooting by failure code (Display of code), Part 3	SEN02146-01
Troubleshooting by failure code (Display of code), Part 4	SEN02147-02
Troubleshooting by failure code (Display of code), Part 5	SEN02148-02
Troubleshooting by failure code (Display of code), Part 6	SEN02268-01 ●
Troubleshooting of electrical system (E-mode)	SEN02149-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02150-01
Troubleshooting of engine (S-mode)	SEN02151-01
Troubleshooting of machine monitor system (M-mode)	SEN02152-00
Troubleshooting of maintenance monitor system (K-mode)	SEN02153-02
Troubleshooting of remote boom positioner controller system (if equipped) (W-mode)	SEN04494-00
 50 Disassembly and assembly	 SEN02044-08
General information on disassembly and assembly	SEN02739-02
Engine and cooling system, Part 1	SEN02740-01
Engine and cooling system, Part 2	SEN02741-03
Power train, Part 1	SEN02742-03 ●
Power train, Part 2	SEN02743-01
Power train, Part 3	SEN02744-02 ●
Brake system	SEN02745-03 ●
Undercarriage and frame	SEN02746-03
Hydraulic system	SEN02747-03 ●
Work equipment	SEN02748-01
Cab and its attachments	SEN02749-02 ●
Electrical system	SEN02750-00
 90 Diagrams and drawings	 SEN02045-02
Hydraulic diagrams and drawings	SEN02046-00
Electrical diagrams and drawings	SEN02047-02 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$