

# WSM

---

## WORKSHOP MANUAL **TRACTOR**

### B6100HST,B7100HST

---

# Кубота

# CONTENTS

**Section A GENERAL**

- Group 1 Tractor Identification
- Group 2 Specifications
- Group 3 Fuel and Lubricants
- Group 4 Separation
- Group 5 Tune-up and Adjustments

**Section B ENGINE BODY**

- Group 1 General Description
- Group 2 Disassembly
- Group 3 Servicing
- Group 4 Assembly
- Group 5 Specifications

**Section C LUBRICATION SYSTEM**

- Group 1 General Description
- Group 2 Servicing
- Group 3 Specifications

**Section D COOLING SYSTEM**

- Group 1 General Description
- Group 2 Servicing
- Group 3 Specifications

**Section E FUEL SYSTEM**

- Group 1 Fuel Filter
- Group 2 Fuel Pump
- Group 3 Fuel Injection Pump
- Group 4 Nozzle
- Group 5 Governor
- Group 6 Servicing
- Group 7 Specifications

**Section F CLUTCH**

- Group 1 General Description
- Group 2 Servicing
- Group 3 Specifications

**Section G TRANSMISSION**

- Group 1 General Description
- Group 2 Gear Transmission
- Group 3 Hydrostatic Transmission
- Group 4 Hydrostatic Control Linkage
- Group 5 Specifications

**Section H REAR AXLE DIFFERENTIAL**

- Group 1 General Description
- Group 2 Disassembly
- Group 3 Servicing
- Group 4 Specifications

**Section I FRONT AXLE**

- Group 1 General Description
- Group 2 Disassembly
- Group 3 Servicing
- Group 4 Specifications

**Section J TIRES, FRONT ALIGNMENT**

- Group 1 General Description
- Group 2 Specifications

**Section K STEERING**

- Group 1 General Description
- Group 2 Disassembly
- Group 3 Servicing
- Group 4 Specifications

**Section L BRAKES**

- Group 1 General Description
- Group 2 Disassembly
- Group 3 Servicing
- Group 4 Specifications

**Section M HYDRAULIC SYSTEM**

- Group 1 General Description
- Group 2 Hydraulic Pump
- Group 3 Control Valve and Cylinder
- Group 4 Hydraulic Block
- Group 5 Oil Filter
- Group 6 Oil Cooler
- Group 7 Specifications

**Section N ELECTRICAL SYSTEM**

- Group 1 General Description
- Group 2 Battery
- Group 3 Key Switch
- Group 4 Starter
- Group 5 Glow Plug and Safety Switch
- Group 6 AC Dynamo and Regulator
- Group 7 Hourmeter, Headlights and Hazard Lamps
- Group 8 Large Capacity AC Dynamo (Option) Installation
- Group 9 Specifications

# GENERAL

# GENERAL

# GENERAL

## CONTENTS

<b>Group 1 Tractor Identification</b>	
Serial Number . . . . .	1-1
Tractor Serial Number and Transmission	
Serial Number . . . . .	1-1
Engine Serial Number . . . . .	1-1
<b>Group 2 Specifications</b>	
Tractor Specifications . . . . .	2-1
Bolt Torques . . . . .	2-6
<b>Group 3 Fuel and Lubricants</b>	
Fuel . . . . .	3-1
Checking and Refueling . . . . .	3-1
Venting the Fuel System . . . . .	3-1
Lubricants . . . . .	3-2
Engine Lubricating Oil . . . . .	3-2
Checking Engine Crankcase Oil Level . . . . .	3-2
Changing Engine Oil . . . . .	3-2
Changing Engine Oil Filter Cartridge . . . . .	3-3
Checking Transmission Oil Level . . . . .	3-4
Changing Transmission Oil . . . . .	3-4
Changing Transmission Oil Filter Cartridge . . . . .	3-4
Cleaning Strainers . . . . .	3-5
Lubricating Grease Fittings . . . . .	3-6
<b>Group 4 Separation</b>	
Separating Engine from Clutch Housing . . . . .	4-1
Assembling Engine and Clutch Housing . . . . .	4-4
Separating Engine from Front End . . . . .	4-5
Assembling Engine and Front End . . . . .	4-5
Separating Clutch Housing from	
Transmission Case . . . . .	4-6
<b>Group 5 Tune-up and Adjustments</b>	
Engine Tune-up . . . . .	5-1
Tractor Adjustment . . . . .	5-3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$