

WSM

WORKSHOP MANUAL

**TRACTOR, FRONT LOADER,
BACKHOE, ROTARY MOWER**

**BX23S-AU, LA340AU,
BT603, RCK54D, RCK60D,
RCK54, RCK60B**

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of *BX23S-AU*. It contains 4 parts: "Information", "General", "Mechanism", and "Servicing".

Information

This section primarily contains information below.

- Safety first
- Safety decal
- Specifications
- Dimensions

General

This section primarily contains information below.

- Engine identification
- Model identification
- General precautions
- Maintenance check list
- Check and maintenance
- Special tools

Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing specifications (Service specifications)
- Tightening torques
- Checking, disassembling and servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

Kubota reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

January 2018

© KUBOTA Corporation

RECORD OF REVISIONS

For pdf, use search function [Search word] to find all the revised locations.

Last digit of the Code No.	Month of Revision	Main revised point and corrective measure [Search word]	Reference page
1	2019 March	Added quick coupler cartridge socket drawing.	2-72
		Added quick coupler disassembly and assembly.	10-49
		Revised service intervals: • Transmission fluid • Transmission strainer	2-17
		Revised Electrical troubleshooting topic	9-21
		Revised Backhoe troubleshooting topic	11-21
2	2019 September	Added "Checking 3 point hitch oil flow" topic.	7-34
		Revised "Removing center section" topic.	4-43

CONTENTS

1. INFORMATION

SAFETY FIRST	1-1
1. Safety first.....	1-1
2. Before you start service	1-1
3. Start safely.....	1-1
4. Operate safely	1-2
5. Protect against high pressure spray	1-2
6. Avoid hot exhaust	1-3
7. Exhaust filter cleaning	1-3
8. Prevent a fire	1-3
9. Keep a good airflow in the work area	1-3
10. Discard fluids correctly	1-4
11. Prevent acid burns.....	1-4
12. Prepare for emergencies	1-4
SAFETY LABEL	1-5
1. Safety labels for BX tractor	1-5
2. Safety labels for mower	1-10
3. Safety labels for loader.....	1-12
4. Safety labels for backhoe	1-14
SPECIFICATIONS	1-17
1. BX tractor specifications	1-17
2. Mower specifications	1-19
3. Loader specifications.....	1-20
3.1 Loader specifications	1-20
3.2 Bucket specifications.....	1-21
3.3 Dimensional specifications of loader	1-22
3.4 Operational specifications of loader	1-23
4. Backhoe specifications	1-24
4.1 Backhoe specifications.....	1-24
4.2 Backhoe dimensions	1-25
4.3 Backhoe lift capacity	1-26
TRAVELING SPEEDS	1-27
DIMENSIONS	1-29

2. GENERAL

IDENTIFICATION	2-1
1. Tractor identification	2-1
1.1 Checking serial number and hour meter	2-1
1.2 Cylinder number.....	2-1
2. Checking mower identification	2-2
3. Checking loader identification.....	2-2
4. Checking backhoe identification	2-2
GENERAL PRECAUTIONS	2-3
HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING	2-5
LUBRICANTS, FUEL AND COOLANT	2-7
1. BX tractor.....	2-7
1.1 Lubricants, fuel, and coolant	2-7
1.1.1 Fuel	2-8
1.1.2 Engine oil	2-8
1.1.3 Transmission oil	2-8
1.2 Overview of biodiesel fuel (BDF).....	2-9
2. Mower	2-11
2.1 Lubricants.....	2-11
TIGHTENING TORQUES	2-13

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$