

# WSM

---

WORKSHOP MANUAL  
TRACTOR,  
FRONT LOADER, BACKHOE

**BX25DLB-AU,  
LA240A AU-SG, BT602**

---

**Kubota**

# TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of KUBOTA Tractor BX25D, KUBOTA Front Loader LA240A AU-SG and KUBOTA Backhoe BT602. It contains 4 parts: "**Information**", "**General**", "**Mechanism**" and "**Servicing**".

## ■ Information

This section primarily contains information below.

- Safety First
- Safety Decal
- Specifications
- Dimensions

## ■ General

This section primarily contains information below.

- Engine Identification
- Model Identification
- General Precautions
- Maintenance Check List
- Check and Maintenance
- Special Tools

## ■ Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of Workshop Manual (Code No. 9Y021-01870 / 9Y021-18200) for the diesel engine / tractor mechanism that this workshop manual does not include.

## ■ Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing Specifications
- Tightening Torques
- Checking, Disassembling and Servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

KUBOTA reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

© KUBOTA Corporation 2014

May, 2014

### **Record of Revisions**

For pdf, use search function {Search word} to find all the revised locations.

<b>Last digit of the Code No.</b>	<b>Month of Revision</b>	<b>Main Revised Point and Corrective Measures {Search word}</b>	<b>Reference Page</b>
<b>1</b>	2016.03	Revise Maintenance Intervals for BX25DLB	G-15
<b>2</b>	2019.08	Changed Checking Hydraulic Pump Oil Flow Correct errors	5-S5, 5-S6 8-M18

# I INFORMATION

# INFORMATION

## CONTENTS

1. SAFETY FIRST .....	I-1
2. SAFETY DECALS .....	I-4
[1] BX25DLB-AU.....	I-4
[2] LA240A AU-SG .....	I-8
[3] BT602 .....	I-9
[4] ATTACHMENTS.....	I-10
3. SPECIFICATIONS.....	I-12
[1] BX TRACTOR .....	I-12
[2] LA240A AU-SG .....	I-14
[3] BT602 .....	I-16
4. TRAVELING SPEEDS.....	I-19
5. DIMENSIONS .....	I-20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$