

WSM

WORKSHOP MANUAL **FRONT LOADER**

LA1954AU, LA2254AU

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of KUBOTA Front Loader LA1954AU and LA2254AU. It contains 4 parts: **"Information"**, **"General"**, **"Mechanism"** and **"Servicing"**.

■ Information

This section primarily contains information below.

- Safety First
- Safety Decal
- Specification
- Dimension

■ General

This section primarily contains information below.

- Loader Identification
- General Precautions
- Maintenance Check List
- Check and Maintenance

■ Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

■ Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing Specifications
- Tightening Torques
- Checking, Disassembling and Servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

KUBOTA reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

Record of Revisions

For pdf, use search function {Search word} to find all revised locations.

Last digit of the Code No.	Month of Revision	Main Revised Point and Corrective Measures {Search word}	Reference Page
1	2018.10	Accumulator gas pressure value is corrected	1-M74
		Corrected errors	1-S14, 1-S17

I INFORMATION

INFORMATION

CONTENTS

1. SAFETY FIRST	I-1
2. SAFETY DECALS	I-4
3. LOADER TERMINOLOGY	I-7
4. SPECIFICATIONS	I-8
[1] LOADER SPECIFICATIONS	I-8
[2] BUCKET SPECIFICATIONS	I-8
[3] DIMENSIONAL AND OPERATIONAL SPECIFICATIONS	I-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$