

WSM

WORKSHOP MANUAL

**T2090BR-AU,
T2290KW-AU,
T2290KWT-AU**

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of the *T2090BR-AU*, *T2290KW-AU*, *T2290KWT-AU*. It contains 4 parts: "Information", "General", "Mechanism", and "Servicing".

Information

This section primarily contains information below.

- Safety first
- Safety decal
- Specifications
- Dimensions

General

This section primarily contains information below.

- Engine identification
- Model identification
- General precautions
- Maintenance check list
- Check and maintenance
- Special tools

Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of Workshop Manual (Code No. 9Y021-18200) for the *Tractor mechanism* that this Workshop Manual does not include.

Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing specifications
- Tightening torques
- Checking, disassembling and servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

Kubota reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

March 2018

© **Kubota Corporation**

RECORD OF REVISIONS

Main revised contents and corrective measures are described in a table.
Find the main revised point and corrective measure through the reference page.

Last digit of the code No.	Month of revision	Part name	Main revised point and corrective measure	Reference page
1	May 2019	Information	Updated battery label.	1-5
		Steering	Added related page for Dismounting mower	6-6
		Mower	Re-sized illustrations for Structure	10-1
			Added guide pin information for mower belt installation	2-40 10-12
2	2021 February	Engine	Revised the title to the "T2090BR, T2090BR-AU BRIGGS & STRATTON ENGINE(SUPPLEMENT)" from the 40U8 Briggs and Stratton Engine.	3-1 3-5 3-8 3-9

CONTENTS

1. INFORMATION

SAFETY FIRST	1-1
1. Before you start service	1-1
2. Start safely	1-1
3. Operate safely	1-2
4. Prevent a fire	1-2
5. Keep a good airflow in the work area	1-3
6. Discard fluids correctly	1-3
7. Prevent acid burns	1-3
8. Prepare for emergencies	1-3
SAFETY DECALS	1-5
1. Safety decals	1-5
2. Care of danger, warning and caution labels	1-10
SPECIFICATIONS	1-11
1. Specifications	1-11
DIMENSIONS	1-13

2. GENERAL

IDENTIFICATION	2-1
1. Serial number	2-1
GENERAL PRECAUTIONS	2-3
HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING	2-5
1. Handling of wiring	2-5
2. Battery	2-6
3. Handling of fuse	2-7
4. Connector	2-7
5. Handling of circuit tester	2-8
6. Color of wiring	2-8
LUBRICANTS AND FUEL	2-9
1. Hydrostatic transmission (T2290KWT-AU)	2-10
TIGHTENING TORQUES	2-11
1. General use screws, bolts, and nuts	2-11
2. Stud bolts	2-11
3. Hydraulic fittings	2-12
3.1 Hydraulic hose fittings	2-12
3.2 Hydraulic pipe cap nuts	2-12
3.3 Adapters, elbows, and others	2-13
4. Metric screws, bolts and nuts	2-14
5. American standard screws, bolts and nuts with UNC or UNF threads	2-14
6. Plugs	2-14
SERVICE INTERVALS	2-15
CHECK AND MAINTENANCE	2-19
1. Open the bonnet	2-19
1.1 Bonnet	2-19
1.2 Removing engine cover	2-19
2. Daily check	2-20
2.1 Checking engine start system	2-20
2.2 Checking OPC system	2-20
2.3 Checking PTO control system	2-21
2.4 Checking engine oil level	2-21
2.5 Checking amount of fuel and refueling	2-22
2.6 Checking cooling air intake screen	2-23
2.7 Oiling	2-23
3. Check points of every 25 hours	2-24

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$