

WSM

WORKSHOP MANUAL

**Z231BR-AU,
Z231KH-AU,
Z251BR-AU,Z251KH-AU**

Kubota

TO THE READER

This workshop manual provides safety information for service activity, general information such as specifications and dimensions of the machine, mechanisms and structure descriptions of the machine, and service procedures.

Safety

This section contains safety service descriptions and safety label information.

General

This section contains general instructions, tightening torques, general machine information and special tools.

Maintenance

This section contains information for the recommended oil and general maintenance procedures.

Each section basically consists of mechanism and servicing.

Mechanism

Mechanism part contains information and explanations for the structure, functions, and specifications of the machine or component parts. This part should be comprehended before proceeding with troubleshooting, disassembling, assembling, and servicing works.

Servicing

Servicing part contains information and procedures for maintenance, troubleshooting and repair works. The reader should follow these instructions in order to satisfy any servicing work safely, correctly and quickly.

In this WSM, service specifications and service limits are defined as followings.

Service specifications:

Specification which corresponds to new machine's ex-factory. It is based on quality standard, drawings, or actual measurements conducted by Kubota. This value is used to determine whether there is a problem with the machine in the event of a troubleshooting. However, it is necessary to consider degradation due to wear, based on the operating time of the machine, application or maintenance condition.

Service limits:

Service limit is a value corresponding to the recommended performance limit by taking long term-use wear into account. When the service limit is reached, the machine is required to have proper repair, overhaul or replacement in order to keep safe and adequate performance.

All of the illustrations, photographs, specifications, and other information in this manual were created based on the latest model at the time of publication.

The parts names used in this manual are unified into names representing the functions of the parts. Therefore, it does not necessarily correspond to the names used in other materials (parts list, operators manual etc.) and the name on the label / identification plates on the product.

Kubota reserves the right to change all information at any time without notice.

January 2020

© **Kubota Corporation**

SUPPLEMENTARY INFORMATION

Model name and related manuals
This manual applies to the following model.

Model name
Z231BR-AU, Z231KH-AU, Z251BR-AU, Z251KH-AU

RECORD OF REVISIONS

For pdf, use search function [Search word] to find all the revised locations.

Last digit of the code No.	Month of revision	Main revised point and corrective measure [Search word]	Reference page
1	2021 June	Revised reassembly procedure for HST tension spring	4-13 5-13
		Revised checking procedure for link stopper	7-5
		Added adjusting procedure for link stopper	7-5
		Revised adjusting maximum speed specifications	5-12

CONTENTS

1. SAFETY

SAFETY FIRST	1-1
1. Working precautions	1-1
2. Preparing for emergencies	1-1
3. Working cautions	1-2
4. Starting machine safely	1-2
5. Preventing fires	1-3
6. Preventing acid burns	1-3
7. Avoiding high pressure fluid	1-3
8. Avoiding hot exhaust	1-4
SAFETY DECALS	1-5
1. Safety decals	1-5
2. Care of danger, warning and caution labels	1-10

2. GENERAL

GENERAL PRECAUTIONS	2-1
TIGHTENING TORQUES	2-3
1. General use screws, bolts, and nuts	2-3
2. Stud bolts	2-3
3. Hydraulic fittings	2-4
3.1 Hydraulic hose fittings	2-4
3.2 Hydraulic pipe cap nuts	2-4
3.3 Adapters, elbows, and others	2-5
4. Metric screws, bolts and nuts	2-6
5. American standard screws, bolts and nuts with UNC or UNF threads	2-6
6. Plugs	2-6
PRODUCT IDENTIFICATION	2-7
SPECIFICATIONS	2-9
1. Specifications for Z231BR-AU, Z231KH-AU, Z251BR-AU, Z251KH-AU	2-9
2. Specifications for RCK48P-124Z, RCK54P-127ZA	2-11
DIMENSIONS	2-13
HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING	2-15
1. Handling of wiring	2-15
2. Battery	2-16
3. Handling of fuse	2-17
4. Connector	2-17
5. Handling of circuit tester	2-18
6. Wiring colors	2-18
IMPLEMENT LIMITATIONS	2-19
SPECIAL TOOLS	2-21
1. Special tools for machine	2-21
1.1 Spanner wrench	2-21

3. MAINTENANCE

LUBRICANTS AND FUEL	3-1
SERVICE INTERVALS	3-3
CHECK AND MAINTENANCE	3-7
1. Daily check	3-7
1.1 Checking the engine oil level	3-8
1.2 Checking the amount of fuel and refueling	3-8
1.3 Checking and cleaning the air intake screen	3-9
1.4 Checking the tire pressure	3-10
1.4.1 Inflation pressure	3-10
1.5 Checking transaxle fluid level	3-10
1.6 Checking movable parts	3-10

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$