 


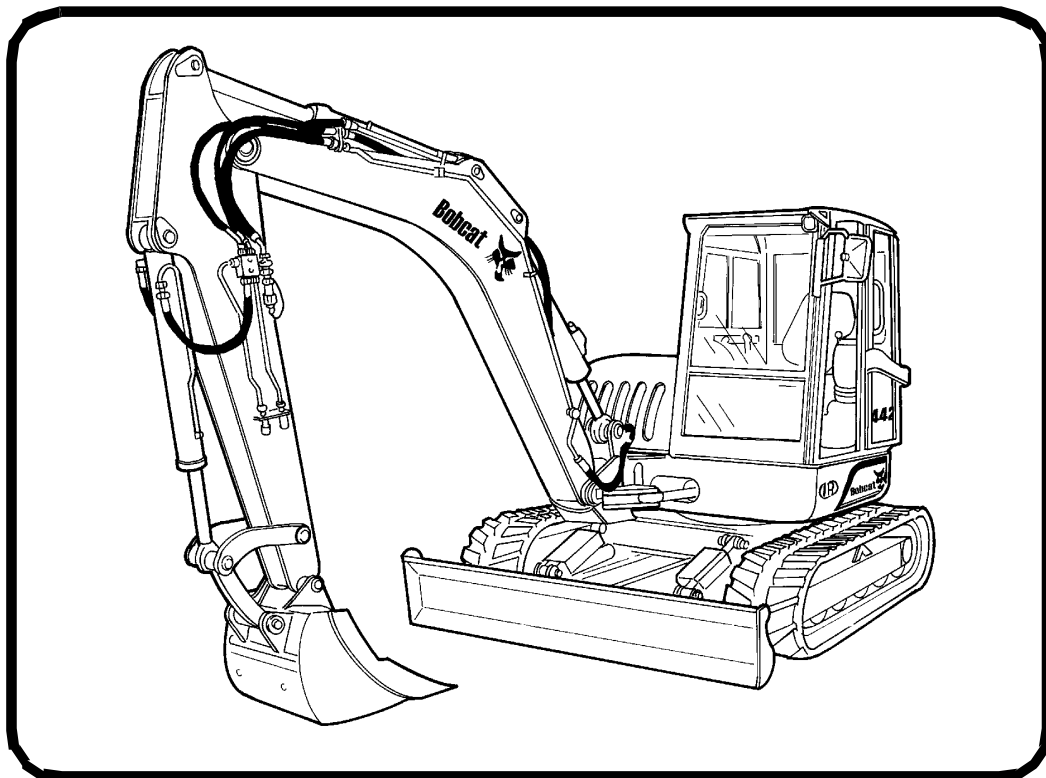

Bobcat®

Service Manual 442 Compact Excavator

S/N ADBR11001 & Above
S/N ADBS11001 & Above



MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

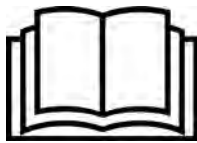

P-90216

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

 
CORRECT

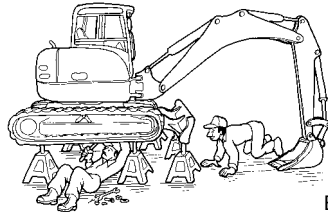

B-16637

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

 
CORRECT

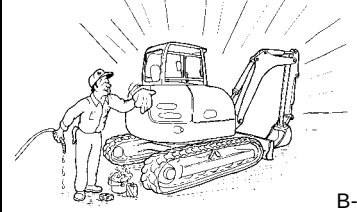

B-16638

- ⚠ Cleaning and maintenance are required daily.

 
WRONG

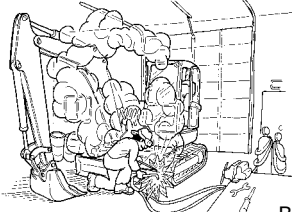

B-16672

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

 
WRONG

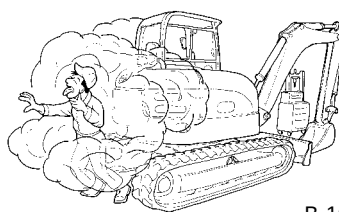

B-16673

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

 
WRONG

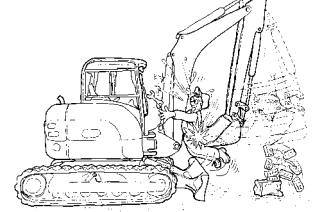

B-16671

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

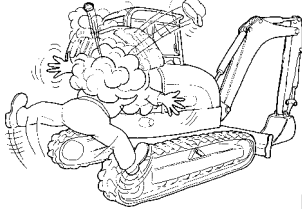

B-16670

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

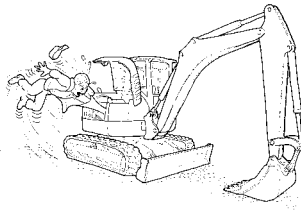

B-16669

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ACCUMULATOR.....	20-01	FAN/FUEL PUMP BELT	10-01
AIR CLEANER	10-01, 60-01	FLOORMAT	40-01
AIR CONDITIONING COMPRESSOR BELT	10-01	FLYWHEEL.....	60-01
AIR CONDITIONING FAN	70-01	FRESH AIR FILTER	10-01
AIR CONDITIONING SERVICE.....	70-01	FRONT CAB LIGHT	50-01
AIR CONDITIONING SYSTEM FLOW	70-01	FUEL COOLANT AND LUBRICANTS.....	SPEC-01
ALTERNATOR	50-01	FUEL LEVEL SENDER	50-01
ALTERNATOR BELT	10-01	FUEL SYSTEM.....	10-01
ARM	40-01	FUEL TANK	40-01
ARM CYLINDER	20-01		
AUXILIARY HYDRAULIC FLOW CONTROL/ HYDRAULIC BREAKER APPLICATION VALVE.....	20-01	GENERAL AIR CONDITIONING SERVICE GUIDELINES.....	70-01
AUXILIARY HYDRAULICS SELECTOR VALVE.....	20-01	GREASE CYLINDER	30-01
BASIC TROUBLESHOOTING	70-01	HEATER/AC FAN	70-01
BATTERY	50-01	HEATER COIL	70-01
BATTERY DISCONNECT SWITCH.....	50-01	HEATER UNIT	70-01
BLADE	30-01	HEATER VALVE	70-01
BLADE CYLINDER	20-01	HORN	40-01
BLADE FLOAT VALVE	20-01	HYDRAULIC EXCAVATOR SPECIFICATIONS. SPEC-01	
BLADE VALVE	20-01	HYDRAULIC FILTER MOUNT.....	20-01
BOOM	40-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BOOM CYLINDER	20-01	HYDRAULIC GEAR PUMP	20-01
BOOM LOAD HOLDING VALVE.....	20-01	HYDRAULIC PISTON PUMP	20-01
BOOM OFFSET CYLINDER.....	20-01	HYDRAULIC PISTON PUMP DRIVE COUPLER....	20-01
BOOM OFFSET VALVE	20-01	HYDRAULIC RESERVOIR.....	20-01
BUCKET	40-01	HYDRAULIC SYSTEM	10-01
BUCKET CYLINDER	20-01	HYDRAULIC SYSTEM INFORMATION	20-01
CAB.....	40-01	INSTRUMENT PANEL.....	50-01
CAB TILT PROCEDURE.....	10-01		
COMPONENTS	70-01	JOYSTICK CONTROL PATTERN SELECTOR VALVE.....	20-01
COMPRESSOR	70-01	JOYSTICK LOCKOUT/TWO SPEED VALVE	20-01
CONDENSER	70-01		
CONTROL LEVERS	40-01	LEFT CONSOLE	40-01
CONVERSIONS	SPEC-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
COOLING SYSTEM.....	10-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
COUNTER WEIGHT	40-01	LIFTING THE EXCAVATOR	10-01
		LOWER TRACK ROLLER.....	30-01
DUMP VALVE	20-01	LUBRICATION OF THE EXCAVATOR	10-01
ELECTRICAL SYSTEM INFORMATION	50-01	MUFFLER.....	60-01
ENGINE	60-01		
ENGINE BOLT TORQUE.....	SPEC-01	OIL COOLER.....	20-01
ENGINE COMPONENTS AND TESTING	60-01	OIL TEMPERATURE COMPONENTS	50-01
ENGINE LUBRICATION SYSTEM.....	10-01	OIL TEMPERATURE REGULATOR	20-01
ENGINE SPECIFICATIONS.....	SPEC-01	OPERATOR CAB	10-01
ENGINE SPEED CONTROL	40-01		
EVAPORATOR UNIT	70-01	PORT RELIEF VALVES.....	20-01
EXCAVATOR BOLT TORQUE	SPEC-01	PRESSURE REDUCING VALVE.....	20-01
		PRESSURE SWITCH.....	70-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$