

 


Bobcat®

Service Manual

G Series

(S/N 515830001 & Above)
(S/N 516220001 & Above)

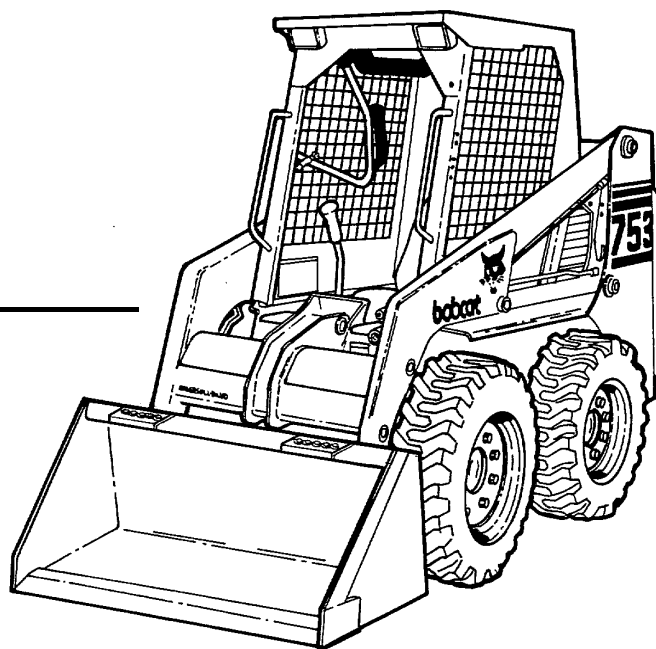

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

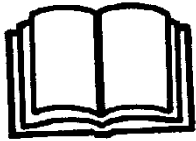

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

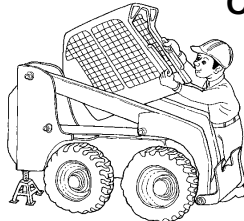

B-15590

Use the correct procedure to lift or lower operator cab.

 
CORRECT

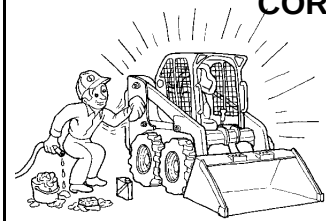

B-15591

Cleaning and maintenance are required daily.

 
WRONG

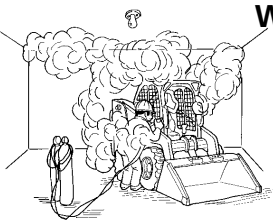

B-15592

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

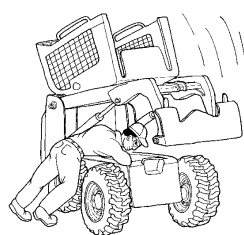

B-15593

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

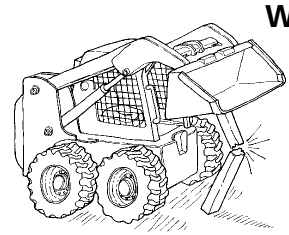

B-15599

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

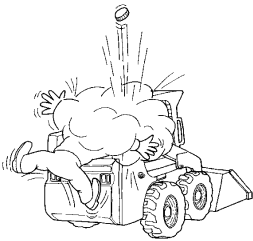

B-15600

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

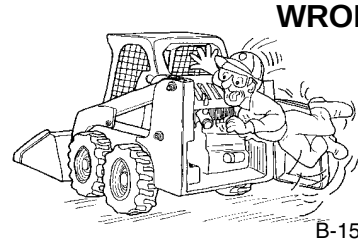

B-15601

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW08-0805



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)		ENGINE SPEED CONTROL	70-01
ADVANCE HAND CONTROL	60-01	FAN GEARBOX	10-01
ADVANCED CONTROL SYSTEM (ACS)		FINAL DRIVE TRANSMISSION (CHAINCASE).....	10-01
SELECTABLE HAND/FOOT CONTROL.....	60-01	FLYWHEEL AND HOUSING	70-01
ADVANCED HAND CONTROL (AHC) SYSTEM....	60-01	FRONT AUXILIARY HYDRAULIC	
ADVANCED HAND CONTROL (AHC)		COUPLER BLOCK	20-01
SYSTEM (W/PUSH BUTTON FLOAT)	60-01	FRONT AUXILIARY PRESSURE	
AIR CLEANER SERVICE	10-01, 70-01	RELIEF BLOCK.....	20-01
ALTERNATOR (55 AMP)	60-01	FUEL SYSTEM.....	10-01
ALTERNATOR (90 AMP)	60-01	FUEL TANK	50-01
 BASIC TROUBLESHOOTING	80-01	 HEATER UNIT	80-01
BATTERY	60-01	HEATER COIL	80-01
BICS™ SYSTEM	60-01	HEATER FAN	80-01
BOBCAT CONTROLLER	60-01	HEATER VALVE	80-01
BOBCAT INTERLOCK		HYDRAULIC CONNECTION SPECS	SPEC-01
CONTROL SYSTEM (BICS™)	60-01	HYDRAULIC CONTROL VALVE (ADVANCED	
BOB-TACH.....	10-01, 50-01	CONTROL SYSTEM) (ACS)	20-01
BRAKE	40-01	HYDRAULIC CONTROL VALVE	
BUCKET POSITION VALVE.....	20-01	(FOOT CONTROL).....	20-01
 CHAINCASE	40-01	HYDRAULIC FLUID RESERVOIR	20-01
CHARGE PRESSURE	30-01	HYDRAULIC/HYDROSTATIC FILTER	20-01
COMPONENTS	80-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
CONTROL HANDLE	50-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
CONTROL HANDLE		HYDRAULIC PUMP (ALUMINUM)	20-01
(ADVANCE HAND CONTROL) (AHC).....	50-01	HYDRAULIC SYSTEM INFORMATION	20-01
CONTROL HANDLE (ADVANCED HAND CONTROL)		HYDRAULIC PUMP (ALUMINUM)	20-01
(AHC) W/PUSH BUTTON FLOAT.....	50-01	HYDRAULIC PUMP (CAST IRON)	20-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		HYDROSTATIC MOTOR	30-01
(ACS) ADVANCED HAND CONTROL.....	50-01	HYDROSTATIC PUMP	30-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		HYDROSTATIC SYSTEM INFORMATION.....	30-01
(ACS) SELECTABLE HAND/FOOT CONTROL...	50-01	 INSTRUMENT PANEL	60-01
CONTROL PANEL	50-01	 LIFT ARM	50-01
CONTROL PEDALS	50-01	LIFT ARM BY-PASS CONTROL VALVE.....	20-01
CONTROL PEDALS (ACS)	50-01	LIFT ARM SUPPORT DEVICE.....	10-01
CONVERSIONS	SPEC-01	LIFTING AND BLOCKING THE LOADER.....	10-01
COOLING FAN	70-01	LIGHTS.....	60-01
CYLINDER (LIFT).....	20-01	LOADER SPECIFICATIONS	SPEC-01
CYLINDER (POWER BOB-TACH).....	20-01	LUBRICATION OF THE BOBCAT LOADER	10-01
CYLINDER (TILT)	20-01	 MAIN RELIEF VALVE	20-01
 DIAGNOSTICS	60-01	MUFFLER.....	70-01
DRIVE BELT	30-01	 OIL COOLER.....	30-01
DRIVE COMPONENTS	40-01	OPERATOR CAB	10-01, 50-01
 ELECTRICAL/HYD. CONTROLS REFERENCE	60-01	OPERATOR SEAT	50-01
ELECTRICAL SYSTEM INFORMATION	60-01	OPERATOR SEAT (SUSPENSION).....	50-01
ENGINE	70-01	 POWER BOB-TACH.....	50-01
ENGINE COMPONENTS AND TESTING	70-01	POWER BOB-TACH BLOCK.....	50-01
ENGINE COOLING SYSTEM.....	10-01		
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS.....	SPEC-01		

Continued On Next Page

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$