

# 763

# 763

HIGH FLOW



# Bobcat®

 
## Service Manual

S/N 512212001 thru 512249999

S/N 512440001 thru 512449999

S/N 512612001 thru 512619999

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**

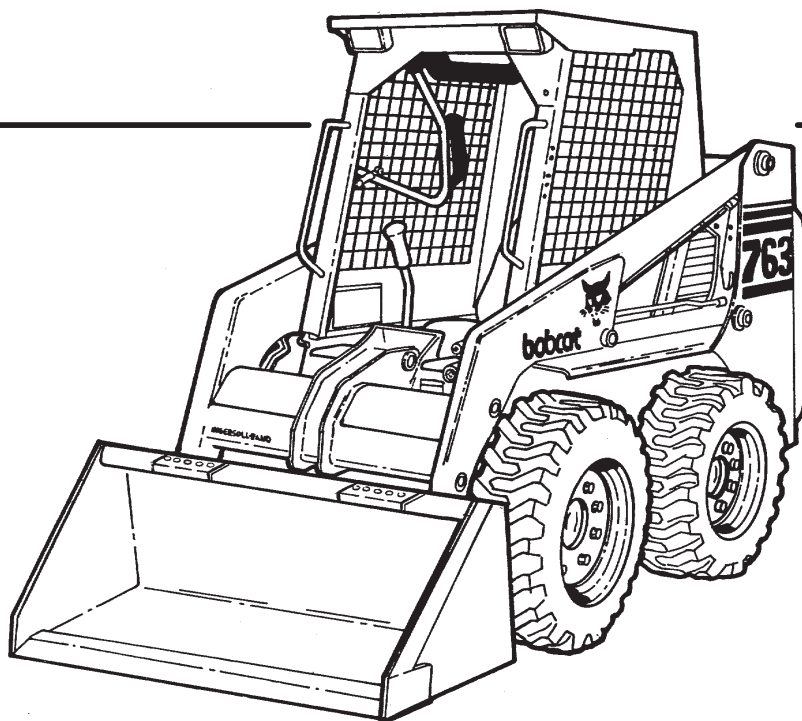

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



# MAINTENANCE SAFETY



## WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### CORRECT

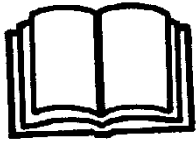

B-10731a

- Never service the Bobcat Skid-Steer Loader without instructions.


### CORRECT

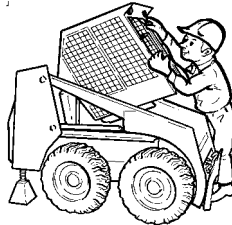 

B-12365

- Use the correct procedure to lift or lower operator cab.


### CORRECT

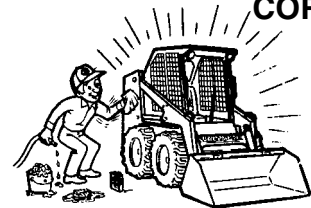 

B-7469

- Cleaning and maintenance are required daily.


### WRONG

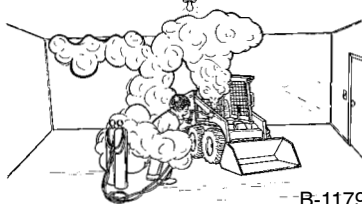 

B-11799

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


### WRONG

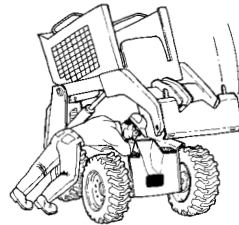 

B-15231

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


### WRONG

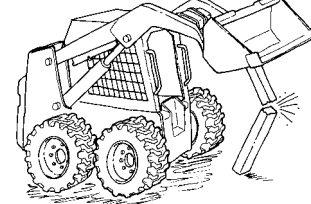 

B-15280

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

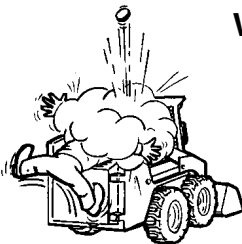 

B-6590

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

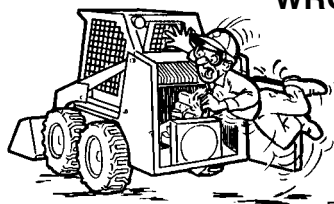 

B-6580

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

### WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

|                                      |           |                                    |                          |
|--------------------------------------|-----------|------------------------------------|--------------------------|
| ACTUATORS                            | 10-1      | LIFT ARM SUPPORT DEVICE            | 1-1                      |
| ACTUATOR VOLTAGE TEST                | 10-1      | LIFT ARMS                          | 5-1                      |
| A.H.C. COMPONENTS                    | 10-1      | LIFT CYLINDER(S)                   | 2-1                      |
| A.H.C./PWM CONTROLLER                | 10-1      | LIFT LOCK BY-PASS VALVE            | 2-1                      |
| A.H.C. HANDLE                        | 10-1      | LIFTING AND BLOCKING THE LOADER    | 1-1                      |
| A.H.C. STEERING LEVER                | 10-1      | LIFTING THE LOADER                 | 1-1                      |
| AIR CLEANER                          | 7-1       | LOADER SPECIFICATIONS - 763        | 9-1                      |
| AIR CLEANER SERVICE                  | 1-1       | LUBRICATING THE LOADER             | 1-1                      |
| ALTERNATOR                           | 6-1       |                                    |                          |
| ALTERNATOR BELT                      | 1-1       | MONITOR SERVICE CODES              | 8-1                      |
| AXLE SEAL                            | 4-1       | MOTOR CARRIER                      | 4-1                      |
| AXLE, SPROCKET AND BEARINGS          | 4-1       |                                    |                          |
|                                      |           | OIL COOLER                         | 3-1                      |
| BATTERY                              | 6-1       | OIL PUMP                           | 7-1                      |
| BICS™ SYSTEM CONTROLLER              | 8-1       | OPERATOR CAB                       | 1-1, 5-1                 |
| BICS VALVE                           | 2-1       | OPERATOR CAB GAS CYLINDER          | 5-1                      |
| BLOWER HOUSING/FAN GEARBOX           | 7-1       | OPERATOR SEAT                      | 5-1                      |
| BOBCAT INTERLOCK                     |           |                                    |                          |
| CONTROL SYSTEM (BICS™)               | 8-1, 10-1 | PARKING BRAKE                      | 4-1                      |
| BOB-TACH                             | 1-1, 5-1  | PARKING BRAKE DISC                 | 4-1                      |
| BOSS® DIAGNOSTIC TOOL                | 8-1       | PEDAL INTERLOCK LINKAGE            | 2-1                      |
| BOSS® INSTRUMENT PANEL               | 8-1       | PISTON AND CONNECTING ROD          | 7-1                      |
|                                      |           |                                    |                          |
| CHAINCASE COVERS                     | 4-1       | RADIATOR                           | 7-1                      |
| CHAINCASE FLUID                      | 4-1       | REAR DOOR                          | 5-1                      |
| CONTROL PANEL                        | 3-1       | REAR GRILL                         | 5-1                      |
| CONTROL PEDALS                       | 2-1       | REAR LIGHTS                        | 5-1                      |
| CRANKSHAFT AND BEARINGS              | 7-1       | RELAY SWITCHES                     | 6-1                      |
| CRANKSHAFT GEAR                      | 7-1       | REMOTE START SWITCH                | 1-1                      |
| CYLINDER BORE                        | 7-1       | ROCKER ARM AND SHAFT               | 7-1                      |
| CYLINDER HEAD                        | 7-1       | RPM SENSOR                         | 8-1                      |
|                                      |           |                                    |                          |
| DECIMAL & MILLIMETER EQUIVALENTS     | 9-1       | SEAT BAR (W/COMPRESSION SPRINGS)   | 5-1                      |
| DRIVE BELT                           | 1-1       | SEAT BAR (W/GAS CYLINDER)          | 5-1                      |
| DRIVE BELT HOUSING                   | 3-1       | SEAT BAR RESTRAINT SYSTEM          | 1-1                      |
| DRIVE CHAIN                          | 4-1       | SEAT BAR SENSOR                    | 8-1                      |
|                                      |           | SEAT SENSOR                        | 8-1                      |
| ELECTRICAL/HYDRAULIC (CONTROL REF.)  | 8-1       | SELECT VALVE (763H)                | 2-1                      |
| ELECTRICAL SYSTEM INFORMATION        | 6-1       | SENDER AND SENSOR                  | 8-1                      |
| ENGINE                               | 7-1       | SERVICE SCHEDULE                   | 1-1                      |
| ENGINE COMPRESSION                   | 7-1       | SPARK ARRESTOR MUFFLER             | 1-1                      |
| ENGINE COOLING SYSTEM                | 1-1       | SPRING LOADED DRIVE BELT TENSIONER |                          |
| ENGINE LUBRICATION SYSTEM            | 1-1       | PULLEY                             | 3-1                      |
| ENGINE MUFFLER                       | 7-1       | STANDARD INSTRUMENT PANEL          | 6-1                      |
| ENGINE SPECIFICATIONS                | 9-1       | STANDARD TORQUE SPECIFICATIONS     |                          |
| ENGINE SPEED CONTROL                 | 7-1       | FOR BOLTS                          | 9-1                      |
|                                      |           | STARTER (DELCO REMY)               | 6-1                      |
| FAN GEARBOX                          | 1-1, 7-1  | STARTER (DENSO)                    | 6-1                      |
| FINAL DRIVE TRANSMISSION (CHAINCASE) | 1-1       | STEERING LINKAGE                   | 3-1                      |
| FIXED DRIVE BELT TENSIONER PULLEY    | 3-1       | SWITCH HANDLE                      | 10-1                     |
| FLYWHEEL                             | 7-1       | STOPPING THE BOBCAT LOADER         | 1-1                      |
| FRONT LIGHTS                         | 6-1       |                                    |                          |
| FUEL CAMSHAFT                        | 7-1       | TILT LOCK VALVE                    | 2-1                      |
| FUEL INJECTION NOZZLES               | 7-1       | TILT CYLINDER                      | 2-1                      |
| FUEL INJECTION PUMP                  | 7-1       | TIMING GEARS                       | 7-1                      |
| FUEL SYSTEM                          | 1-1       | TIMING GEARCASE COVER              | 7-1                      |
| FUEL TANK                            | 5-1       | TIRE MAINTENANCE                   | 1-1                      |
|                                      |           | TORQUE SPECIFICATIONS FOR LOADER   | 9-1                      |
| GLOW PLUGS                           | 7-1       | TOWING THE LOADER                  | 1-1                      |
|                                      |           | TRACTION LOCK                      | 8-1                      |
| HANDLE CONTROL UNIT                  | 10-1      | TRACTION LOCK GUIDES               | 4-1                      |
| HYDRAULIC CONTROL VALVE              | 2-1       | TRANSPORTING THE LOADER            | 1-1                      |
| HYDRAULIC CONTROL VALVE (AHC)        | 10-1      | TROUBLESHOOTING                    | 2-1, 3-1, 6-1, 7-1, 10-1 |
| HYDRAULIC CYLINDER IDENTIFICATION    | 2-1       | TROUBLESHOOTING                    |                          |
| HYDRAULIC CYLINDERS                  | 2-1       | THE BOSS® & L.C.D. DISPLAY         | 8-1                      |
| HYDRAULIC FILTER HOUSING             | 2-1       |                                    |                          |
| HYDRAULIC FLUID RESERVOIR            | 2-1       | U.S. TO METRIC CONVERSION          | 9-1                      |
| HYDRAULIC/HYDROSTATIC                |           |                                    |                          |
| FLUID SPECIFICATIONS                 | 9-1       | VALVE, VALVE SEAT AND GUIDE        | 7-1                      |
| HYDRAULIC/HYDROSTATIC SYSTEM         | 1-1       |                                    |                          |
| HYDRAULIC PUMP                       | 2-1       | WATER PUMP                         | 7-1                      |
| HYDRAULIC SYSTEM INFORMATION         | 9-1       |                                    |                          |
| HYDROSTATIC DRIVE MOTOR              | 3-1       |                                    |                          |
| HYDROSTATIC DRIVE MOTOR 30 SERIES    | 3-1       |                                    |                          |
| HYDROSTATIC PUMP                     | 3-1       |                                    |                          |
| HYDROSTATIC SYSTEM INFORMATION       | 3-1       |                                    |                          |
|                                      |           |                                    |                          |
| IDLER GEAR AND CAMSHAFT              | 7-1       |                                    |                          |

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$