

 
773



Bobcat®

Service Manual

**(773 S/N 509635001 & Above)
(773 Europe Only S/N 509616001–509634999)**

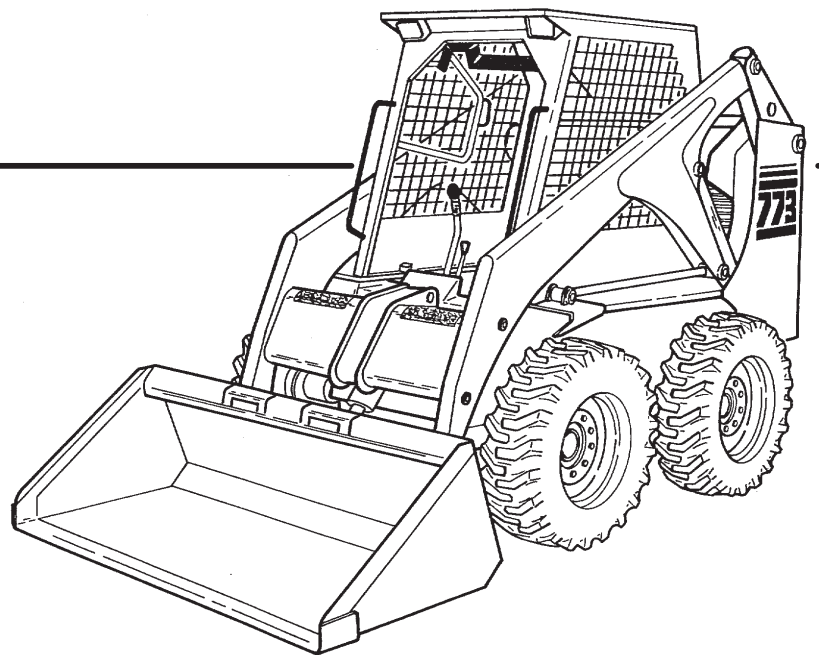

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6900092(6-97)



Printed in U.S.A.

© Bobcat Company 1997

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

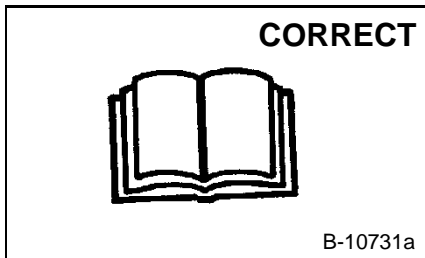

 
Never service the Bobcat Skid-Steer Loader without instructions.

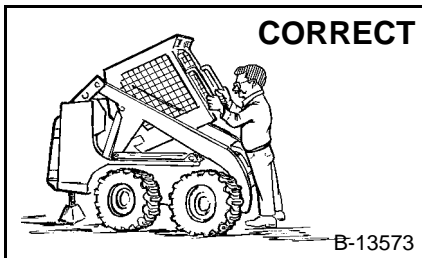

 
Use the correct procedure to lift or lower operator cab.

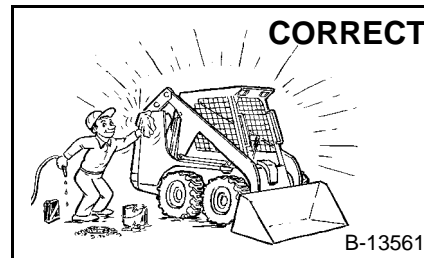

 
Cleaning and maintenance are required daily.

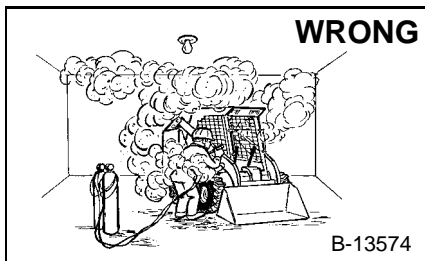

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

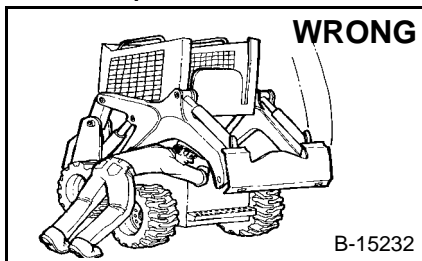

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

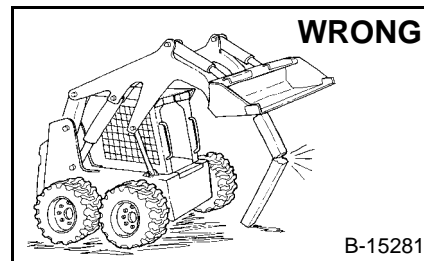

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

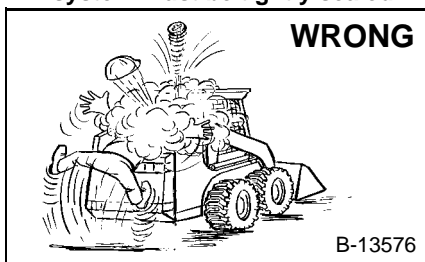

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

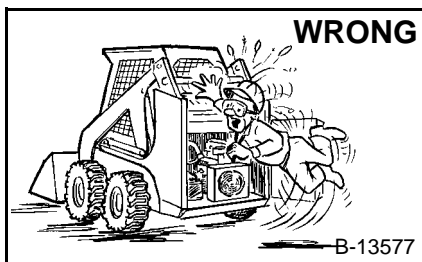

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

ALPHABETICAL INDEX

ACTUATOR VOLTAGE TEST	10-1	IDLER GEAR AND CAMSHAFT	7-1
AHC COMPONENTS	10-1	LIFT ARM LINK	5-1
AHC/PWM CONTROLLER	10-1	LIFT ARMS	5-1
AIR CLEANER	7-1	LIFT ARM SUPPORT DEVICE	1-1
AIR CLEANER SERVICE	1-1	LIFT CYLINDER(S)	2-1
ALTERNATOR	6-1	LIFT LOCK BY-PASS VALVE	2-1
ALTERNATOR BELT	1-1	LIFTING AND BLOCKING THE LOADER	1-1
AXLE SEAL	4-1	LIFTING THE LOADER	1-1
AXLE, SPROCKET AND BEARINGS	4-1	LOADER SPECIFICATIONS	9-1
BATTERY	6-1	LUBRICATION OF THE BOBCAT LOADER	1-1
BICS™ SYSTEM CONTROLLER	8-1	MAIN RELIEF VALVE	2-1
BICS™ VALVE	2-1, 10-1	MONITOR SERVICE CODES	8-1
BLOWER HOUSING/FAN GEARBOX	7-1	MOTOR CARRIER	4-1
BOBCAT INTERLOCK		OIL COOLER	3-1
CONTROL SYSTEM (BICS™)	8-1, 10-1	OIL PUMP	7-1
BOB-TACH	1-1, 5-1	OPERATOR CAB	1-1, 5-1
BOSS® DIAGNOSTIC TOOL	8-1	OPERATOR CAB GAS CYLINDER	5-1
BOSS® INSTRUMENT PANEL	8-1	OPERATOR SEAT	5-1
CHAINCASE COVERS	4-1	OPERATION SENSING SYSTEM UNIT	8-1
CHAINCASE FLUID	4-1	PARKING BRAKE	4-1
CONTROL HANDLE (ADVANCED HAND		PARKING BRAKE DISC	4-1
CONTROL) (AHC)	10-1	PISTON AND CONNECTING ROD	7-1
CONTROL HANDLE (ADVANCED HAND		PIVOT PINS	1-1
CONTROL) (AHC) (W/PUSH BUTTON FLOAT)	10-1	RADIATOR	7-1
CONTROL INTERLOCK LINKAGE	2-1	REAR DOOR	5-1
CONTROL PANEL	3-1	REAR GRILL	5-1
CONTROL PEDALS	2-1	REAR LIGHTS	5-1
CONTROL VALVE	2-1	RELAY SWITCHES	6-1
CRANKSHAFT AND BEARINGS	7-1	REMOTE START SWITCH	1-1
CRANKSHAFT GEAR	7-1	ROCKER ARM AND SHAFT	7-1
CYLINDER BORE	7-1	RPM SENSOR	8-1
CYLINDER HEAD	7-1	SEAT BAR (W/COMPRESSION SPRINGS)	5-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	SEAT BAR (W/GAS CYLINDER)	5-1
DRIVE BELT	1-1	SEAT BAR RESTRAINT SYSTEM	1-1
DRIVE BELT HOUSING	3-1	SEAT BAR SENSOR	8-1
DRIVE CHAIN	4-1	SEAT SENSOR	8-1
ELECTRICAL/HYDRAULIC		SENDER AND SENSOR	8-1
CONTROLS REFERENCE	8-1	SERVICE SCHEDULE	1-1
ELECTRICAL SYSTEM INFORMATION	6-1	SPARK ARRESTOR MUFFLER	1-1
ENGINE	7-1	SPRING LOADED DRIVE BELT	
ENGINE COMPRESSION	7-1	TENSIONER PULLEY	3-1
ENGINE COOLING SYSTEM	1-1	STANDARD INSTRUMENT PANEL	6-1
ENGINE LUBRICATION SYSTEM	1-1	STANDARD TORQUE SPECIFICATIONS	
ENGINE MUFFLER	7-1	FOR BOLTS	9-1
ENGINE SPECIFICATIONS	9-1	STARTER	6-1
ENGINE SPEED CONTROL	7-1	STOPPING THE BOBCAT LOADER	1-1
FAN GEARBOX	1-1, 7-1	STEERING LINKAGE	3-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	SWITCH HANDLE	10-1
FIXED DRIVE BELT TENSIONER PULLEY	3-1	TILT CYLINDER	2-1
FLYWHEEL	7-1	TILT LOCK VALVE	2-1
FRONT LIGHTS	6-1	TIMING GEARS	7-1
FUEL CAMSHAFT	7-1	TIMING GEARCASE COVER	7-1
FUEL INJECTION NOZZLES	7-1	TIRE MAINTENANCE	1-1
FUEL INJECTION PUMP	7-1	TORQUE SPECIFICATIONS FOR LOADER	9-1
FUEL SYSTEM	1-1	TOWING THE LOADER	1-1
FUEL TANK	5-1	TRACTION LOCK	8-1
GLOW PLUGS	7-1	TRACTION LOCK GUIDES	4-1
HANDLE CONTROL UNIT TEST	10-1	TRANSPORTING THE LOADER	1-1
HYDRAULIC CONNECTION SPECIFICATIONS	9-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1, 10-1
HYDRAULIC CONTROL VALVE	10-1	TROUBLESHOOTING	
HYDRAULIC CYLINDER IDENTIFICATION	2-1	THE BOSS® & L.C.D. DISPLAY	8-1
HYDRAULIC CYLINDERS	2-1	U.S. TO METRIC CONVERSION	9-1
HYDRAULIC FILTER HOUSING	2-1	VALVE CLEARANCE	7-1
HYDRAULIC FLUID RESERVOIR	2-1	VALVE, VALVE SEAT AND GUIDE	7-1
HYDRAULIC/HYDROSTATIC		WATER PUMP	7-1
FLUID SPECIFICATIONS	9-1		
HYDRAULIC/HYDROSTATIC SYSTEM	1-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC SYSTEM INFORMATION	2-1		
HYDROSTATIC DRIVE MOTOR	3-1		
HYDROSTATIC MOTOR 30 SERIES	3-1		
HYDROSTATIC PUMP	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		

CONTENTS

FOREWORD	ii
SAFETY INSTRUCTIONS	v
SERIAL NUMBER LOCATIONS	vii
DELIVERY REPORT	vii
BOBCAT LOADER IDENTIFICATION	viii
PREVENTIVE MAINTENANCE	1-1
HYDRAULIC SYSTEM	2-1
HYDROSTATIC SYSTEM	3-1
DRIVE SYSTEM	4-1
MAIN FRAME	5-1
ELECTRICAL SYSTEM	6-1
ENGINE SERVICE	7-1
SYSTEMS ANALYSIS	8-1
SPECIFICATIONS	9-1
ADVANCED HAND CONTROL SYSTEM	10-1

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its
constituents are known to the State of California
to cause cancer, birth defects and other
reproductive harm.

**PREVENTIVE
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

**MAIN
FRAME**

**ELECTRICAL
SYSTEM**

**ENGINE
SERVICE**

**SYSTEMS
ANALYSIS**

 

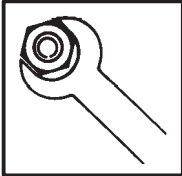 

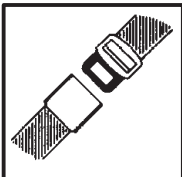 

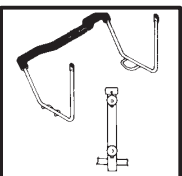 
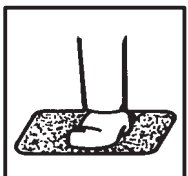 
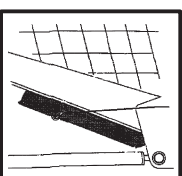 
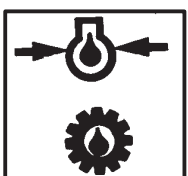 

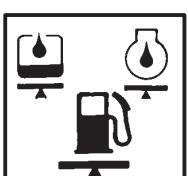 
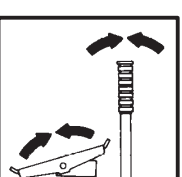 
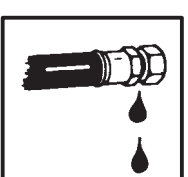 


SPECIFICATIONS

**ADVANCED
HAND CONTROL
SYSTEM**

FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

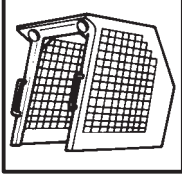A general inspection of the following items must be made after the loader has had service or repair:

- | | | | |
|---|---|--|---|
| 1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified. |  | 9. The parking brake must function correctly. |  |
| 2. Check that ROPS mounting hardware is tightened and is Melroe approved. |  | 10. Enclosure door latches must open and close freely. |  |
| 3. The seat belt must be correctly installed, functional and in good condition. |  | 11. Bob-Tach wedges and linkages must function correctly and be in good condition. |  |
| 4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated. |  | 12. Safety treads must in good condition. |  |
| 5. Check lift arm support device, replace if damaged. |  | 13. Check for correct function of indicator lamps (Optional on some models). |  |
| 6. Machine signs must be legible and in the correct location. |  | 14. Check hydraulic fluid level, engine oil level and fuel supply. |  |
| 7. Steering levers and foot pedals must return to neutral. |  | 15. Inspect for fuel, oil or hydraulic fluid leaks. |  |
| 8. Check for correct function of the work lights. |  | 16. Lubricate the loader. |  |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$