

864

864

 
HIGH FLOW



Service Manual

S/N 516911001 & Above

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

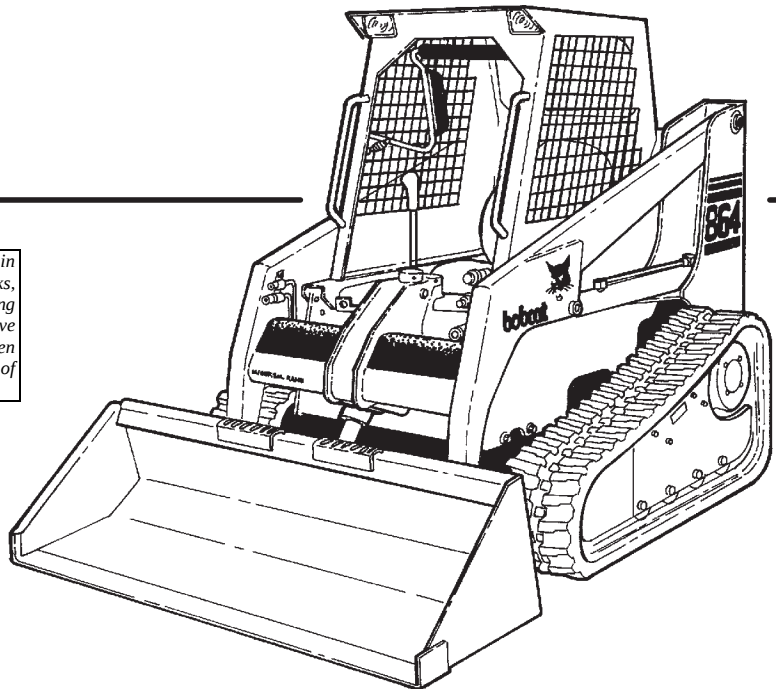

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

6900627 (10* /)

© Bobcat Company 2010
Printed in U.S.A.

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

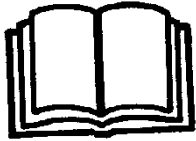

B-10731a

Never service the Bobcat Compact Track Loader without instructions.

 
CORRECT

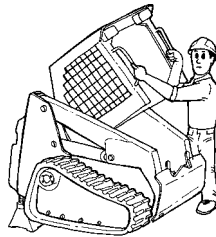

B-15248

Use the correct procedure to lift or lower operator cab.

 CORRECT

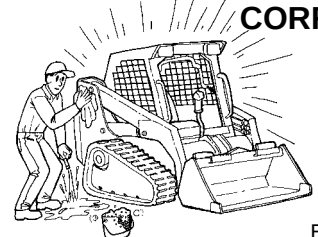

B-15247

Cleaning and maintenance are required daily.

 
WRONG



B-15246

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

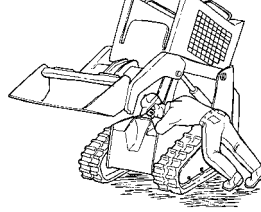

B-15275

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

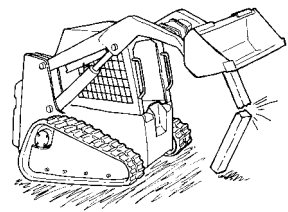

B-15279

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

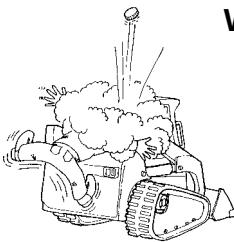

B-15665

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

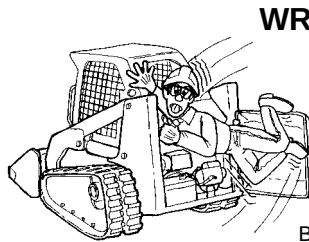

B-15663

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW06-0805



Bobcat®

ALPHABETICAL INDEX

ACTUATORS	10-1	FAN DRIVE TENSION PULLEY	7-1
ACTUATOR VOLTAGE TEST	10-1	FAN GEARBOX	7-1
A.H.C./PWM CONTROLLER	10-1	FLYWHEEL	7-1
A.H.C. HANDLE	10-1	FLYWHEEL HOUSING	7-1
A.H.C. STEERING LEVER	10-1	FRONT COVER	7-1
AIR CLEANER HOUSING	7-1	FRONT LIGHTS	6-1
AIR CLEANER SERVICE	7-1	FUEL INJECTOR	7-1
ALTERNATOR	6-1	FUEL INJECTION PUMP	7-1
ALTERNATOR BELT	6-1	FUEL SYSTEM	1-1
		FUEL TANK	5-1
BATTERY	6-1	GLOW PLUGS	7-1
BICS™	8-1	HANDLE CONTROL UNIT	10-1
BICS™ VALVE	2-1, 10-1	HANDLE CONTROL UNIT TEST	10-1
BLOWER FAN	7-1	HYDRAULIC CONNECTION SPECIFICATIONS	9-1
BLOWER HOUSING/FAN GEARBOX	7-1	HYDRAULIC CONTROL VALVE	2-1, 10-1
BICS™ SYSTEM CONTROLLER	8-1, 10-1	HYDRAULIC CYLINDER	2-1
BOB-TACH	5-1	HYDRAULIC FLUID RESERVOIR	2-1
BOSS® DIAGNOSTIC TOOL	8-1	HYDRAULIC PUMP	2-1
BOSS® INSTRUMENT PANEL	8-1	HYDRAULIC PUMP (Double Gear) 863H	2-1
BOSS® UNIT	8-1	HYDRAULIC SYSTEM INFORMATION	2-1
BRAKE BLOCK	4-1	HYDRAULIC/HYDROSTATIC FILTER HOUSING	2-1
BUCKET POSITION VALVE	2-1	HYDRAULIC/HYDROSTATIC FLUID SPECS	9-1
		HYDRAULIC/HYDROSTATIC SYSTEM	1-1
CAMSHAFT BEARINGS	7-1	HYDROSTATIC MOTOR	3-1
CHARGE PRESSURE	3-1	HYDROSTATIC PUMP	3-1
CHARGE PUMP	3-1	HYDROSTATIC SYSTEM INFORMATION	3-1
CONNECTING ROD	7-1	LIFT ARM BY-PASS CONTROL VALVE	2-1
CONTROL PEDALS	2-1	LIFT ARM BY-PASS CONTROL VALVE MOUNT BRACKET	2-1
CONTROL PANEL	3-1	LIFT ARMS	5-1
CONTROL ROD GUIDE BUSHING	7-1	LIFT ARM SUPPORT DEVICE	1-1
CRANKSHAFT	7-1	LIFT CYLINDER(S)	2-1
CRANKSHAFT GEAR MOUNTING BOLT	7-1	LIFTING AND BLOCKING THE LOADER	1-1
CROSSBAR LINKAGE	2-1	LOADER SPECIFICATIONS	9-1
CYLINDER HEAD	7-1	LUBRICATING THE LOADER	1-1
CYLINDER LINERS	7-1		
		MAIN RELIEF VALVE	2-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	MONITOR SERVICE CODE	8-1
DEUTZ ENGINE TOOLS	7-1	OIL COOLER	3-1, 7-1
DRIVE BELT	3-1	OPERATOR CAB	1-1 & 5-1
DRIVE BELT SHIELD	3-1	OPERATOR CAB GAS CYLINDER	5-1
DRIVE BELT TENSIONER PULLEY	3-1	OPERATOR SEAT	5-1
		PARKING BRAKE PEDAL	4-1
ELEC./HYD. CONTROLS REFERENCE	8-1	PEDAL INTERLOCK LINKAGE	2-1
ELECTRICAL SYSTEM INFORMATION	6-1	PISTON AND PISTON PIN	7-1
ENGINE	7-1	PWM CONTROL HANDLE	8-1
ENGINE COOLING SYSTEM	1-1	PWM ELECTRIC SOLENOID	8-1
ENGINE LUBRICATION SYSTEM	1-1	PWM MODULE	8-1
ENGINE MOUNTS	7-1	PWM TROUBLESHOOTING	8-1
ENGINE MUFFLER	7-1		
ENGINE SPECIFICATIONS	9-1	REAR AUXILIARY DEVERTER-864 STD. FLOW	2-1
ENGINE SPEED CONTROL	7-1	REAR COVER SEAL	7-1
ENGINE TORQUE	9-1	REAR DOOR	5-1
		REAR GRILL	5-1
		RECONDITIONING THE ENGINE	7-1
		RELAY SWITCHES	6-1
		REMOTE START SWITCH	1-1
		ROCKER ARM AND BRACKET	7-1
		RPM SENSOR	8-1

Continued On Next Page

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$