

8

 
7

3



Service Manual

(S/N 514114999 & Below)
(S/N 514212999 & Below)

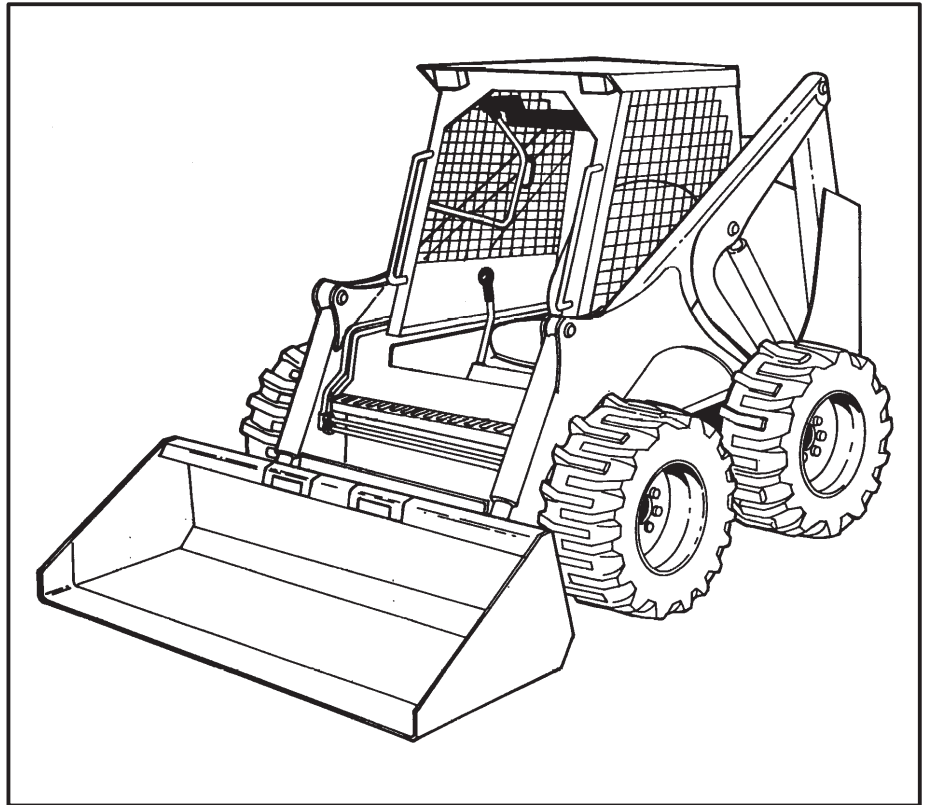

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

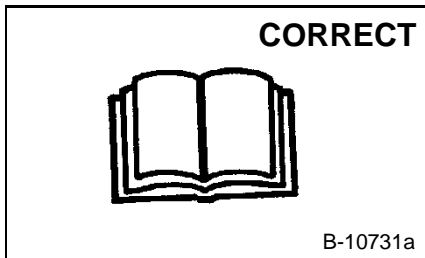

 
Never service the Bobcat Skid-Steer Loader without instructions.

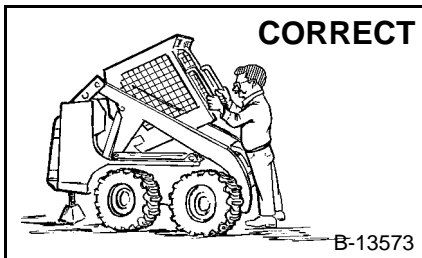

 
Use the correct procedure to lift or lower operator cab.

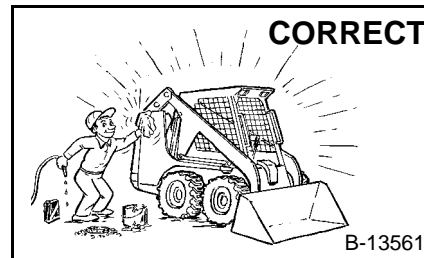

 
Cleaning and maintenance are required daily.

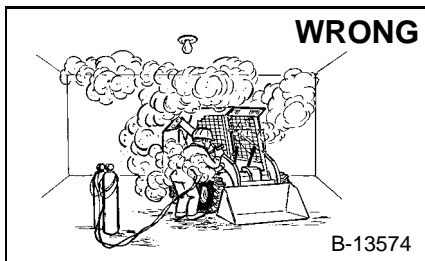

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

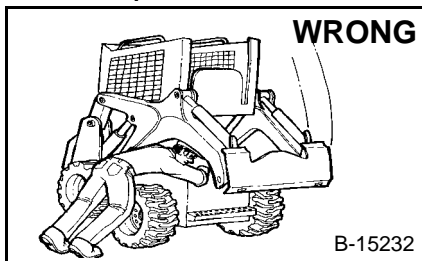

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

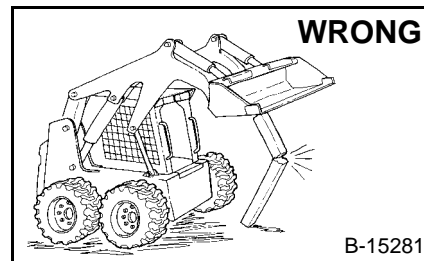

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

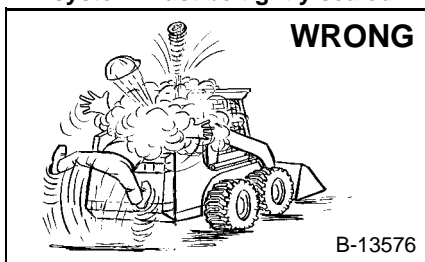

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

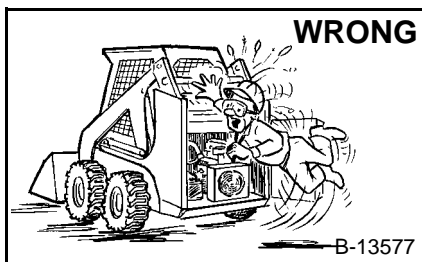

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER HOUSING	7-1	HYD./HYDRO. FILTER HOUSING BRACKET	2-1
AIR CLEANER SERVICE	1-1	HYDRAULIC/HYDROSTATIC SYSTEM	1-1
ALTERNATOR	6-1	HYDROSTATIC FILTER HOUSING	2-1
ALTERNATOR BELT	1-1	HYDROSTATIC MOTOR	3-1
AXLE SEAL	4-1	HYDROSTATIC PUMP	3-1
AXLE, BEARINGS AND SPROCKET	4-1	HYDROSTATIC SYSTEM INFORMATION	3-1
 		LIFT ARM BY-PASS CONTROL VALVE	8-1
BATTERY	6-1	LIFT ARMS	5-1
BICS™ SYSTEM CONTROLLER	8-1	LIFT ARM LINK	5-1
BLOWER FAN	7-1	LIFT ARM STABILIZER BAR	5-1
BLOWER HOUSING/FAN GEARBOX	7-1	LIFT ARM SUPPORT DEVICE	1-1
BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)	8-1	LIFT CYLINDER(S)	2-1
BOB-TACH	5-1	LIFT LOCK BY-PASS VALVE	8-1
BOSS® DIAGNOSTIC TOOL	8-1	LIFTING AND BLOCKING THE LOADER	1-1
BOSS® INSTRUMENT PANEL	8-1	LUBRICATING THE LOADER	1-1
BRAKE DISC	4-1	 	
 		MAIN RELIEF VALVE	2-1
CAMSHAFT BEARINGS	7-1	MONITOR SERVICE CODE	8-1
CHAINCASE FLUID	4-1	MOTOR CARRIER	3-1
CONNECTING ROD	7-1	 	
CONTROL PEDALS	2-1	OIL COOLER	3-1
CONTROL ROD GUIDE BUSHING	7-1	OPERATION SENSING SYSTEM UNIT	8-1
CRANKSHAFT	7-1	OPERATOR CAB	1-1 & 5-1
CYLINDER HEAD	7-1	OPERATOR CAB GAS CYLINDER	5-1
CYLINDER LINERS	7-1	OPERATOR SEAT	5-1
DEUTZ ENGINE TOOLS	7-1	PARKING BRAKE PEDAL	4-1
DRIVE BELT	3-1	PEDAL INTERLOCK LINKAGE	2-1
DRIVE BELT SHIELD	3-1	PISTON AND PISTON PIN	7-1
DRIVE BELT TENSIONER PULLEY	3-1	PWM CONTROL HANDLE	8-1
DRIVE CHAIN	4-1	PWM ELECTRIC SOLENOID	8-1
 		PWM MODULE	8-1
ELEC./HYD. CONTROLS REFERENCE	8-1	PWM TROUBLESHOOTING	8-1
ELECTRICAL SYSTEM INFORMATION	6-1	 	
ENGINE	7-1	REAR CHAINCASE COVER	4-1
ENGINE COOLING SYSTEM	1-1	REAR COVER SEAL	7-1
ENGINE LUBRICATION SYSTEM	1-1	REAR DOOR	5-1
ENGINE MUFFLER	7-1	REAR GRILL	5-1
ENGINE SPEED CONTROL	7-1	RECONDITIONING THE ENGINE	7-1
 		RELAY SWITCHES	6-1
FAN DRIVE TENSION PULLEY	7-1	REMOTE START SWITCH	1-1
FAN GEARBOX	1-1 & 7-1	ROCKER ARM AND BRACKET	7-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	RPM SENSOR	8-1
FLYWHEEL	7-1	 	
FLYWHEEL HOUSING	7-1	SEAT BAR	5-1
FRONT CHAINCASE COVER	4-1	SEAT BAR RESTRAINT SYSTEM	1-1
FRONT COVER	7-1	SEAT BAR SENSOR	8-1
FRONT LIGHTS	6-1	SEAT SENSOR	8-1
FRONT PANEL	3-1	SENDER AND SENSOR	8-1
FRONT SIDE PANEL	2-1	SERVICE SCHEDULE	1-1
FUEL INJECTOR	7-1	STANDARD INSTRUMENT PANEL	6-1
FUEL INJECTION PUMP	7-1	STARTER	6-1
FUEL SYSTEM	1-1	STEERING LEVERS	3-1
FUEL TANK	5-1	STOPPING THE BOBCAT LOADER	1-1
GLOW PLUGS	7-1	TILT CYLINDER(S)	2-1
 		TILT LOCK VALVE	8-1
HYDRAULIC CONTROL VALVE	2-1	TIMING BELT	7-1
HYDRAULIC CYLINDER	2-1	TIRE MAINTENANCE	1-1
HYDRAULIC FILTER HOUSING	2-1	TRACTION LOCK	8-1
HYDRAULIC FLUID RESERVOIR	2-1	TRACTION LOCK CONTROL SYSTEM	8-1
HYDRAULIC PUMP	2-1	TOWING THE LOADER	1-1
HYDRAULIC SYSTEM INFORMATION	2-1	TRANSPORTING THE LOADER	1-1
 		TROUBLESHOOTING	2-1, 3-1, 6-1 & 7-1
 		TROUBLESHOOTING THE BOSS® & L.C.D. DISPLAY	8-1
 		TURBOCHARGER	7-1
 		VALVE CLEARANCE	7-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$