 


963

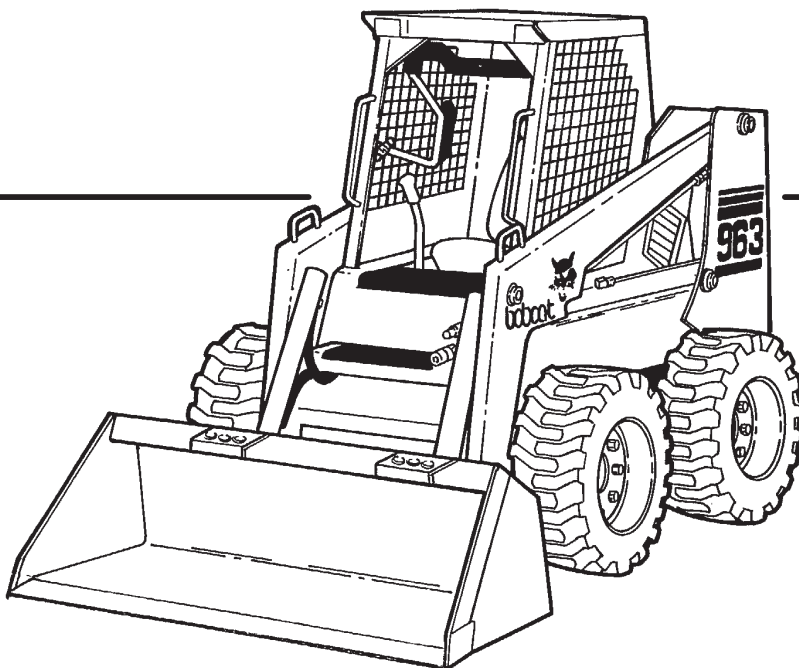

Service Manual



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

**MELROE
INGERSOLL-RAND**

6724545 (6-12)

Printed in U.S.A.



© Melroe Company 1997

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

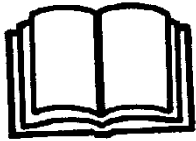

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

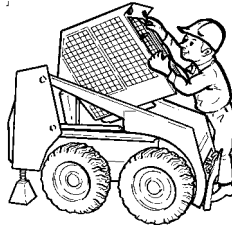

B-12365

Use the correct procedure to lift or lower operator cab.

 
CORRECT

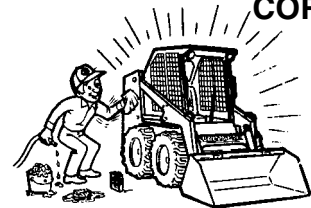

B-7469

Cleaning and maintenance are required daily.

 
WRONG

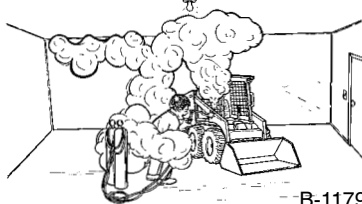

B-11799

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

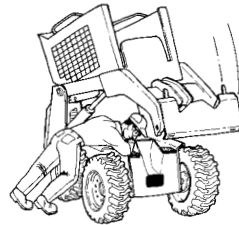

B-15231

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

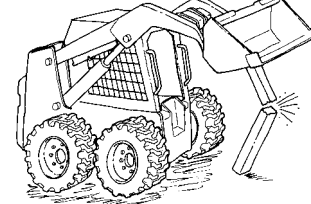

B-15280

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

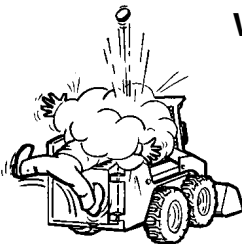

B-6590

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

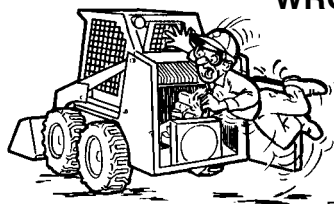

B-6580

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ACTUATORS	10-1	ELECTRICAL/HYDRAULIC CONTROL REF.	8-1
ACTUATOR VOLTAGE TEST	10-1	ELECTRICAL SYSTEM INFORMATION	6-1
A.H.C. COMPONENTS	10-1	ENGINE	7-1
A.H.C./PWM CONTROLLER	10-1	ENGINE BLOCK	7-1
A.H.C. HANDLE	10-1	ENGINE COOLER	7-1
A.H.C. STEERING LEVER	10-1	ENGINE COOLING SYSTEM	1-1
AIR CLEANER HOUSING	7-1	ENGINE LUBRICATION SYSTEM	1-1
AIR CLEANER SERVICE	1-1	ENGINE MUFFLER	7-1
ALTERNATOR	6-1	ENGINE MOUNTING BRACKET	7-1
ALTERNATOR BELT	1-1	ENGINE OIL COOLER	7-1
AXLE SEAL	4-1	ENGINE SPEED CONTROL	7-1
AXLE, BEARINGS AND SPROCKET	4-1	ENGINE SPECIFICATIONS	9-1
		EXHAUST MANIFOLD	7-1
BATTERY	6-1	FAN DRIVE TENSION PULLEY	7-1
BICS™	8-1, 10-1	FAN GEARBOX	1-1 & 7-1
BICS™ SYSTEM CONTROLLER	8-1	FAN GEARBOX/BLOWER HOUSING	7-1
BICS™ VALVE	2-1, 10-1	FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1
BLOWER FAN	7-1	FLYWHEEL	7-1
BOB-TACH	5-1	FRONT CHAINCASE COVER	4-1
BOSS DIAGNOSTIC TOOL	8-1	FRONT FUEL TANK	5-1
BOSS INSTRUMENT PANEL	8-1	FRONT LIGHTS	6-1
BOSS UNIT	8-1	FRONT SIDE PANEL	2-1
BRAKE/TWO SPEED BLOCK	4-1	FUEL INJECTOR NOZZLE	7-1
BUCKET POSITION VALVE	2-1	FUEL INJECTION PUMP	7-1
		FUEL LIFT PUMP	7-1
		FUEL SYSTEM	1-1
CAMSHAFT AND TAPPETS	7-1	HANDLE CONTROL UNIT	10-1
CHAINCASE FLUID	4-1	HANDLE CONTROL UNIT TEST	10-1
COOLANT RECOVERY TANK	7-1	HYDRAULIC CONTROL VALVE	2-1, 10-1
COOLING SYSTEM	7-1	HYDRAULIC CONNECTION SPECIFICATONS	9-1
CONTROL PANEL	3-1	HYDRAULIC CYLINDER	2-1
CONTROL PEDALS	2-1	HYDRAULIC/HYDROSTATIC FILTER	2-1
CONTROL PEDALS MOUNTING PANEL	2-1	HYDRAULIC/HYDROSTATIC FLUID SPEC.	9-1
CRANKSHAFT AND BEARINGS	7-1	HYDRAULIC FLUID RESERVOIR	2-1
CYLINDER HEAD	7-1	HYDRAULIC PUMP	2-1
		HYDRAULIC SYSTEM INFORMATION	2-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	HYDRAULIC/HYDROSTATIC SYSTEM	1-1
DRIVE BELT	3-1	HYDROSTATIC CONTROLLER	3-1
DRIVE BELT IDLER PULLEY	3-1	HYDROSTATIC MOTOR	3-1
DRIVE BELT SHIELD	3-1	HYDROSTATIC MOTOR COVER	3-1
DRIVE BELT TENSIONER PULLEY	3-1	HYDROSTATIC PUMP	3-1
DRIVE CHAINS	4-1	HYDROSTATIC SYSTEM INFORMATION	3-1
		INTAKE MAINIFOLD	7-1
		LIFT ARMS	5-1
		LIFT ARM BY-PASS CONTROL VALVE	2-1
		LIFT ARM SUPPORT DEVICE	1-1
		LIFT CYLINDER(S)	2-1
		LIFTING AND BLOCKING THE LOADER	1-1
		LOADER SPECIFICATIONS	9-1
		LOADER TORQUE	9-1
		LUBRICATING THE LOADER	1-1
		LUBRICATION SYSTEM	7-1
		MAIN RELIEF VALVE	2-1
		MONITOR SERVICE CODES	8-1

A.H.C.—ADVANCED HAND CONTROL SYSTEM
 BICS—BOBCAT INTERLOCK CONTROL SYSTEM
 BOSS—BOBCAT OPERATION SENSING SYSTEM
 PWM—PULSE WITH MODULATION

Cont'd On Next Page

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$