


625S BACKHOE

S/N A6TW00101
& Above



Bobcat®

Service Manual

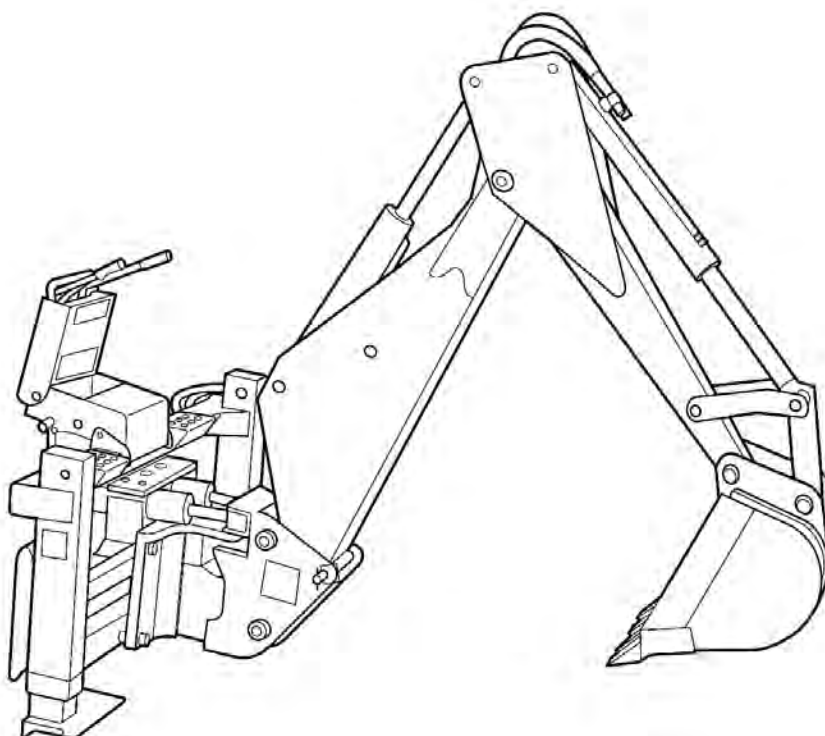

Bobcat

WARNINGS FOR BACKHOE OPERATION

WARNING

Operators must have instructions before running the machine. Untrained operators can cause injury or death.



Safety Alert Symbol. This symbol with a warning statement means: "Warning, be alert! Your safety is involved! Carefully read the message that follows."


Correct



Never use the loader/backhoe without instructions. Read the Operation & Maintenance Manual for the backhoe and the Operator's Handbook for loader. Ask the dealer about equipment for your application.


Correct

Correct

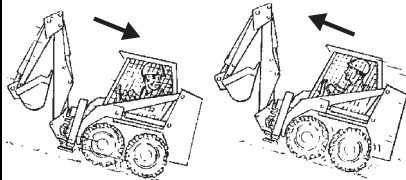

Keep the backhoe low and always drive with the backhoe pointing uphill when moving on slopes.

Correct

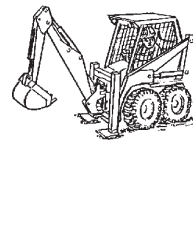

Never permit personnel to stand in the maximum swing reach area while operating the backhoe.



Always swing the backhoe to the uphill side. Use extra care when downhill dumping is necessary.




Keep the machine level when operating the backhoe on slopes.




Always use the backhoe stabilizers.

WRONG

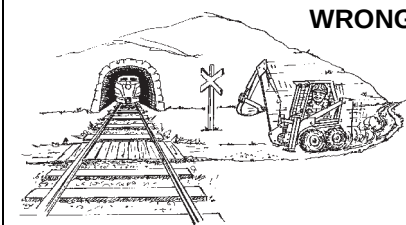


Before going into underpasses or tunnels, check for obstacles.

WRONG

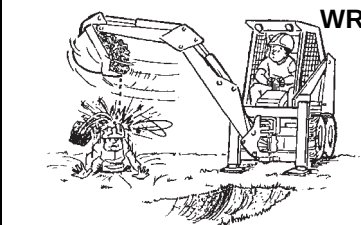


Never swing the bucket over other personnel.

WRONG

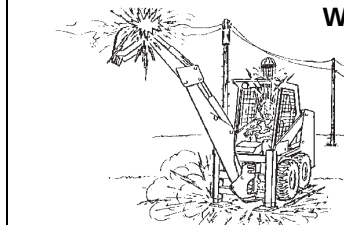


Check for clearance under overhead lines.

WRONG

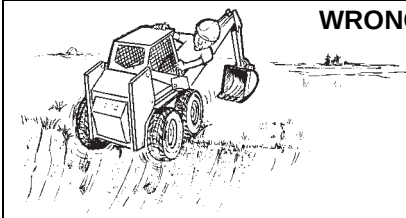


Never operate the machine near an overhang or ditch.

WRONG

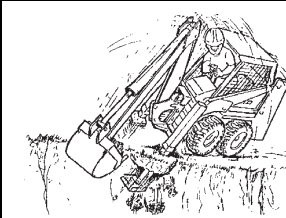


Never dig under the backhoe stabilizers.

WRONG

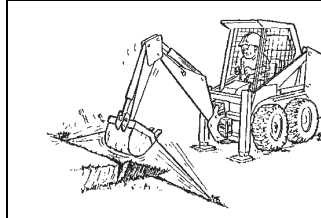

Check the area to be dug for overhead or underground lines such as electrical, gas, oil, water, etc. Use extreme caution in areas where present. Check with local authorities before digging.

WRONG

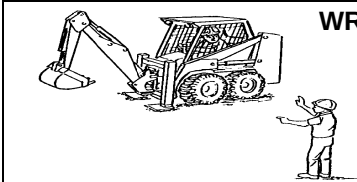

Operate only from the operator seat.



Never use the controls as handholds.




Always lower the backhoe to the ground, stop the loader engine, remove the key and lock the brake before leaving machine.



Leave the backhoe with the controls in neutral position.

WRONG

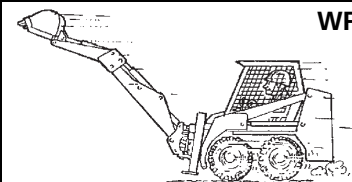

Lock the boom in lowered position for transporting.

Safety equipment

The Bobcat backhoe attachment must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories: (1) CONTROL LOCKOUT SYSTEM, (2) BACKHOE BOOM LOCK PIN (replace if damaged), (3) SAFETY SIGNS (DECALS) (replace if damaged).



Bobcat®

FOREWORD

This manual is for the Bobcat backhoe mechanic. It provides necessary servicing and adjustment procedures for the Bobcat backhoe and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

BACKHOE IDENTIFICATION.....	IV
DELIVERY REPORT	III
SERIAL NUMBER LOCATION.....	III

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$