




Bobcat®

Service Manual

Backhoe

(607 Backhoe) S/N 775002277 & Below
(709 Backhoe) S/N 270007244 & Below
(709FDS Backhoe) S/N 584101443 & Below
(725S Backhoe) S/N 401500101 & Above
(730S Backhoe) S/N 780000101 & Above
(811 Backhoe) S/N 630000101 & Above
(835S Backhoe) S/N 785000101 & Above
(8709 Backhoe) S/N 880000101 & Above
(905B Backhoe) S/N 580000101 & Above
(907 Backhoe) S/N 195600101 & Above

(909 Backhoe) S/N 113800101 & Above
(911 Backhoe) S/N 046100101 & Above
(911B Backhoe) S/N 160800101 & Above
(913 Backhoe) S/N 370000101 & Above
(914B Backhoe) S/N 058900101 & Above
(914B Extendable Backhoe)
(923S Backhoe) S/N 190000101 & Above
(923SA Backhoe) S/N 320000101 & Above
(937S Backhoe) S/N 120000101 & Above

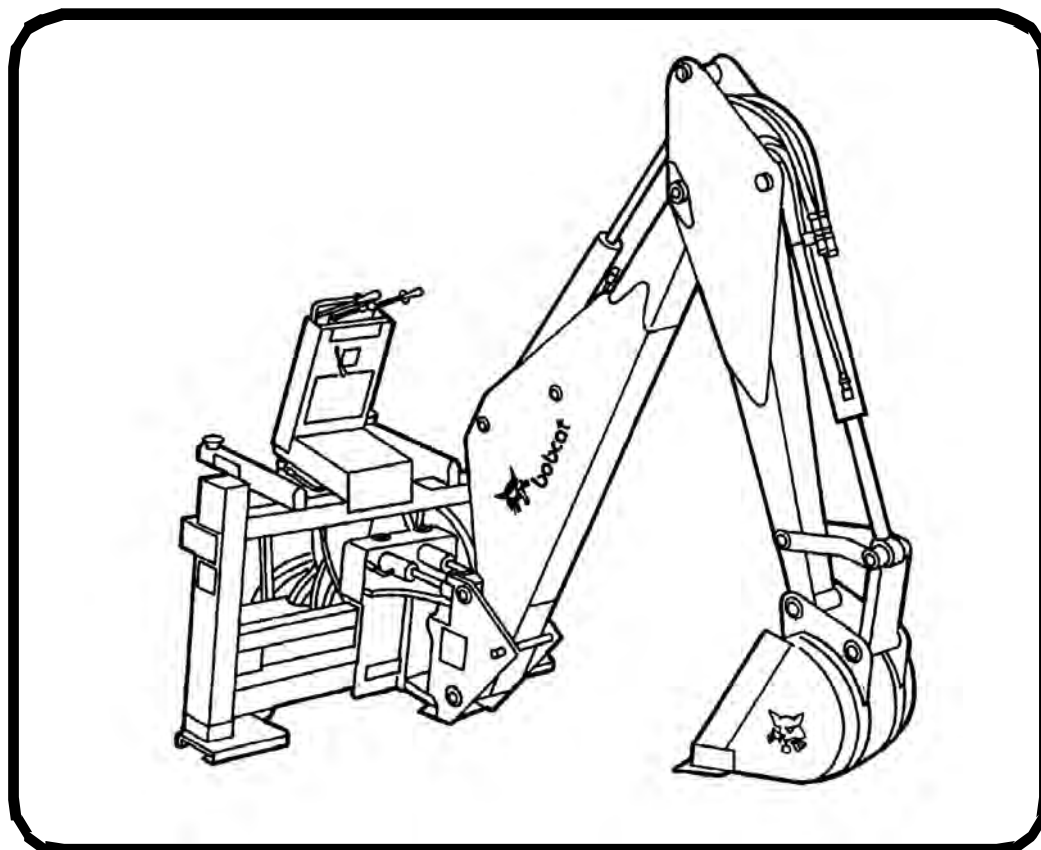

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216

-  Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
-  Always lower the attachment / implement to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.



Bobcat®

CONTENTS

SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
MAINFRAME	30-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$