

R30S BACKHOE

S/N A2HH 00101
& above


R35S BACKHOE

S/N A36S 00101
& above



Bobcat®

Service Manual

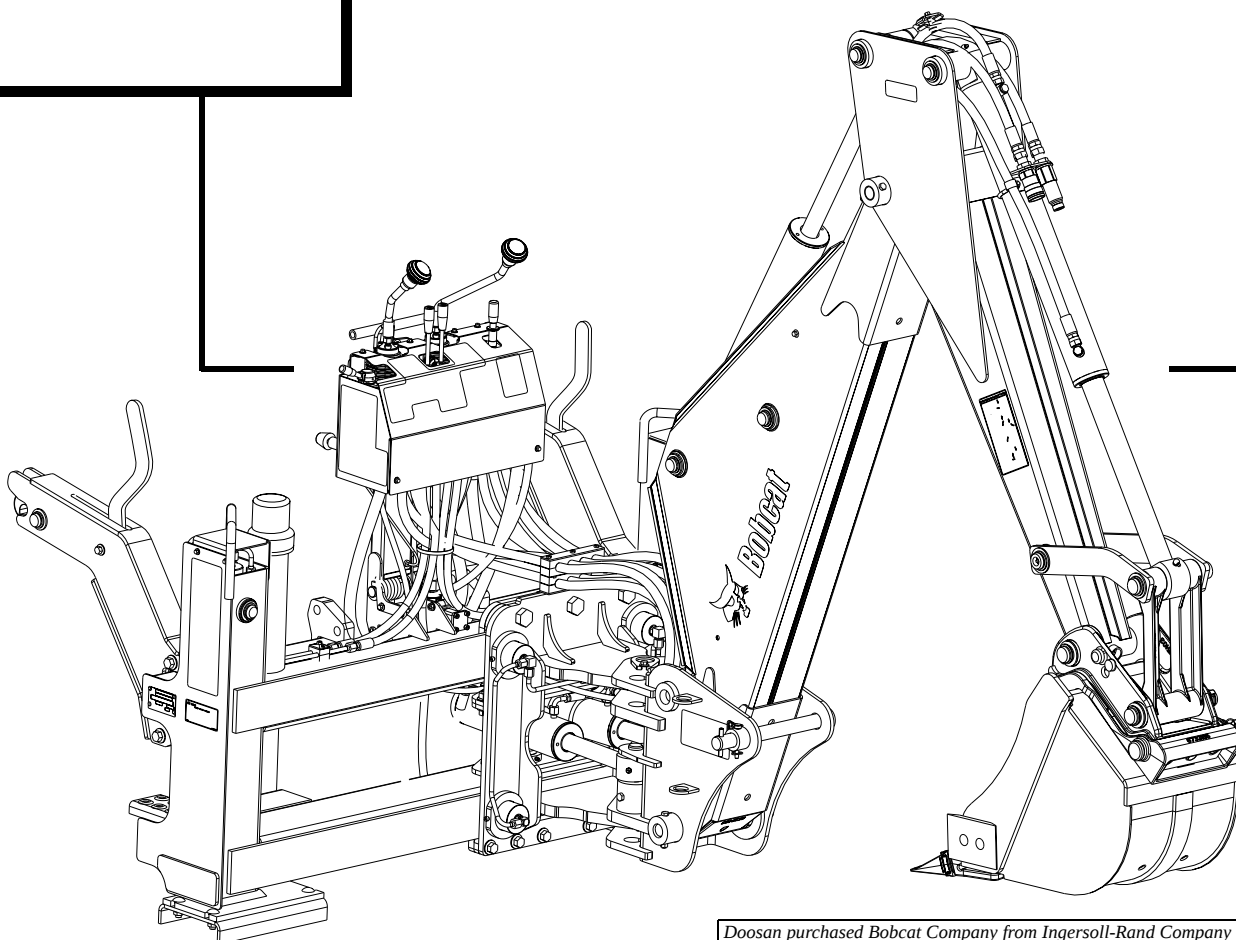

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



OPERATOR SAFETY WARNINGS



WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT




S3979



Never use the loader without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.

CORRECT

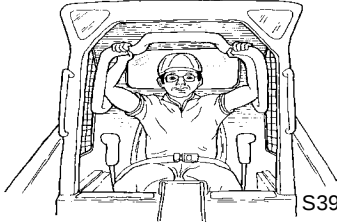

S3970




Always use the seat bar and fasten seat belt snugly.



Always keep feet on the foot pedals or footrests when operating loader.

CORRECT

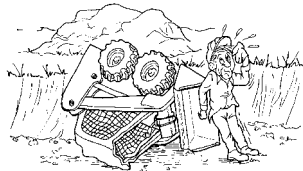


S3971



Never use loader without operator cab with ROPS and FOPS approval. Fasten your seat belt.

WRONG

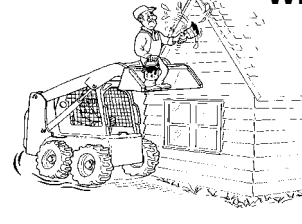

S3972



Never use loader as man lift or elevating device for personnel.

WRONG



S3973



Do not use loader in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.

WRONG



S3974




Never carry riders.



Keep bystanders away from work area.

WRONG

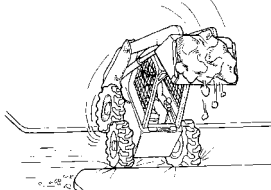

S3975



Always carry bucket or attachments as low as possible.



Do not travel or turn with lift arms up.



Load, unload, and turn on flat level ground.

WRONG



S3976



Never exceed Rated Operating Capacity.

WRONG



S3977




Never leave loader with engine running or with lift arms up.



To park, engage parking brake and put attachment flat on the ground.

WRONG

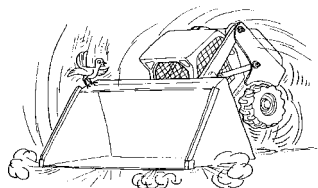

S3978



Never modify equipment.



Use only attachments approved by Bobcat Company for this model loader.

SAFETY EQUIPMENT

The Bobcat Loader must be equipped with safety items necessary for each job. Ask your dealer for information on the safe use of attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. SEAT BAR: When up, it must lock the loader controls.
3. OPERATOR CAB (ROPS and FOPS): It must be on the loader with all fasteners tight.
4. HANDBOOK: Must be in the cab.
5. SAFETY SIGNS (DECALS): Replace if damaged.
6. SAFETY TREADS: Replace if damaged.
7. GRAB HANDLES: Replace if damaged.
8. LIFT ARM SUPPORT DEVICE: Replace if damaged.
9. PARKING BRAKE
10. BOBCAT INTERLOCK CONTROL SYSTEM (BICS)

FOREWORD

DELIVERY REPORT.....	III
IDENTIFICATION	V
SERIAL NUMBER LOCATION	IV



Bobcat®

DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or the operator when the Bobcat backhoe is delivered. An explanation must be given to the owner. Make sure form **[Figure 1]** is filled out completely.

Figure 1

[illegible]

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$