




Bobcat®

Service Manual

CT335 Compact Tractor

HST - S/N ABH811001 & Above
SST - S/N AK9G11001 & Above

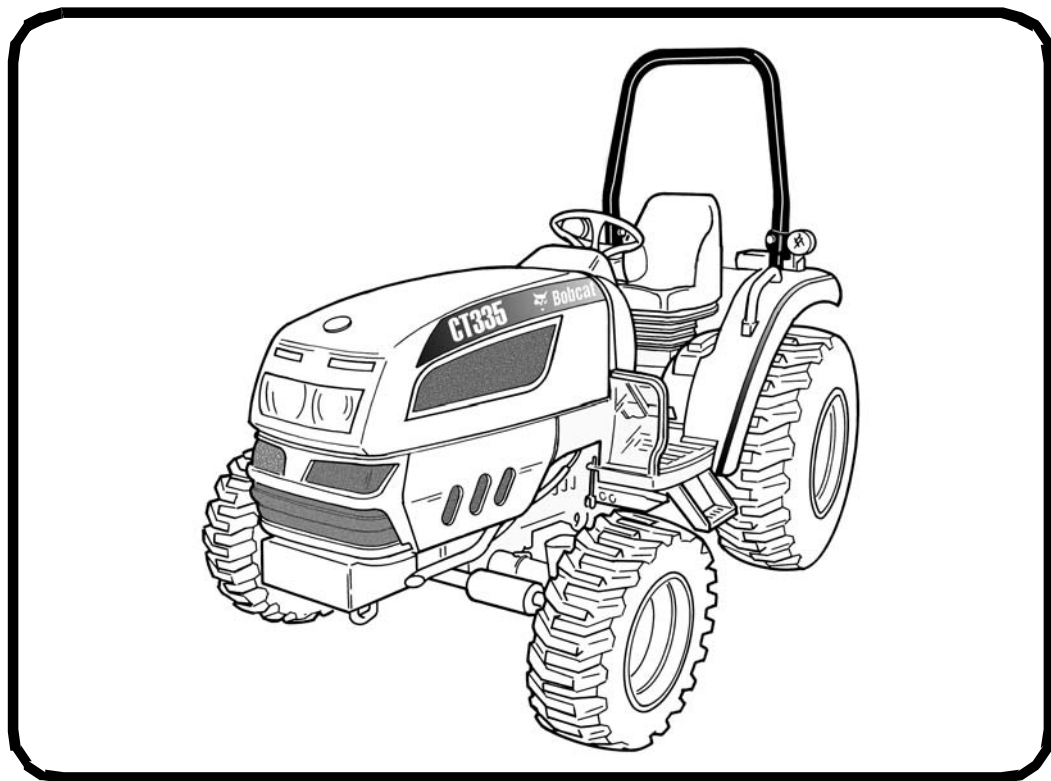

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216

- Never service the machine without instructions.

CORRECT



B-23NEW

- Before exiting machine, engage parking brake. Chock wheels before servicing.

CORRECT



B-23552

- Cleaning and maintenance are required daily.

WRONG



B-23556

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG



B-23525

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause loader arms to drop.
- Lower loader arms, attachments, and implements (if equipped) before servicing.
- DO NOT service the compact tractor or implement with the PTO system engaged.

WRONG

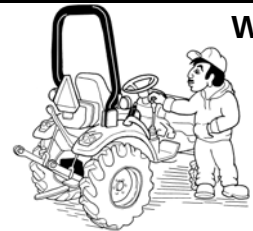

B-23590

- Never start the machine if not properly seated in the operator's seat.
- Never work on the machine with loader arms raised.
- Never modify equipment or add attachments not approved by Bobcat Company.


WRONG



B-23551

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG

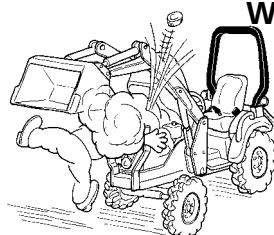

B-23564

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep engine cover and side access panels closed except for service.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	ENGINE SPEED CONTROL PEDAL (SST MODELS)	70-01
AIR CLEANER SERVICE	10-01	EVAPORATOR	80-01
AIR CONDITIONING BELT	10-01	EVAPORATOR / HEATER UNIT	80-01
AIR CONDITIONING SERVICE	80-01	EVAPORATOR / HEATER UNIT COVER	80-01
AIR CONDITIONING SYSTEM FLOW	80-01	EXPANSION VALVE	80-01
ALTERNATOR	60-01		
ALTERNATOR BELT	10-01	FAN	70-01
AUXILIARY CONTROL VALVE	20-01	FENDER (WITH CAB)	50-01
AXLE AND DIFFERENTIAL	40-01	FENDER (WITHOUT CAB)	50-01
AXLE AND DIFFERENTIAL (SST MODELS)	40-01	FENDER ASSEMBLY (WITHOUT CAB) (HST MODELS)	50-01
AXLE CASE	40-01	FENDER ASSEMBLY (WITHOUT CAB) (SST MODELS)	50-01
AXLE TOE IN (HST MODELS)	10-01	FIREWALL (WITH CAB) (HST MODELS)	50-01
AXLE TOE IN (SST MODELS)	10-01	FIREWALL (WITHOUT CAB) (HST MODELS)	50-01
		FIREWALL (SST MODELS)	50-01
BATTERY	60-01	FLOORMAT (HST MODELS)	50-01
BLOWER FAN	80-01	FLOORMAT (SST MODELS)	50-01
BOB-TACH HAND LEVER	10-01	FLOOR PLATE	50-01
BRAKE CASE	40-01	FLYWHEEL AND HOUSING (HST MODELS)	70-01
BRAKE PEDAL ASSEMBLY	40-01	FLYWHEEL AND HOUSING (SST MODELS)	70-01
BRAKE/CLUTCH PEDAL ASSEMBLY (SST MODELS)	40-01	F-N-R LEVER (SST ONLY)	60-01
BRAKE SYSTEM	10-01	FRESH AIR FILTERS (WITH CAB)	10-01
		FRONT AIR DUCT	80-01
CAB (HST MODELS)	50-01	FRONT AXLE	10-01, 40-01
CAB COVER	50-01	FRONT AXLE (SST MODELS)	10-01, 40-01
CAB POST COVER	50-01	FRONT LIGHTS (WITH CAB)	60-01
CAMSHAFT AND TIMING GEARS	70-01	FRONT WORK LIGHT (WITH CAB)	60-01
CLUTCH PEDAL AND HOUSING (SST ONLY)	10-01	FRONT WORK LIGHT MOUNT (WITH CAB)	50-01
CLUTCH PEDAL (SST ONLY)	10-01	FRONT WHEEL DRIVE	20-01
CLUTCH ASSEMBLY (SST MODELS)	70-01	FUEL, COOLANT AND LUBRICANTS (ALL MODELS)	SPEC-01
CLUTCH LEVER (SST MODELS)	70-01	FUEL LEVEL SENDER	60-01
COMPACT TRACTOR STORAGE AND RETURN TO SERVICE	10-01	FUEL SYSTEM	10-01, 70-01
COMPONENTS	80-01	FUEL TANK	50-01
COMPRESSOR	80-01		
CONDENSOR	80-01	GENERAL AIR CONDITIONING SERVICE GUIDELINES	80-01
CONSOLE COVER (WITH CAB)	50-01	GRILL	50-01
CONSOLE COVER (WITHOUT CAB)	50-01		
CONVERSIONS	SPEC-01	HEADLINER	50-01
CRANKSHAFT AND PISTONS	70-01	HEATER COIL	80-01
CRUISE CONTROL (HST ONLY)	60-01	HEATER VALVE	80-01
CYLINDER HEAD	70-01	HOOD LIGHTS	60-01
		HORN	60-01
DIFFERENTIAL LOCK	10-01	HVAC CONTROL PANEL	80-01
DRAW BAR	50-01	HYDRAULIC PUMP	20-01
DRAW BAR ASSEMBLY	50-01	HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
DRIVE SHAFT (EARLY MODELS)	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
DRIVE SHAFT (LATER MODELS)	40-01	HYDRAULIC /HYDROSTATIC/ TRANSMISSION SYSTEM	10-01
		HYDROSTATIC PUMP (HST MODELS)	30-01
ELECTRICAL SYSTEM INFORMATION	60-01		
ENGINE COOLING SYSTEM	10-01, 70-01		
ENGINE COVER	10-01, 50-01		
ENGINE INFORMATION	70-01		
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SIDE COVER	50-01		
ENGINE SPEED CONTROL	70-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$