 


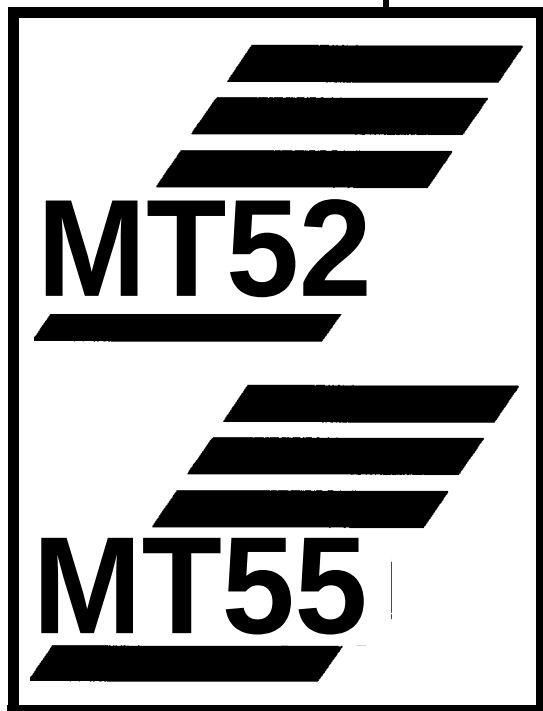

Bobcat®

Service Manual

 
S/N 528711001 & Above

S/N 528811001 & Above

S/N 538711001 & Above

S/N 538811001 & Above

Mini Track Loader

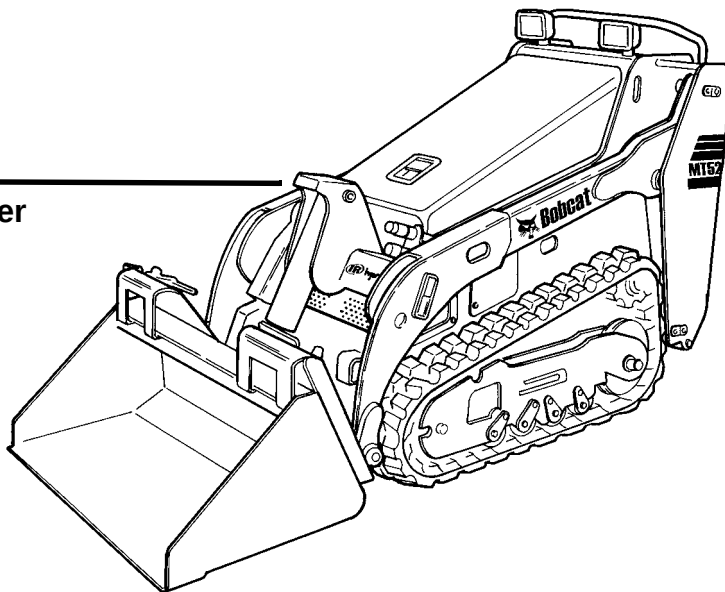

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

MAINTENANCE SAFETY

 


WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

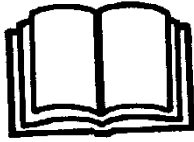

B-10731a

- ⚠ Never service the Bobcat Mini Track Loader without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
WRONG



B-23041

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

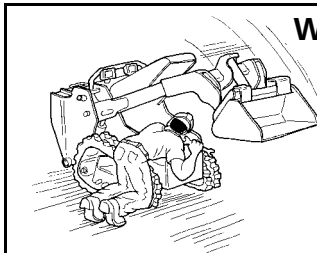

B-23035

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

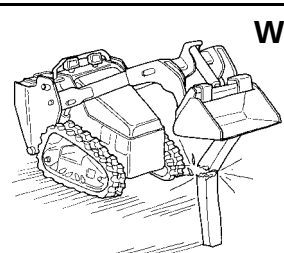

B-23036

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

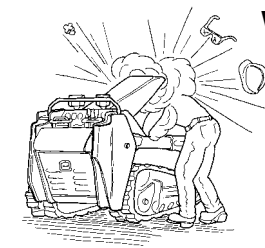

B-23039

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

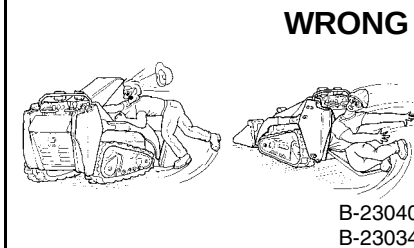

B-23040
B-23034

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDROSTATIC CONTROLS	
AIR CLEANER SERVICE	10-01	(S/N 528712700 & ABOVE,	
ALTERNATOR	60-01	S/N 528811150 & ABOVE,	
		S/N 538712500 & ABOVE)	30-01
BATTERY	60-01	HYDROSTATIC PUMP	30-01
BOB-TACH	10-01, 50-01	HYDROSTATIC SYSTEM INFORMATION	30-01
BOTTOM ACCESS PANEL	50-01		
		INSTRUMENT PANEL	50-01
CONTROLS	10-01		
CONVERSIONS	SPEC-01	LOADER SPECIFICATIONS	SPEC-01
CYLINDER (LIFT)	20-01	LIFT ARM	50-01
CYLINDER (TILT)	20-01	LIFT ARM SUPPORT DEVICE	10-01
		LIFTING AND BLOCKING THE LOADER	10-01
DRIVE BELT	30-01	LUBRICATION OF THE BOBCAT LOADER	10-01
DRIVE COMPONENTS	40-01		
DRIVE MOTOR	30-01	MAIN RELIEF VALVE	20-01
		MUFFLER	70-01
ELECTRICAL ATTACHMENT CONTROL REF.	60-01		
ELECTRICAL SYSTEM	10-01	NEUTRAL START SENSOR	
ELECTRICAL SYSTEM INFORMATION	60-01	(S/N 528711001-528712429,	
ENGINE (S/N 528711001-528712699,		S/N 528811001-528811121,	
S/N 528811001-528811149,		S/N 538711001-528712295)	60-01
S/N 538711001-528712499)	70-01	NEUTRAL START SENSOR	
ENGINE (S/N 528712700 & ABOVE,		(S/N 528712430 & ABOVE,	
S/N 528811150 & ABOVE,		S/N 528811122 & ABOVE,	
S/N 538712500 & ABOVE)	70-01	S/N 538712296 & ABOVE)	60-01
ENGINE COMPONENTS AND TESTING	70-01		
ENGINE COOLING SYSTEM	10-01	PARKING BRAKE	40-01
ENGINE INFORMATION AND TESTING	70-01	PORT RELIEF VALVES	20-01
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS	SPEC-01	RADIATOR	70-01
ENGINE SPEED CONTROL	70-01	RECONDITIONING THE ENGINE	70-01
		REVERSE STOP PANEL	50-01
FLYWHEEL	70-01	RIDE-ON PLATFORM	50-01
FUEL SYSTEM	10-01		
FUEL TANK	50-01	SERVICE SCHEDULE	10-01
		SPARK ARRESTOR MUFFLER	10-01
GRAB BAR	50-01	STARTER	60-01
HOOD	50-01	TAILGATE	50-01
HYDRAULIC CONNECTION SPECS.	SPEC-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
HYDRAULIC CONTROL VALVE	20-01	TOWING THE LOADER	10-01
HYDRAULIC FILTER	20-01	TRANSPORTING THE BOBCAT LOADER	10-01
HYDRAULIC FLUID RESERVOIR	20-01		
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC OIL COOLER	20-01		
HYD. GEAR PUMP MOUNTING BRACKET	70-01		
HYDRAULIC PUMP	20-01		
HYDRAULIC/HYDROSTATIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		
HYDROSTATIC CONTROLS			
(S/N 528711001-528712699,			
S/N 528811001-528811149,			
S/N 538711001-528712499)	30-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$