

T35100

S/N 366611001
& above

T35100L

S/N 366311001
& above

T35100SL

S/N 366211001
& above

T35120L

S/N 362711001 & above
S/N 363711001 & above

 
T35120SL

S/N 362611001 & above
S/N 363811001 & above



Bobcat®

SERVICE MANUAL

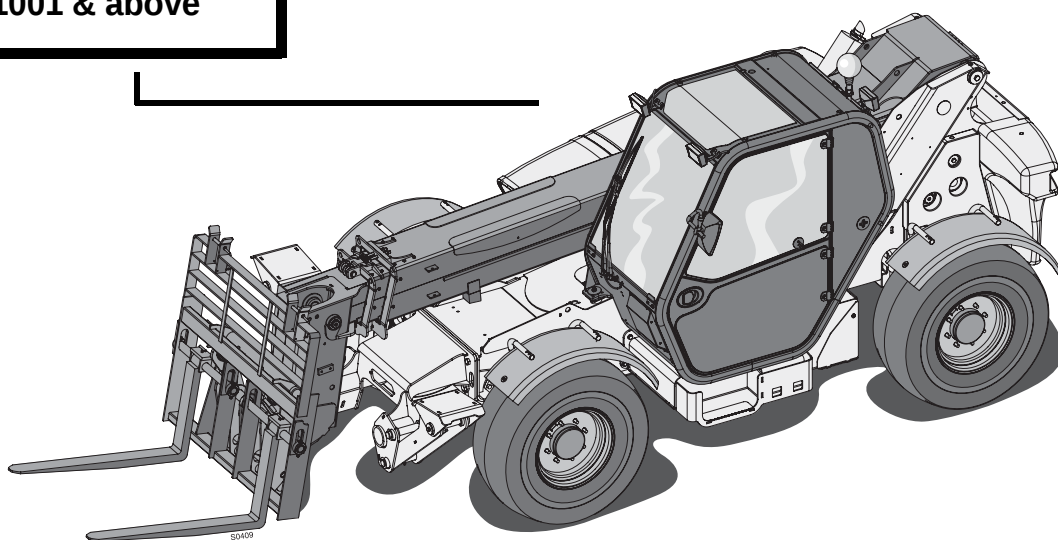

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



Bobcat®

MAINTENANCE SAFETY

 


WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

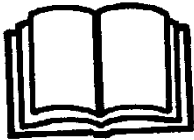


B-10731a

- ⚠ Never service the Bobcat Telescopic Handler without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
CORRECT

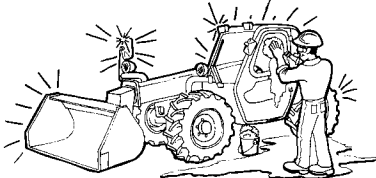

B-16082

- ⚠ Cleaning and maintenance are required daily.

 
WRONG

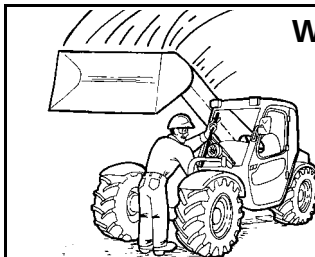

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

 
WRONG

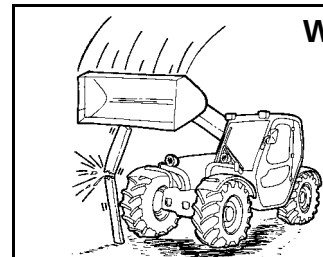

B-16079

- ⚠ Never work on Telescopic Handler with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

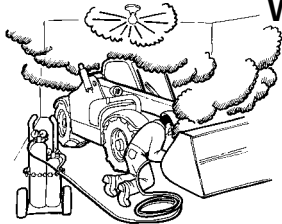

B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 WRONG

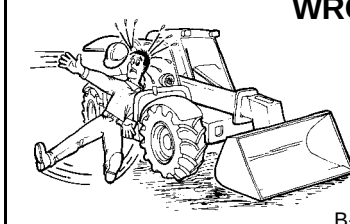

B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

MSW12-0805



ALPHABETICAL INDEX

ACCUMULATOR.....	20-210	ELECTRICAL SYSTEM INFORMATION	60-10
AIR CLEANER	70-40	ENGINE AND ENGINE MOUNTS.....	70-60
AIR CLEANER SERVICE	10-60	ENGINE COMPONENTS AND TESTING.....	70-70
AIR CONDITIONING SERVICE	80-90	ENGINE COOLING SYSTEM.....	10-70
AIR CONDITIONING SYSTEM FLOW	80-10	ENGINE COVER.....	10-160
ALTERNATOR.....	60-30	ENGINE COVER.....	50-70
OPTIONAL APPROVED BOOM STOP	10-150	ENGINE/HYDROSTAT ASSEMBLY	70-80
AXLE AND DIFFERENTIAL (FRONT) (For S/N 362611001 - 362612000, S/N 363811001 - 363812000, S/N 362711001 - 362712000, S/N 363711001 - 363712000)	40-20	ENGINE LUBRICATION SYSTEM.....	10-90
AXLE AND DIFFERENTIAL (FRONT) (For S/N 366211001 and Above, S/N 366311001 and Above, S/N 366611001 and Above, S/N 362612001 and Above, S/N 363812001 and Above, S/N 362712001 and Above, S/N 363712001 and Above)	40-22	ENGINE SPECIFICATIONS.....	SPEC-20
AXLE AND DIFFERENTIAL (REAR) (For S/N 362611001 - 362612000, S/N 363811001 - 363812000, S/N 362711001 - 362712000, S/N 363711001 - 363712000)	40-21	ENGINE SPEED CONTROL.....	70-20
AXLE AND DIFFERENTIAL (REAR) (For S/N 366211001 and Above, S/N 366311001 and Above, S/N 366611001 and Above, S/N 362612001 and Above, S/N 363812001 and Above, S/N 362712001 and Above, S/N 363712001 and Above)	40-23	ENGINE TIMING	70-71
AXLE PIVOT FRAME (Only For S/N 362611001 - 362612000, S/N 362711001 - 362712000).....	40-31	END BOOM.....	50-40
AXLE TOE-IN (For S/N 362611001 - 362612000, S/N 363811001 - 363812000, S/N 362711001 - 362712000, S/N 363711001 - 363712000)	40-40	EVAPORATOR/BLOWER UNIT	80-150
AXLE TOE-IN (For S/N 366211001 and Above, S/N 366311001 and Above, S/N 366611001 and Above, S/N 362612001 and Above, S/N 363812001 and Above, S/N 362712001 and Above, S/N 363712001 and Above)	40-41	EXPANSION VALVE	80-160
AXLES (FRONT AND REAR) (For S/N 362611001 - 362612000, S/N 363811001 - 363812000, S/N 362711001 - 362712000, S/N 363711001 - 363712000) .	10-110	EXTENSION CYLINDER	20-40
AXLES (FRONT AND REAR) (For S/N 366211001 and Above, S/N 366311001 and Above, S/N 366611001 and Above, S/N 362612001 and Above, S/N 363812001 and Above, S/N 362712001 and Above, S/N 363712001 and Above)	10-111		
		FAN MOTOR	20-140
BASIC TROUBLESHOOTING	80-50	FENDER	50-120
BATTERY	60-20	FLOW CONTROL VALVE	20-172
FIXED BOOM.....	50-30	FLYWHEEL AND HOUSING.....	70-90
BOOM TRAY	50-160	FRAME LEVELING CYLINDER	20-100
BRAKE LIGHT SWITCH	60-100	FRONT AXLE (For S/N 362611001 - 362612000, S/N 363811001 - 363812000, S/N 362711001 - 362712000, S/N 363711001 - 363712000).....	40-30
BRAKE VALVE.....	20-120	FRONT AXLE (For S/N 366211001 and Above, S/N 366311001 and Above, S/N 366611001 and Above, S/N 362612001 and Above, S/N 363812001 and Above, S/N 362712001 and Above, S/N 363712001 and Above)	40-32
BUCKET POSITIONING CYLINDER.....	20-30	FRONT WIPER MOTOR.....	60-110
		FUEL SYSTEM	10-80
COMPONENTS	80-20	FUEL TANK.....	50-80
COMPRESSOR	80-110		
CONDENSER	80-120	GEAR PUMP.....	20-130
CONVERSIONS.....	SPEC-70	GENERAL AIR CONDITIONING SERVICE GUIDELINES.....	80-60
CHAIN CHECKING AND ADJUSTING PROCEDURE.....	10-160		
CHAIN CHECKING AND ADJUSTING PROCEDURE.....	50-170	HEATER ASSEMBLY	80-170
DASH COVER/STEERING COLUMN COVER.....	50-130	HYDRAULIC CONNECTION SPECIFICATION.....	SPEC-50
DRIVE BOX (For S/N 362611001 - 362612000, S/N 362711001 - 362712000)	20-70	HYDRAULIC CONTROL VALVE.....	20-170
DRIVE BOX (For S/N 366211001 and Above, S/N 366311001 and Above, S/N 366611001 and Above, S/N 362612001 and Above, S/N 363812001 and Above, S/N 362712001 and Above, S/N 363712001 and Above)	20-71	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATION.....	SPEC-60
DRIVESHAFT	40-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-100
		HYDRAULIC RESERVOIR	20-150
		HYDRAULIC SYSTEM INFORMATION.....	20-10
		HYDROSTATIC DRIVE MOTOR.....	30-30
		HYDROSTATIC PUMP.....	30-40
		HYDROSTATIC SYSTEM INFORMATION	30-10
		INCHING SWITCH.....	60-150
		INSTRUMENT PANEL	60-80
		INTERMEDIATE BOOM.....	50-150

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$