

**T40140**

**S/N 363212001  
& above**

 
**T40170**

**S/N 363312001  
& above**




**Bobcat®**

# **SERVICE MANUAL**

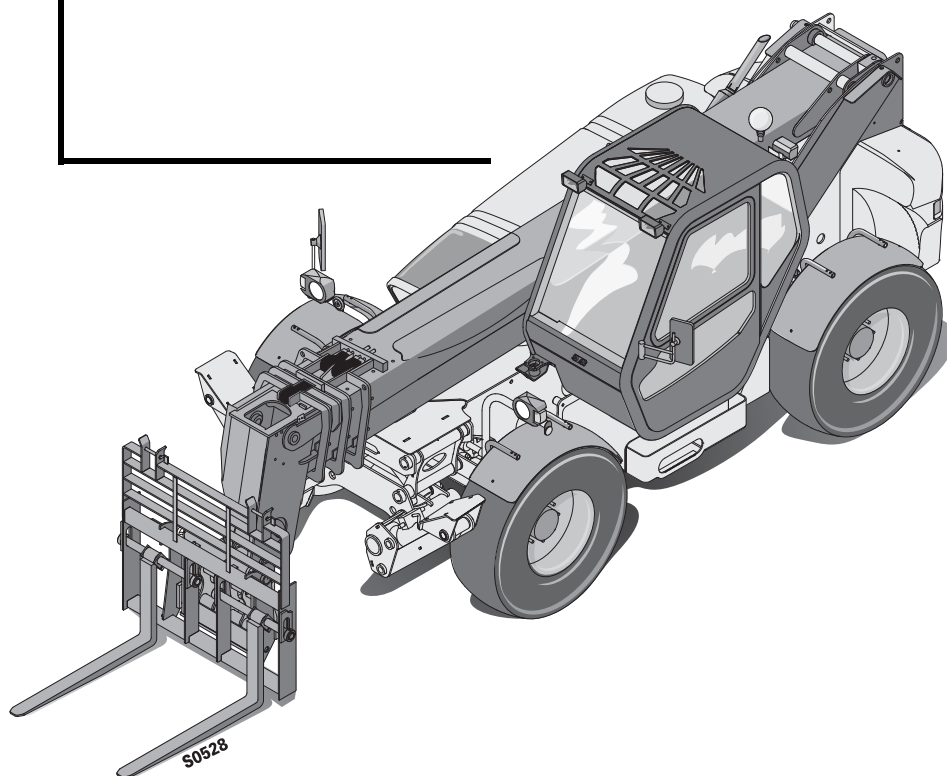




**Bobcat®**



# WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

 
W-2003-0903

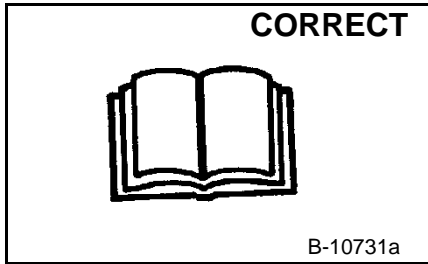


**⚠** Never service the Bobcat Telescopic Handler without instructions.



 
**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

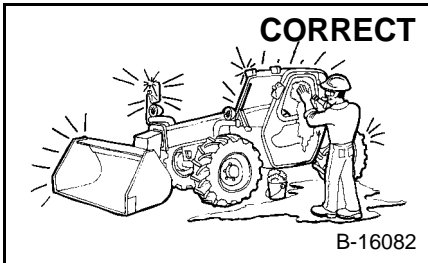

 
**⚠** Cleaning and maintenance are required daily.

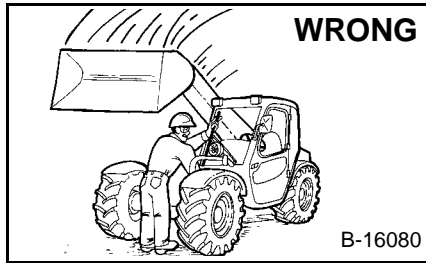

 
**⚠** Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

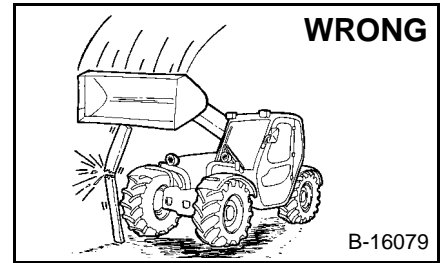

 
**⚠** Never work on Telescopic Handler with boom up unless boom is held by an approved boom stop. Replace if damaged.  
**⚠** Never modify equipment or add attachments not approved by Bobcat Company.

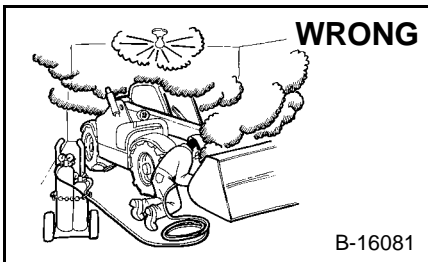

 **⚠** Have good ventilation when welding or grinding painted parts.  
**⚠** Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.  
**⚠** Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

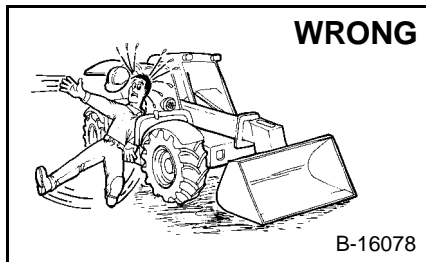

 **⚠** Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.  
**⚠** Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

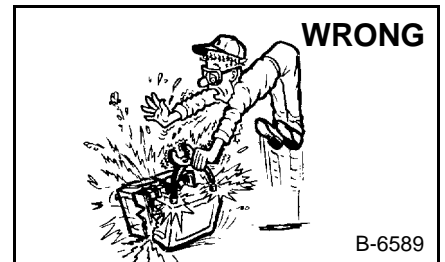

**⚠** Lead-acid batteries produce flammable and explosive gases.  
**⚠** Keep arcs, sparks, flames and lighted tobacco away from batteries.  
**⚠** Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner / operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW12-0805



**Bobcat®**

## ALPHABETICAL INDEX

|  |         |  |         |
|--|---------|--|---------|
| ACCUMULATOR .....                      | 20-210  | FUEL SYSTEM .....                                  | 10-80   |
| AIR CLEANER .....                      | 70-40   | FUEL TANK .....                                    | 50-80   |
| AIR CLEANER SERVICE .....              | 10-60   |  |         |
| AIR CONDITIONING SERVICE .....         | 80-90   | GEAR PUMP .....                                    | 20-130  |
| AIR CONDITIONING SYSTEM FLOW .....     | 80-10   | GENERAL AIR CONDITIONING SERVICE GUIDELINES        | 80-60   |
| AIR INTAKE COWLING .....               | 50-170  |  |         |
| ALTERNATOR .....                       | 60-30   | HEATER ASSEMBLY .....                              | 80-170  |
| APPROVED BOOM STOP .....               | 10-150  | HYDRAULIC CONNECTION SPECIFICATIONSSPEC            | 50      |
| AXLE AND DIFFERENTIAL (FRONT) .....    | 40-20   | HYDRAULIC CONTROL VALVE .....                      | 20-170  |
| AXLE AND DIFFERENTIAL (REAR) .....     | 40-21   | HYDRAULIC / HYDROSTATIC FLUID SPECIFICATIONS ..... | SPEC-60 |
| AXLE TOE-IN .....                      | 40-40   | HYDRAULIC / HYDROSTATIC SYSTEM .....               | 10-100  |
| AXLES (FRONT AND REAR) .....           | 10-110  | HYDRAULIC RESERVOIR .....                          | 20-150  |
|  |         | HYDRAULIC SYSTEM INFORMATION .....                 | 20-10   |
| BASIC TROUBLESHOOTING .....            | 80-50   | HYDROSTATIC DRIVE MOTOR .....                      | 30-30   |
| BATTERY .....                          | 60-20   | HYDROSTATIC PUMP .....                             | 30-40   |
| BOOM ASSEMBLY .....                    | 50-30   | HYDROSTATIC SYSTEM INFORMATION .....               | 30-10   |
| BOOM TRAY .....                        | 50-160  |  |         |
| BRAKE LIGHT SWITCH .....               | 60-100  | INCHING SWITCH .....                               | 60-170  |
| BRAKE VALVE .....                      | 20-120  | INSTRUMENT PANEL .....                             | 60-80   |
| BUCKET POSITIONING CYLINDER .....      | 20-30   | INTERMEDIATE BOOM .....                            | 50-160  |
|  |         | JOYSTICK .....                                     | 60-170  |
| COMPONENTS .....                       | 80-20   | JOYSTICK PANEL .....                               | 50-160  |
| COMPRESSOR .....                       | 80-110  |  |         |
| CONDENSER .....                        | 80-120  | LIFT CYLINDER .....                                | 20-20   |
| CONVERSIONS .....                      | SPEC-70 | LIFTING AND BLOCKING THE TELESCOPIC HANDLER .....  | 10-10   |
|  |         | LIGHTS .....                                       | 60-60   |
| DASH COVER / STEERING COLUMN COVER ... | 50-130  | LUBRICATION .....                                  | 10-120  |
| DRIVE BOX .....                        | 20-70   |  |         |
| DRIVESHAFT .....                       | 40-70   | MACHINE TORQUE SPECIFICATIONS .....                | SPEC-30 |
|  |         | MAIN RELIEF VALVE .....                            | 20-80   |
| ELECTRICAL SYSTEM INFORMATION .....    | 60-10   | MUFFLER .....                                      | 70-30   |
| ENGINE AND ENGINE MOUNTS .....         | 70-60   |  |         |
| ENGINE COMPONENTS AND TESTING .....    | 70-70   | OIL COOLER .....                                   | 30-20   |
| ENGINE COOLING SYSTEM .....            | 10-70   | OIL COOLER / RADIATOR .....                        | 70-50   |
| ENGINE COVER .....                     | 10-160  | OPERATOR CAB .....                                 | 10-20   |
| ENGINE COVER .....                     | 50-170  | OPERATOR CAB .....                                 | 50-10   |
| ENGINE / HYDROSTAT ASSEMBLY .....      | 70-80   | OPERATOR SEAT .....                                | 50-20   |
| ENGINE LUBRICATION SYSTEM .....        | 10-90   |  |         |
| ENGINE SPECIFICATIONS .....            | SPEC-20 | PARKING BRAKE .....                                | 20-190  |
| ENGINE SPEED CONTROL .....             | 70-20   | PARKING BRAKE .....                                | 40-50   |
| ENGINE TIMING .....                    | 70-71   | PEDAL ASSEMBLY .....                               | 60-140  |
| END BOOM .....                         | 50-40   | PORT RELIEF VALVES .....                           | 20-171  |
| EVAPORATOR / BLOWER UNIT .....         | 80-150  | PRESSURE REDUCING VALVE .....                      | 20-200  |
| EXPANSION VALVE .....                  | 80-160  | PRESSURE SWITCH .....                              | 80-140  |
| EXTENSION CYLINDER .....               | 20-40   |  |         |
|  |         | FAN MOTOR .....                                    | 20-140  |
| FAN MOTOR .....                        | 20-140  | FENDER .....                                       | 50-110  |
| FENDER .....                           | 50-110  | FLOW CONTROL VALVE .....                           | 20-172  |
| FLOW CONTROL VALVE .....               | 20-172  | FLYWHEEL AND HOUSING .....                         | 70-90   |
| FLYWHEEL AND HOUSING .....             | 70-90   | FRAME LEVELING CYLINDER .....                      | 20-100  |
| FRAME LEVELING CYLINDER .....          | 20-100  | FRAME LEVEL SPEED SWITCH .....                     | 60-170  |
| FRAME LEVEL SPEED SWITCH .....         | 60-170  | FRONT AXLE .....                                   | 40-30   |
| FRONT AXLE .....                       | 40-30   | FRONT WEIGHT .....                                 | 50-120  |
| FRONT WEIGHT .....                     | 50-120  | FRONT WIPER MOTOR .....                            | 60-110  |
| FRONT WIPER MOTOR .....                | 60-110  |  |         |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$