

Shop Manual

HYDRAULIC
EXCAVATOR

PC360LC-10

SERIAL NUMBERS 70001 and up

KOMATSU

HYDRAULIC EXCAVATOR

PC360LC-10

Model Serial Number

PC360LC-10 70001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts	00-26
Handling of hydraulic equipment	00-27
Method of disconnecting and connecting of push-pull type coupler	00-29
Handling of electrical equipment	00-32
How to read electric wire code	00-40
Precautions when performing operation	00-43
Practical use of KOMTRAX	00-48
Standard tightening torque table	00-49
List of abbreviation	00-55
Conversion table	00-60
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-10
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
KVG T	10-5
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-16
EGR cooler	10-18
KCCV layout drawing	10-19
KCCV ventilator	10-22
KDPF	10-24
Cooling system	10-28
Power train	10-30
Power train	10-30
Swing circle	10-31
Swing machinery	10-32
Final drive	10-34
Undercarriage and frame	10-36
Track frame and idler cushion	10-36
Hydraulic system	10-38
Hydraulic component layout	10-38
Valve control	10-40
Hydraulic tank	10-42
CLSS	10-44
Main pump	10-49
Control valve	10-74
Swing motor	10-130
Travel motor	10-141
PPC valve	10-156
Solenoid valve	10-177
Attachment circuit selector valve	10-181

Center swivel joint	10-184
Accumulator	10-186
Work equipment	10-187
Work equipment.....	10-187
Cab and its attachments	10-190
Cab mount and cab tipping stopper	10-190
ROPS cab	10-191
Electrical system	10-192
Electrical control system	10-192
Machine monitor system.....	10-240
KOMTRAX system.....	10-259
Sensor	10-262
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine related parts	20-3
Standard value table for machine	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-7
Engine and cooling system	30-9
Testing engine speed	30-9
Testing boost pressure	30-10
Testing exhaust gas color	30-13
Testing and adjusting valve clearance	30-15
Testing compression pressure.....	30-19
Testing blowby pressure	30-27
Testing engine oil pressure	30-29
Testing EGR valve and KVGTOil pressures	30-30
Testing fuel pressure	30-31
Testing fuel discharge, return and leakage.....	30-38
Bleeding air from fuel system	30-44
Testing fuel circuit for leakage	30-45
Handling cylinder cutout mode operation.....	30-46
Handling no-injection cranking operation.....	30-47
Checking and adjusting air conditioner compressor belt tension	30-48
Replacing fan belt	30-49
Replacing alternator belt.....	30-50
Power train.....	30-51
Testing swing circle bearing clearance	30-51
Undercarriage and frame.....	30-52
Testing and adjusting track tension	30-52
Hydraulic system	30-53
Releasing remaining pressure from hydraulic circuit.....	30-53
Testing and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-54
Testing oil pressure of control circuit	30-60
Testing and adjusting oil pressure in pump PC control circuit.....	30-62
Testing and adjusting oil pressure in pump LS control circuit	30-67
Testing outlet pressure of solenoid valve	30-76
Testing PPC valve output pressure	30-80
Adjusting play of work equipment and swing PPC valves.....	30-82
Testing pump swash plate sensor	30-83
Isolating the parts causing hydraulic drift in work equipment.....	30-84
Testing oil leakage	30-86
Bleeding air from hydraulic circuit	30-88
Cab and its attachments.....	30-91
Checking cab tipping stopper	30-91

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$