

Shop Manual

ENGINE

1 2 V 1 4 0 E - 3 S E R I E S

KOMATSU

ENGINE

12V140E-3 Series

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00291-04
00 Index and foreword	SEN00292-04
Index	SEN00294-04 ●
Foreword and general information	SEN00296-02 ●
01 Specification	SEN00301-02
Specification and technical data	SEN00303-02 ●
10 Structure, function and maintenance standard	SEN00304-02
Structure, function and maintenance standard, Part 1	SEN00307-02 ●
Structure, function and maintenance standard, Part 2	SEN00309-02 ●
20 Standard value table	SEN00310-03
Standard service value table	SEN00311-03 ●
30 Testing and adjusting	SEN00312-00
Testing and adjusting	SEN00313-00
40 Troubleshooting	SEN00314-00
General information on troubleshooting	SEN00315-00
Troubleshooting of mechanical system (S-mode)	SEN00316-00
Troubleshooting of electrical system (E-mode), Part 1	SEN00317-00
Troubleshooting of electrical system (E-mode), Part 2	SEN00318-00
50 Disassembly and assembly	SEN00319-00
General information on disassembly and assembly	SEN00320-00
Disassembly and assembly, Part 1	SEN00321-00
Disassembly and assembly, Part 2	SEN00322-00
Disassembly and assembly, Part 3	SEN00876-00

Table of contents

00 Index and foreword

Index	SEN00294-04
Composition of shop manual	2
Table of contents	3
Foreword and general information	SEN00296-02
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

01 Specification

Specification and technical data	SEN00303-02
Outline	2
Specifications	4
General view	10
Weight table	19
Engine performance curves	20

10 Structure, function and maintenance standard

Structure, function and maintenance standard, Part 1	SEN00307-02
Air intake and exhaust system	3
Air intake and exhaust unit	3
Air cleaner	4
Turbocharger	6
Aftercooler	11
Muffler	12
Engine unit	14
Cylinder head	14
Cylinder block	18
Cylinder liner	22
Main moving parts	24
Crankshaft	26
Camshaft	28
Cam follower, push rod	29
Piston, piston ring, and piston pin	30
Connecting rod	32
Flywheel and flywheel housing	34
Vibration damper	35
Timing gear	36
Valve system	38
Valve and valve guide	40
Rocker arm and shaft	42
Crosshead and guide	43
Structure, function and maintenance standard, Part 2	SEN00309-02
Lubrication system	4
Lubrication system diagram	4

Oil pump	6
Oil cooler.....	7
Oil filter.....	8
Main relief valve.....	9
Oil cooler bypass valve and regulator valve	10
Fuel system	12
CRI system diagram	12
Outline of CRI system.....	14
Fuel piping	32
Fuel filter	37
Priming pump.....	39
Cooling system.....	40
Cooling system diagram	40
Water pump	42
Thermostat.....	44
Corrosion resistor	45
Cooling fan drive.....	47
Electrical equipment.....	50
Alternator	50
Starting motor	52
Starting aid.....	54
Engine controller.....	55
20 Standard value table	
Standard service value table	SEN00311-03
Standard service value table	2
Standard service value table for testing, adjusting, and troubleshooting	2
Running-in standard and performance test standard	7
30 Testing and adjusting	
Testing and adjusting	SEN00313-00
Testing and adjusting.....	3
Testing and adjusting tools list.....	3
Testing air boost pressure.....	5
Testing exhaust temperature	6
Adjusting valve clearance	7
Testing compression pressure	9
Testing blow-by pressure	11
Measuring blow-by pressure.....	12
Testing oil pressure.....	13
Handling fuel system parts	14
Releasing residual pressure in fuel system	14
Testing fuel pressure.....	15
Reduced cylinder mode operation	16
No-injection cranking	16
Testing leakage-from pressure limiter and return rate from injector	17
Bleeding air from fuel circuit (for D475A-5).....	20
Bleeding air from fuel circuit (for PC2000).....	23
Testing fuel system for leakage	25
Adjusting speed sensor	26
Testing and adjusting alternator belt tension	26
Handling controller high-voltage circuit.....	27
40 Troubleshooting	
General information on troubleshooting	SEN00315-00
General information on troubleshooting	2
Points to remember when troubleshooting	2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$