

Service Manual

6D16 Diesel Engine

DP80

DP90

DP100

DP115

DP135

DP150

6D16

diesel engine

Shop Manual

FOREWORD

This Shop Manual is published for the information and guidance of personnel responsible for maintenance of 6D16 diesel engine, and includes procedures for adjustment and maintenance services.

We earnestly look forward to seeing that this manual is made full use of in order to perform correct service with no wastage.

For more details, please consult your nearest authorized Caterpillar® dealer or distributor.

Kindly note that the specifications and maintenance service figures are subject to change without prior notice in line with improvement which will be effected from time to time in the future.

GROUP INDEX

HOW TO READ THIS MANUAL

GENERAL	00
ENGINE.....	11
LUBRICATION	12
FUEL AND ENGINE CONTROL	13
COOLING.....	14
INTAKE AND EXHAUST	15
ELECTRICAL SYSTEM	54
SPECIAL EQUIPMENT	61

HOW TO READ THIS MANUAL

HOW THIS MANUAL IS COMPILED	ii
GENERAL EXPLANATION OF THIS MANUAL	iii
TERMS AND UNITS	vii

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$