

SERVICE MANUAL

AX20 SERIES FORKLIFT TRUCKS

Federal Environmental Protection Agency (EPA) Emission-Control Compliant
S/N 670001A~

FG15/18ST(LS)-17

FG15HC-17

FG15/18HT(LS)-17

AX20



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.

ISSUED: DECEMBER 2007

KOMATSU
Komatsu Forklift USA, Inc.

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift USA, Inc., nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

Requests for information, comments and other inquiries should be sent to:

Komatsu Forklift USA, Inc.
14481 Lochridge Blvd., Bldg. #2
Covington, Georgia 30014-4908

Voice phone: (770) 385-4815
Fax phone: (770) 385-4838

© Copyright 2006, Komatsu Forklift USA, Inc. All rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift USA, Inc.

CONTENTS

	Page No.
INTRODUCTION	7
APPLICABLE AX20 “EPA” LIFT TRUCK MODELS	9
FEDERAL EPA EMISSION CONTROL STATEMENTS	11
1. SAFETY	
1.1 SAFETY MANAGEMENT	1-2
1.2 SAFE TRAVEL	1-7
1.3 LOADING OPERATIONS	1-15
1.4 STOPPING AND PARKING	1-21
1.5 INSPECTION AND MAINTENANCE	1-22
1.6 STRUCTURE AND STABILITY OF THE LIFT TRUCK	1-29
2. GENERAL INFORMATION AND SPECIFICATIONS	
2.1 SPECIFICATIONS - MAST DATA & FEATURES - INDOOR & OUTDOOR TRUCKS ...	2-2
2.2 TRUCK DATA - PNEUMATIC TIRE LIFT TRUCKS (OUTDOOR)	2-4
2.3 TRUCK DATA - CUSHION TIRE LIFT TRUCKS	2-6
2.4 PERIODIC REPLACEMENT OF CONSUMABLE PARTS	2-8
2.5 STANDARD TIGHTENING TORQUE FOR PIPE JOINTS	2-9
2.6 STANDARD TIGHTENING TORQUE FOR BOLTS	2-10
3. SERVICE DATA	
3.1 GASOLINE ENGINE TRUCKS - PNEUMATIC	3-2
3.2 GASOLINE ENGINE LIFT TRUCKS - CUSHION	3-4
4. TESTING, ADJUSTING AND MEASURING	
4.1 ADJUST IGNITION TIMING	4-2
4.2 ADJUST SPARK PLUG GAP	4-3
4.3 ADJUST VALVE CLEARANCE	4-3
4.4 ADJUST FAN BELT TENSION	4-4
4.5 MEASURE ENGINE CYLINDER COMPRESSION	4-4
4.6 ADJUST THE PARKING BRAKE LEVER	4-5
4.7 MEASURE HYDRAULIC DRIFT ON LIFT & TILT CYLINDERS	4-5
4.8 ADJUST THE ACCELERATOR PEDAL	4-6
4.9 THROTTLE POSITION SENSOR SYSTEM	4-7
4.10 ACCELERATOR PEDAL POSITION SENSOR	4-8
4.11 CHECK BRAKE FLUID	4-9
4.12 MEASURE BRAKE STOPPING DISTANCE (BRAKING EFFECT)	4-10
4.13 ADJUST THE STOP LAMP SWITCH	4-10
4.14 ADJUST THE INCHING/BRAKE PEDAL (TORQFLOW TRUCKS)	4-10
4.14.1 Brake Pedal	4-10
4.14.2 Inching Pedal	4-10
4.14.3 Inching Pedal/Brake Pedal Interconnected Travel	4-11
4.15 CHECK TORQFLOW CLUTCH ACTUATION PRESSURE	4-13
4.16 CHECK TORQUE CONVERTER STALL SPEED	4-13
4.17 TESTING SPECIFIC GRAVITY OF BATTERY ELECTROLYTE	4-14
4.18 CHECK TIRES AND ADJUST PNEUMATIC TIRE PRESSURE	4-15
4.19 MEASURING MINIMUM LEFT AND RIGHT TURNING RADIUS	4-15
4.20 MEASURE HYDRAULIC CONTROL VALVE RELIEF PRESSURE	4-16
5. INSPECTION	
5.1 INSPECT ENGINE STARTING OPERATION	5-2
5.2 INSPECT ENGINE RUNNING CONDITION	5-2

5.3	INSPECT AIR CLEANER ASSEMBLY	5-2
5.3.1	Cleaning the Filter Element	5-2
5.4	INSPECT FOR LOOSE CYLINDER HEAD MOUNTING BOLTS & RE-TORQUE	5-3
5.5	INSPECT ENGINE MOUNTS	5-3
5.6	INSPECT THE ENGINE LUBRICATING SYSTEM	5-3
5.7	INSPECT ENGINE FUEL SYSTEM.	5-3
5.8	INSPECT LPG VAPORIZER FOR TAR BUILDUP (EVERY MONTH)	5-4
5.9	INSPECT THE BLOW-BY GAS RECIRCULATION SYSTEM.	5-4
5.10	INSPECT COOLING SYSTEM AND RADIATOR	5-5
5.11	INSPECT CHARGING SYSTEM WIRING	5-5
5.12	INSPECT LPG VAPORIZER FOR TAR BUILDUP (EVERY MONTH)	5-5
5.13	INSPECT THE BLOW-BY GAS RECIRCULATION SYSTEM.	5-6
5.14	INSPECT COOLING SYSTEM AND RADIATOR	5-7
5.15	INSPECT CHARGING SYSTEM WIRING	5-7
5.16	INSPECT STEERING	5-8
5.17	INSPECT STEERING WHEEL	5-8
5.18	INSPECT THE POWER STEERING SYSTEM	5-8
5.18.1	Power Steering Oil Pressure	5-8
5.19	INSPECT BRAKE SYSTEM RODS, CABLES AND LINKS	5-8
5.20	INSPECT BRAKE PIPING AND CONNECTIONS	5-9
5.21	INSPECT BRAKE MASTER AND WHEEL CYLINDERS	5-10
5.22	INSPECT BRAKE SHOES AND ASSOCIATED PARTS	5-10
5.23	INSPECT BRAKE DRUMS	5-10
5.24	INSPECT BRAKE BACKING PLATES	5-11
5.25	INSPECT LOAD FORKS	5-11
5.26	INSPECT MAST.	5-11
5.27	INSPECT FORK CARRIAGE.	5-12
5.28	INSPECT LIFT CHAINS.	5-12
5.29	INSPECT CHAIN WHEELS	5-13
5.30	INSPECT ATTACHMENTS	5-13
5.31	INSPECT HYDRAULIC TANK	5-13
5.32	INSPECT CHASSIS AND ATTACHMENT PIPING	5-13
5.33	INSPECT HYDRAULIC PUMP	5-13
5.34	INSPECT LIFT CYLINDER	5-13
5.35	INSPECT TILT CYLINDERS	5-13
5.36	INSPECT ATTACHMENT CYLINDERS (IF EQUIPPED)	5-14
5.37	INSPECT LIFT TRUCK CHASSIS AND FRAME.	5-14
5.38	INSPECT CAB (IF EQUIPPED).	5-14
5.39	INSPECT THE OPERATOR'S SEAT.	5-14
5.39.1	Vehicle Controller	5-14
5.39.2	Tusk Operator Present System TOPS).	5-14
5.39.3	Controller Troubleshooting	5-16
5.40	INSPECT EQUIPMENT USED FOR ACCESSING THE LIFT TRUCK	5-18
5.41	INSPECT DISPLAY PANEL.	5-18
5.42	INSPECT OVERHEAD GUARD	5-18
5.43	INSPECT LIGHTS, GAUGES AND WARNING DEVICES	5-18
5.44	INSPECT REAR VIEW MIRROR AND REFLECTORS.	5-18
6.	MAINTENANCE OPERATIONS	
6.1	LUBRICANT LIST	6-2
6.2	CHANGE ENGINE OIL AND FILTER - GASOLINE/LP ENGINES	6-4
6.3	DIFFERENTIAL CASE.	6-5
6.3.1	Checking Differential Oil Level	6-5
6.3.2	Changing Differential Oil	6-5
6.4	TORQFLOW TRANSMISSION CASE	6-5

6.4.1	Checking TORQFLOW Transmission Fluid Level.	6-6
6.4.2	Changing TORQFLOW Transmission Fluid and Cleaning the Strainer	6-6
6.5	CHANGE OIL IN HYDRAULIC TANK	6-7
6.6	REPLACE THE FUEL FILTER.	6-8
6.7	CLEAN AND/OR REPLACING AIR CLEANER ELEMENT	6-8

7. REMOVAL, DISASSEMBLY, ASSEMBLY, INSTALLATION

7.1	OVERALL ASSEMBLY DRAWING	7-2
7.2	WEIGHT TABLE - COMPONENT ASSEMBLIES AND PARTS	7-4
7.3	ENGINE	7-5
7.3.1	Engine Removal	7-5
7.3.2	Engine Disassembly And Assembly	7-6
7.3.3	Engine Installation.	7-6
7.4	TRANSMISSION AND DRIVE AXLE.	7-8
7.4.1	Torque Converter, Transmission, Drive Axle Removal	7-8
7.5	INSTALL TORQUE CONVERTER.	7-10
7.6	INSTALL TRANSMISSION AND DRIVE AXLE	7-11
7.7	INSTALL PEDAL ASSEMBLY & BRAKE PIPING	7-11
7.8	BRAKE MASTER CYLINDER	7-11
7.8.1	Disassemble Brake Master Cylinder	7-13
7.8.2	Assemble Brake Master Cylinder	7-14
7.9	BLEED AIR FROM BRAKE SYSTEM LINES	7-15
7.10	STEERING AXLE.	7-17
7.10.1	STEERING AXLE SPECIFICATIONS.	7-17
7.10.2	Steering Axle Removal	7-17
7.10.3	Install STEERING AXLE	7-21
7.11	STEERING AXLE - LUBRICATION AND ADJUSTMENTS	7-22
7.11.1	Steering Axle Lubrication	7-22
7.11.2	Hub Bearing Preload Adjustment	7-22
7.11.3	Toe-in Specification - Cushion Tire Truck	7-22
7.11.4	Turning Angle Adjustment.	7-23
7.12	POWER STEERING VALVE (OSPC)	7-26
7.13	POWER STEERING VALVE - TROUBLESHOOTING CHART	7-27
7.13.1	Remove Power Steering Pump.	7-29
7.13.2	Disassemble Power Steering Valve	7-29
7.13.3	Assemble Power Steering Valve.	7-36
7.13.4	Install Power Steering Valve	7-48
7.14	POWER STEERING CYLINDER.	7-49
7.15	WHEEL BRAKE	7-50
7.15.1	Wheel Brake Removal	7-50
7.15.2	Wheel Brake Disassembly	7-51
7.15.3	Assemble Wheel Brake.	7-53
7.15.4	Axle Shaft And Front Wheel Installation	7-55
7.16	DRIVE AXLE	7-56
7.17	DIFFERENTIAL	7-60
7.17.1	Dissassemble Torqflow Transmission Differential	7-61
7.17.2	Assemble Torqflow Transmission Differential.	7-63
7.18	ADJUST RING GEAR BACKLASH	7-67
7.19	TORQFLOW TRANSMISSION W/ TORQUE CONVERTER.	7-72
7.19.1	Explanation Of Operation Of Transmission Hydraulic Circuit	7-76
7.20	DISASSEMBLE TORQFLOW TRANSMISSION	7-81
7.21	TORQUE CONVERTER DISASSEMBLY / ASSEMBLY	7-83
7.21.1	Disassemble Torque Converter	7-83
7.21.2	Assemble Torque Converter	7-83
7.22	TORQFLOW TRANSMISSION DISASSEMBLY / ASSEMBLY	7-84

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$