

# SERVICE MANUAL

SM160

BEB16E1-06

## BX50 SERIES FORKLIFT TRUCKS

Federal Environmental Protection Agency (EPA) Emission Control Compliant

BX50 S/N 200001A~


BX50 - Gasoline & LP

BX50 - Diesel

FG20/25/28/30/32/35-16

FD20/25/28/30/32/35-16

# BX50

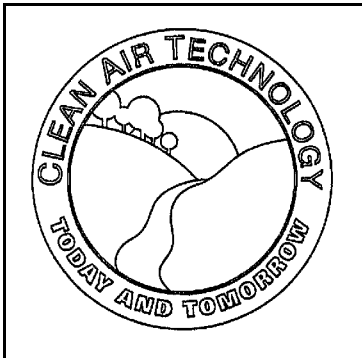

## WARNING

Read and observe all warnings on this unit before operating it.

**DO NOT** operate this equipment unless all factory installed guards and shields are properly secured in place.

# KOMATSU

Komatsu Forklift USA, Inc.

ISSUED: SEPTEMBER 2006

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift USA, Inc., nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

Requests for information, comments and other inquiries should be sent to:

Komatsu Forklift USA, Inc.  
14481 Lochridge Blvd., Bldg. #2  
Covington, Georgia 30014-4908

Voice phone: (770) 385-4815  
Fax phone: (770) 385-4838

© Copyright 2006, Komatsu Forklift USA, Inc. all rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift USA, Inc.

# CONTENTS

|                                                                      | Page No.        |
|----------------------------------------------------------------------|-----------------|
| <b>TABLE OF CONTENTS</b> .....                                       | <b>1</b>        |
| <b>INTRODUCTION</b> .....                                            | <b>4</b>        |
| <b>FEDERAL EPA EMISSION CONTROL STATEMENT (K21/K25)</b> .....        | <b>6</b>        |
| <b>FEDERAL EPA EMISSION CONTROL STATEMENT (4D94LE)</b> .....         | <b>9</b>        |
| <b>LIFT TRUCK MODELS COVERED IN THIS PUBLICATION</b> .....           | <b>12</b>       |
| <br><b>CHAPTER 00 - SAFETY</b> .....                                 | <br><b>00-1</b> |
| Safety Management .....                                              | 00-3            |
| Safe Travel .....                                                    | 00-8            |
| Loading Operations .....                                             | 00-16           |
| Stopping and Parking .....                                           | 00-24           |
| Inspection and Maintenance .....                                     | 00-26           |
| <br><b>CHAPTER 10 - GENERAL INFORMATION AND SPECIFICATIONS</b> ..... | <br><b>10-1</b> |
| Dimensions and Specifications Tables .....                           | 10-2            |
| Periodic Replacement of Consumable Parts .....                       | 10-14           |
| Standard Tightening Torque for Bolts .....                           | 10-15           |
| Standard Tightening Torque for Pipe Joints .....                     | 10-16           |
| <br><b>CHAPTER 20 - TESTING AND ADJUSTING</b> .....                  | <br><b>20-1</b> |
| Service Data (BX50 Pneumatic - Gasoline/LPG/Dual-Fuel) .....         | 20-2            |
| Service Data (BX50 Cushion - Gasoline/LPG/Dual-Fuel) .....           | 20-7            |
| Service Data (BX50 Diesel - Pneumatic Only) .....                    | 20-9            |
| Gasoline Engine .....                                                | 20-10           |
| Change Engine Oil .....                                              | 20-10           |
| Replace Oil Filter .....                                             | 20-10           |
| Replace Fuel Filter .....                                            | 20-10           |
| Inspect Spark Plugs .....                                            | 20-11           |
| Diesel Engine .....                                                  | 20-12           |
| Change Engine Oil .....                                              | 20-12           |
| Replace Oil Filter .....                                             | 20-12           |
| Air Cleaner .....                                                    | 20-13           |
| Ignition Timing .....                                                | 20-14           |
| Fuel Injection Timing .....                                          | 20-15           |
| Compression Pressure .....                                           | 20-16           |
| Valve Clearance .....                                                | 20-17           |
| Torquing of Cylinder Head Bolts .....                                | 20-18           |
| Torqflow Transmission Case .....                                     | 20-19           |
| Differential Case .....                                              | 20-20           |
| Hydraulic Tank .....                                                 | 20-21           |
| Hydraulic Drift - Lift & Tilt Cylinders .....                        | 20-22           |
| Inching & Brake Pedals .....                                         | 20-23           |
| Accelerator Pedals .....                                             | 20-24           |
| Parking Brake Lever .....                                            | 20-26           |
| Wheel Brake .....                                                    | 20-27           |
| Bleeding Air .....                                                   | 20-28           |
| Designated Fuel & Lubricating Oil - Gasoline Engines .....           | 20-31           |
| Designated Fuel & Lubricating Oil - Diesel Engines .....             | 20-32           |

|                                              |             |
|----------------------------------------------|-------------|
| <b>CHAPTER 30 - REMOVAL AND INSTALLATION</b> | <b>30-1</b> |
| Exploded View of Lift Truck                  | 30-2        |
| Weight Table - Component Parts               | 30-3        |
| Mast                                         | 30-5        |
| Lift Cylinder                                | 30-7        |
| Engine                                       | 30-8        |
| Torque Converter, Transmission & Drive Axle  | 30-13       |
| Alignment of Power Train                     | 30-23       |
| Steering Axle & Power Steering               | 30-25       |
| Wheel Brake                                  | 30-26       |
| <b>CHAPTER 40 - DISASSEMBLY AND ASSEMBLY</b> | <b>40-1</b> |
| Torque Converter                             | 40-2        |
| Torqflow Transmission                        | 40-15       |
| Differential                                 | 40-24       |
| Differential Assembly Drawing                | 40-30       |
| Wheel Brake                                  | 40-34       |
| Brake Master Cylinder                        | 40-36       |
| Combination Switch                           | 40-40       |
| Solenoid Valve                               | 40-43       |
| Steering Valve                               | 40-47       |
| Steering Axle                                | 40-50       |
| Power Steering Cylinder Assy                 | 40-56       |
| Lift Cylinder                                | 40-59       |
| Tilt Cylinder                                | 40-68       |
| Control Valve                                | 40-71       |
| Fork Carriage                                | 40-76       |
| Flow Divider                                 | 40-76       |
| Reservoir Assy                               | 40-80       |
| Hydraulic Pump                               | 40-81       |
| Propeller Shaft                              | 40-86       |
| <b>CHAPTER 50 - MAINTENANCE STANDARD</b>     | <b>50-1</b> |
| Torque Converter                             | 50-2        |
| Torqflow Transmission                        | 50-5        |
| Transmission Control Valve                   | 50-7        |
| Differential                                 | 50-9        |
| Wheel Brake                                  | 50-10       |
| Brake Master Cylinder                        | 50-11       |
| Brake Booster (Power Brakes)                 | 50-12       |
| Steering Axle                                | 50-14       |
| Power Steering Valve                         | 50-15       |
| Lift Cylinder                                | 50-17       |
| Mast, Fork Carriage & Forks                  | 50-24       |
| Hydraulic Pump                               | 50-26       |
| Flow Divider                                 | 50-30       |
| Propeller Shaft                              | 50-32       |
| <b>CHAPTER 60 - STRUCTURE AND FUNCTION</b>   | <b>60-1</b> |
| Torque Converter, Gear Pump & Control Valve  | 60-2        |
| Brake Booster                                | 60-11       |
| Flow Divider                                 | 60-12       |
| Tilt Cylinder                                | 60-14       |
| Hydraulic Circuit Drawing                    | 60-22       |

|                                                         |             |
|---------------------------------------------------------|-------------|
| P-Port Oil Pressure Measuring Port . . . . .            | 60-24       |
| <b>CHAPTER 80 - PERIODIC INSPECTION. . . . .</b>        | <b>80-1</b> |
| Inspection Tables & Check Points. . . . .               | 80-2        |
| <b>CHAPTER 90 - CONVERSION TABLES . . . . .</b>         | <b>90-1</b> |
| <b>SM300 - K21/K25 ENGINE SERVICE MANUAL . . . . .</b>  |             |
| <b>SM197 - 4D94LE ENGINE SERVICE MANUAL. . . . .</b>    |             |
| <b>APPENDIX 1 - MAST SERVICE MANUALS . . . . .</b>      |             |
| E Series MD Masts - Full Free Lift 2-Stage. . . . .     |             |
| E Series MS Masts - Limited Free Lift 2-Stage . . . . . |             |
| E Series MT Masts - Full Free Lift 3-Stage . . . . .    |             |
| 35D/45D/55D-MQ Quad Mast Service Manual. . . . .        |             |
| <b>APPENDIX 2 - ELECTRICAL SCHEMATICS. . . . .</b>      |             |
| BX50 EPA Torqflow - Gasoline Engine . . . . .           |             |
| BX50 EPA Torqflow - LPG Engine . . . . .                |             |
| BX50 EPA Torqflow - UL-EE LP Engine . . . . .           |             |
| BX50 EPA Torqflow - Gas/LP Dual-Fuel Engine. . . . .    |             |
| BX50 EPA Torqflow - Diesel Engine . . . . .             |             |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$