

SERVICE MANUAL

BX50 SERIES FORKLIFT TRUCKS

SM160

BEB16E1-06

FG20/25/28/30/32(S)(H)T-16
FG35AHT-16

GASOLINE/LPG

S/N 200001A~

S/N 210001A~

S/N 750875 - 751862

S/N A224001~

S/N 751863~

EPA Tier 1

EPA Tier 2

EPA Tier 2

EPA Tier 2/CARB 2010

CARB 2010

FD20/25/28/30/32T-16
FD35AT-16

DIESEL

S/N 200001A~/210001A~

S/N A223001~/750875~

EPA Tier 2

EPA Interim Tier 4

BX50



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.

KOMATSU®

REVISED: JUNE 2014

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A. nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2013, Komatsu Forklift U.S.A., LLC. All rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

CONTENTS

FOREWORD

INTRODUCTION	1
DIRECTION OF TRUCK	1
ENGINE SERIAL NUMBER LOCATION	2
FORKLIFT TRUCKS COVERED IN THIS PUBLICATION	3
CHASSIS SERIAL NUMBER RANGES BY MODEL	5
ANSI/ITSDF B56.1-2012 COMPLIANCE SERIAL NUMBER BREAKS	5
K21/K25 ENGINE SERIAL NUMBER BREAKS	6
EPA COMPLIANCE SERIAL NUMBER BREAKS	7

1. SAFETY

1.1	BASIC PRECAUTIONS	1-3
1.2	FIRE PREVENTION	1-9
1.3	SAFETY CHECKS BEFORE STARTING OPERATION	1-12
1.4	SAFE TRAVEL	1-13
1.5	STOPPING, PARKING AND TOWING	1-21
1.6	LOADING OPERATIONS	1-22
1.7	SAFETY IN INSPECTION AND MAINTENANCE	1-27
1.8	TOWING	1-35
1.9	STRUCTURE AND STABILITY OF THE LIFT TRUCK	1-37
1.10	SAFETY LABELS	1-40
1.11	OPTIONAL EQUIPMENT	1-46

2. SPECIFICATIONS AND GENERAL INFORMATION

2.1	GENERAL ASSEMBLY DIAGRAM	2-3
2.2	LUBRICANT LIST	2-4
2.2.1	GASOLINE/LPG MODELS	2-4
2.2.2	DIESEL MODELS	2-5
2.3	PERIODIC REPLACEMENT OF CONSUMABLE PARTS	2-6
2.4	SPECIFICATIONS	2-7
2.4.1	2-TON PNEUMATIC (OUTDOOR)	2-7
2.4.2	2.5-TON PNEUMATIC (OUTDOOR)	2-9
2.4.3	2.8-TON PNEUMATIC (OUTDOOR)	2-11
2.4.4	3.0-TON PNEUMATIC (OUTDOOR)	2-13
2.4.5	3.2-TON PNEUMATIC (OUTDOOR)	2-15
2.4.6	3.5-TON PNEUMATIC (OUTDOOR)	2-17

CONTENTS

2.4.7	2.0/2.5-TON CUSHION (INDOOR))	2-19
2.4.8	2.8/3.0/3.2-TON CUSHION (INDOOR)	2-21
2.5	WEIGHT TABLE	2-24
2.5.1	PNEUMATIC MODELS	2-24
2.5.2	CUSHION MODELS	2-25
2.6	STANDARD TIGHTENING TORQUE FOR BOLTS AND NUTS	2-26
2.7	STANDARD TIGHTENING TORQUE FOR PIPE JOINTS	2-27
2.7.1	ELBOWS, NIPPLES AND UNIONS	2-27
2.7.2	HIGH-PRESSURE RUBBER HOSES, PIPES AND SLEEVE NUTS	2-27

3. OPERATOR COMPARTMENT

3.1	STRUCTURE AND FUNCTION	3-3
3.1.1	VEHICLE CONTROLLER	3-3
3.1.2	KOMATSU OPERATOR PRESENCE SYSTEM (KOPS)	3-3
3.1.3	CONTROLLER TROUBLESHOOTING	3-4
3.1.4	ISO CONTROLLER TROUBLESHOOTING CHART	3-5
3.2	PERIODIC INSPECTION AND MAINTENANCE CHECK POINTS	3-7
3.2.1	TRAVELING BRAKE	3-7
3.2.2	PARKING BRAKES	3-7
3.2.3	ROD LINK, CABLE	3-7
3.2.4	CHASSIS FRAME, CHASSIS	3-7
3.2.5	CAB	3-7
3.2.6	SEAT	3-7
3.2.7	DEVICES FOR GETTING ON/OFF TRUCK, ANTI-SLIP	3-8
3.2.8	DISPLAY PANEL	3-8
3.2.9	OVERHEAD GUARD	3-8
3.2.10	BACKREST	3-8
3.2.11	LIGHTS, GAUGES, WARNING DEVICES	3-8
3.2.12	REAR VIEW MIRROR, REFLECTOR	3-8
3.2.13	LUBRICATION	3-8
3.2.14	FUNCTION OF EACH SYSTEM	3-8
3.3	TESTING AND ADJUSTING	3-9
3.3.1	ADJUST INCHING AND BRAKE PEDAL (TORQFLOW MODEL)	3-9
3.3.2	ADJUST STOP LAMP SWITCH	3-9
3.3.3	ADJUST ACCELERATOR PEDAL	3-10
3.3.4	ADJUST PARKING BRAKE LEVER	3-12
3.3.5	COMBINATION SWITCH	3-13
	INSPECT SWITCHES	3-14
3.4	REMOVAL AND INSTALLATION - PARKING BRAKE CABLE	3-15
3.4.1	REMOVAL	3-15
3.4.2	INSTALLATION	3-15
3.5	DISASSEMBLY AND ASSEMBLY	3-16

3.6	MAINTENANCE STANDARD	3-16
-----	----------------------------	------

4. ENGINE

4.1	STRUCTURE AND FUNCTION	4-3
4.2	PERIODIC INSPECTION AND MAINTENANCE CHECK POINTS	4-3
4.2.1	ENGINE START, NOISE	4-3
4.2.2	ENGINE REVOLUTION, EXHAUST EMISSION COLOR	4-3
4.2.3	IDLING SPEED	4-3
4.2.4	AIR CLEANER	4-3
4.2.5	CYLINDER HEAD	4-4
4.2.6	VALVE CLEARANCE	4-4
4.2.7	COMPRESSION	4-4
4.2.8	FUEL INJECTION STARTING PRESSURE (DIESEL MODELS)	4-4
4.2.9	FUEL INJECTION STATE (DIESEL MODELS)	4-4
4.2.10	TURBOCHARGER	4-4
4.2.11	ENGINE MOUNT	4-5
4.2.12	LUBRICATION SYSTEM	4-5
4.2.13	FUEL SYSTEM	4-5
4.2.14	HIGH-PRESSURE GAS FUEL SYSTEM	4-5
4.2.15	BLOW-BY GAS RETURN SYSTEM	4-5
4.2.16	RADIATOR COOLANT	4-5
4.2.17	FAN, FAN BELT	4-6
4.2.18	DISTRIBUTOR (GASOLINE EXPORT MODELS)	4-6
4.2.19	SPARK PLUG, IGNITION TIMING (GASOLINE MODELS)	4-7
4.2.20	BATTERY CHARGING SYSTEM, WIRING	4-7
4.3	TESTING AND ADJUSTING	4-8
4.3.1	GASOLINE ENGINE	4-8
4.3.2	DIESEL ENGINE	4-9
4.3.3	AIR CLEANER	4-10
4.3.4	ADJUST IGNITION TIMING	4-11
4.3.5	ADJUST FUEL INJECTION TIMING (DIESEL MODELS)	4-11
4.3.6	ADJUST NO-LOAD ROTATING SPEED (DIESEL MODELS)	4-12
4.3.7	MEASURE COMPRESSION PRESSURE	4-12
	CAUSES FOR INSUFFICIENT COMPRESSION	4-13
4.3.8	TORQUE CYLINDER HEAD MOUNTING BOLTS	4-13
	K21/K25 ENGINE	4-13
	4D94LE AND 4D98E ENGINES	4-13
4.3.9	ADJUST VALVE CLEARANCE	4-14
4.4	REMOVAL AND INSTALLATION	4-15
4.4.1	REMOVAL	4-15
4.4.2	INSTALLATION	4-17
4.5	DISASSEMBLY AND ASSEMBLY	4-18

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$