

Shop Manual



BULLDOZER

GALEO

D85EX-15E0

D85PX-15E0

SERIAL NUMBERS	D85EX-	11001	and up
	D85PX-	1201	

BULLDOZER

D85EX-15E0 D85PX-15E0

Machine model	Serial number
D85EX-15E0	11001 and up
D85PX-15E0	1201 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00060-02
00 Index and foreword	SEN00061-02
Index	SEN00069-02 ●
Foreword and general information	SEN00070-00
01 Specification	SEN00062-00
Specification and technical data	SEN00071-00
10 Structure, function and maintenance standard	SEN00063-00
Engine and cooling system	SEN00293-00
Power train, Part 1	SEN00295-00
Power train, Part 2	SEN00297-00
Undercarriage and frame	SEN00298-00
Hydraulic system, Part 1	SEN00299-00
Hydraulic system, Part 2	SEN00300-00
Hydraulic system, Part 3	SEN00302-00
Work equipment	SEN00305-00
Cab and its attachments	SEN00306-00
Electrical system	SEN00308-00
20 Standard value table	SEN00064-00
Standard service value table	SEN00629-00
30 Testing and adjusting	SEN00065-00
Testing and adjusting, Part 1	SEN00630-00
Testing and adjusting, Part 2	SEN00631-00
Testing and adjusting, Part 3	SEN00632-00
40 Troubleshooting	SEN00066-00
General information on troubleshooting	SEN00633-00
Troubleshooting by failure code (Display of code), Part 1	SEN00634-00
Troubleshooting by failure code (Display of code), Part 2	SEN00635-00
Troubleshooting by failure code (Display of code), Part 3	SEN00636-00
Troubleshooting by failure code (Display of code), Part 4	SEN00637-00
Troubleshooting of electrical system (E-mode)	SEN00638-00

Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00639-00
Troubleshooting of engine (S-mode)	SEN00640-00
50 Disassembly and assembly	SEN00067-00
General information on disassembly and assembly	SEN01263-00 ○
Engine and cooling system, Part 1	SEN01264-00 ○
Engine and cooling system, Part 2	SEN01265-00 ○
Power train, Part 1	SEN01266-00 ○
Power train, Part 2	SEN01267-00 ○
Undercarriage and frame, Part 1	SEN01268-00 ○
Undercarriage and frame, Part 2	SEN01269-00 ○
Hydraulic system	SEN01270-00 ○
Work equipment	SEN01271-00 ○
Cab and its attachments	SEN01272-00 ○
Electrical system	SEN01273-00 ○
90 Diagrams and drawings	SEN00068-01
Hydraulic diagrams and drawings	SEN00072-00
Electrical diagrams and drawings	SEN00073-01

Table of contents

00 Index and foreword	
Index	SEN00069-02
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN00070-00
Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard	8
Handling electric equipment and hydraulic component	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table	24
Conversion table	28
01 Specification	
Specification and technical data	SEN00071-00
Specification and technical data	2
Specification dimensions	2
Specifications	3
Weight table	11
Table of fuel, coolant and lubricants	16
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00293-00
Engine and cooling system	2
Engine mount.....	2
Cooling system	4
Cooling fan pump.....	6
Cooling fan motor	14
Power train, Part 1	SEN00295-00
Power train, Part 1.....	2
Power train.....	2
HSS system	4
General view of power train unit	6
Power train hydraulic piping drawing	8
Transmission control.....	9
Steering and brake control.....	10
Damper and universal joint	12
Torque converter and PTO.....	14
Transmission.....	20
Transmission clutch ECMV	32
Main relief valve and torque converter relief valve	37
Lubrication relief valve	39
Power train, Part 2	SEN00297-00
Power train, Part 2.....	2
Bevel gear shaft, HSS and brake	2
Brake valve	16
Final drive	22
Undercarriage and frame	SEN00298-00
Undercarriage and frame	2
Main frame	2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$