

# Shop Manual

HYDRAULIC  
EXCAVATOR

**GALEO**

PC400 - 7E0

PC400LC-7E0

PC450 - 7E0

PC450LC-7E0

SERIAL NUMBERS

PC400- 60001  
PC400LC-60001  
PC450- 30001  
PC450LC-30001

and up

**KOMATSU**

# HYDRAULIC EXCAVATOR

**PC400-7E0****PC400LC-7E0****PC450-7E0****PC450LC-7E0**

| Machine model | Serial number |
|---------------|---------------|
|---------------|---------------|

|             |              |
|-------------|--------------|
| PC400-7E0   | 60001 and up |
| PC400LC-7E0 | 60001 and up |
| PC450-7E0   | 30001 and up |
| PC450LC-7E0 | 30001 and up |

---

## 00 Index and foreword

### Index

---

---

|                                            |   |
|--------------------------------------------|---|
| Organization list of the shop manual ..... | 2 |
| Table of contents .....                    | 4 |

## Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title                                               | Form Number  |
|-------------------------------------------------------------|--------------|
| Shop Manual, contents binder, binder label and tabs         | SEN00344-03  |
| 00 Index and foreword                                       | SEN00345-03  |
| Index                                                       | SEN00346-03● |
| Foreword and general information                            | SEN00347-01  |
| 01 Specification                                            | SEN00348-01  |
| Specification and technical data                            | SEN00349-01  |
| 10 Structure, function and maintenance standard             | SEN00350-01  |
| Engine and cooling system                                   | SEN00351-01  |
| Power train                                                 | SEN00352-01  |
| Undercarriage and frame                                     | SEN00353-01  |
| Hydraulic system, Part 1                                    | SEN00354-01  |
| Hydraulic system, Part 2                                    | SEN00355-01  |
| Hydraulic system, Part 3                                    | SEN00356-01  |
| Work equipment                                              | SEN00357-01  |
| Cab and its attachments                                     | SEN00358-01  |
| Electrical system                                           | SEN00359-01  |
| 20 Standard value table                                     | SEN00363-02  |
| Standard service value table                                | SEN00364-02● |
| 30 Testing and adjusting                                    | SEN00618-00  |
| Testing and adjusting, part 1                               | SEN00619-00  |
| Testing and adjusting, Part 2                               | SEN00620-00  |
| 40 Troubleshooting                                          | SEN00621-00  |
| Information related to troubleshooting                      | SEN00622-00  |
| Troubleshooting by failure code (Display of code), Part 1   | SEN00623-00  |
| Troubleshooting by failure code (Display of code), Part 2   | SEN00624-00  |
| Troubleshooting by failure code (Display of code), Part 3   | SEN00625-00  |
| Troubleshooting of electrical system (E-mode)               | SEN00626-00  |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN00627-00  |
| Troubleshooting of engine (S-mode)                          | SEN00628-00  |

|                                                 |              |
|-------------------------------------------------|--------------|
| 50 Disassembly and assembly                     | SEN00854-00  |
| General information on disassembly and assembly | SEN00855-00○ |
| Engine and cooling system                       | SEN00856-00○ |
| Power train                                     | SEN00857-00○ |
| Undercarriage and frame                         | SEN00858-00○ |
| Hydraulic system                                | SEN00859-00○ |
| Work equipment                                  | SEN00860-00○ |
| Cab and its attachments                         | SEN00861-00○ |
| Electrical system                               | SEN00862-00○ |
| 90 Diagrams and drawings                        | SEN00360-02  |
| Hydraulic diagrams and drawings                 | SEN00361-01  |
| Electrical diagrams and drawings                | SEN00362-02  |

## Table of contents

|                                                                     |             |
|---------------------------------------------------------------------|-------------|
| 00 Index and foreword                                               |             |
| Index                                                               | SEN00346-03 |
| Organization list of the shop manual .....                          | 2           |
| Table of contents.....                                              | 4           |
| Foreword and general information                                    | SEN00347-01 |
| Foreword and general information .....                              | 2           |
| Safety notice .....                                                 | 2           |
| How to read the shop manual .....                                   | 6           |
| Explanation of terms for maintenance standard .....                 | 8           |
| Handling electric equipment and hydraulic component .....           | 10          |
| How to read electric wire code.....                                 | 18          |
| Method of disassembling and connecting push-pull type coupler ..... | 21          |
| Standard tightening torque table .....                              | 24          |
| Conversion table.....                                               | 28          |
| 01 Specification                                                    |             |
| Specification and technical data                                    | SEN00349-01 |
| Specification and technical data .....                              | 2           |
| Specification dimension drawings.....                               | 2           |
| Specifications .....                                                | 4           |
| Weight table .....                                                  | 8           |
| Table of fuel, coolant and lubricants .....                         | 12          |
| 10 Structure, function and maintenance standard                     |             |
| Engine and cooling system                                           | SEN00351-01 |
| Engine and cooling system .....                                     | 2           |
| Engine related parts.....                                           | 2           |
| Radiator, oil cooler and aftercooler .....                          | 3           |
| Power train                                                         | SEN00352-01 |
| Power train .....                                                   | 2           |
| Power train.....                                                    | 2           |
| Final drive .....                                                   | 4           |
| Sprocket.....                                                       | 6           |
| Swing machinery .....                                               | 8           |
| Swing circle.....                                                   | 10          |
| Undercarriage and frame                                             | SEN00353-01 |
| Undercarriage and frame .....                                       | 2           |
| Track frame and recoil spring .....                                 | 2           |
| Idler.....                                                          | 4           |
| Carrier roller.....                                                 | 6           |
| Track roller .....                                                  | 7           |
| Track shoe .....                                                    | 8           |
| Hydraulic system, Part 1                                            | SEN00354-01 |
| Hydraulic system, Part 1 .....                                      | 2           |
| Hydraulic equipment layout drawing.....                             | 2           |
| Hydraulic tank and filter .....                                     | 4           |
| Hydraulic pump.....                                                 | 6           |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$