

Shop Manual

HYDRAULIC
EXCAVATOR

PC400 -8R

PC400LC-8R

PC450 -8R

PC450LC-8R

SERIAL NUMBERS

PC400- 75001

PC400LC- 75001

PC450- 75001

PC450LC- 75001

and up

KOMATSU

HYDRAULIC EXCAVATOR

PC400-8R

PC400LC-8R

PC450-8R

PC450LC-8R

Machine model	Serial number
---------------	---------------

PC400-8R	75001 and up
PC400LC-8R	75001 and up
PC450-8R	75001 and up
PC450LC-8R	75001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04239-04
00 Index and foreword	SEN04240-04
Index	SEN04241-04 ●
Foreword and general information	SEN04242-00
01 Specification	SEN04243-01
Specification and technical data	SEN04244-01
10 Structure, function and maintenance standard	SEN04245-02
Engine and cooling system	SEN04246-00
Power train	SEN04247-00
Undercarriage and frame	SEN04248-00
Hydraulic system, Part 1	SEN04249-00
Hydraulic system, Part 2	SEN04250-02
Hydraulic system, Part 3	SEN04251-00
Work equipment	SEN04252-00
Cab and its attachments	SEN04253-00
Electrical system	SEN04254-01
20 Standard value table	SEN04255-01
Standard service value table	SEN04256-01
30 Testing and adjusting	SEN04257-04
Testing and adjusting, Part 1	SEN04258-02
Testing and adjusting, Part 2	SEN04259-03 ●
Testing and adjusting, Part 3	SEN04260-00
40 Troubleshooting	SEN04261-02
Failure code table and fuse locations	SEN04262-01
General information on troubleshooting	SEN04263-01
Troubleshooting by failure code (Display of code), Part 1	SEN04264-02 ●
Troubleshooting by failure code (Display of code), Part 2	SEN04265-01
Troubleshooting by failure code (Display of code), Part 3	SEN04266-02 ●
Troubleshooting of electrical system (E-mode)	SEN04267-01 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04268-01 ●

Troubleshooting of engine (S-mode)	SEN04269-01
50 Disassembly and assembly	SEN04270-03
General information on disassembly and assembly	SEN04271-01
Engine and cooling system	SEN04272-01
Power train	SEN04273-00
Undercarriage and frame	SEN04274-01
Hydraulic system	SEN04275-01
Work equipment	SEN04276-00
Cab and its attachments	SEN04277-00
Electrical system	SEN04278-01
90 Diagrams and drawings	SEN04279-00
Hydraulic diagrams and drawings	SEN04280-00
Electrical diagrams and drawings	SEN04281-00

Table of contents

00 Index and foreword	
Index	SEN04241-04
Composition of shop manual	2
Table of contents	4
Foreword and general information	SEN04242-00
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of connectors newly used for engines	20
Handling of electric equipment and hydraulic component	11
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN04244-01
Specification dimension drawings	2
Specifications	4
Weight table	8
Table of fuel, coolant and lubricants	12
10 Structure, function and maintenance standard	
Engine and cooling system	SEN04246-00
Engine related parts	2
Radiator, oil cooler and aftercooler	3
Power train	SEN04247-00
Power train	2
Swing circle	3
Swing machinery	4
Final drive	6
Sprocket	8
Undercarriage and frame	SEN04248-00
Track frame and recoil spring	2
Idler	4
Carrier roller	6
Track roller	7
Track shoe	8
Hydraulic system, Part 1	SEN04249-00
Hydraulic equipment layout drawing	2
Hydraulic tank and filter	4
Hydraulic pump	6
Hydraulic system, Part 2	SEN04250-02
Control valve	2
CLSS	14
Functions and operation by valve	18
Merge-divider valve	33
Attachment circuit selector valve	58
Holding valve	60

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$