

Shop Manual

HYDRAULIC
EXCAVATOR

PC950 -11R
PC950LC-11R

SERIAL NUMBERS PC950- 10118 and up
 PC950LC- 10118

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-19
Foreword, Safety, Basic Information	00-22
How to Read the Shop Manual	00-22
Safety Notice for Operation	00-24
Precautions to Prevent Fire	00-32
Procedures If Fire Occurs	00-34
Precautions When You Dispose of Waste Materials	00-35
Precautions When You Handle Hydraulic Equipment	00-36
Precautions When You Disconnect and Connect Pipings	00-39
Precautions When You Handle Electrical Equipment	00-46
Precautions When You Handle Fuel System Equipment	00-48
Precautions When You Handle Intake System Equipment	00-49
Practical Use of KOMTRAX	00-50
Disconnect and Connect Push-Pull Type Coupler	00-51
Precautions for Disconnection and Connection of Connectors	00-55
How to Disconnect and Connect Deutsch Connector	00-60
How to Disconnect and Connect Slide Lock Type Connector	00-61
How to Disconnect and Connect Connector with Lock to Pull	00-64
How to Disconnect and Connect Connector with Lock to Push	00-65
How to Disconnect and Connect Connector with Housing to Rotate	00-68
How to Read the Codes for Electric Cable	00-69
Explanation of Terms for Maintenance Standard	00-73
Standard Tightening Torque Table	00-76
Conversion Table	00-83
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-8
Specifications	01-12
Weight Table	01-28
How to Use Fuel, Coolant and Lubricants by Ambient Temperature	01-36
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
System Operating Lamp System	10-7
Battery Disconnect Switch	10-9
Engine System	10-10
Layout Drawing of Engine System	10-10
Engine Control System	10-11
Auto-Deceleration System	10-14
Automatic Low Idle System	10-16
Engine Automatic Warm-up System	10-18
Overheat Prevention System	10-20
Turbocharger Protection System	10-22
Automatic Idle Stop System	10-23
Component Parts of Engine System	10-26
Cooling System	10-30
Layout Drawing of Cooling System	10-30
Fan Speed Control System of Hydraulic Fan	10-33
Engine Output Control System of Hydraulic Fan	10-35
Fan Reverse Rotation System of Hydraulic Fan	10-37
Component Parts of Cooling System	10-39
Control System	10-62

Layout Drawing of Control System	10-62
Machine Monitor System.....	10-64
KomVision System.....	10-67
KOMTRAX System	10-72
Component Parts of Control System	10-73
Hydraulic System	10-121
Layout Drawing of Hydraulic System.....	10-121
Electronic OLSS.....	10-124
Engine and Pump Combined Control System	10-127
Component Parts of Hydraulic System.....	10-131
Work Equipment System.....	10-184
Layout Drawing of Work Equipment System	10-184
Work Equipment System Diagram	10-190
Machine Push-up System	10-192
Boom Shockless Control Function	10-194
PPC Lock System	10-196
Work Equipment and Travel Automatic Lock System	10-198
Component Parts of Work Equipment System	10-201
Auto-Greasing System	10-223
Layout Drawing of Auto-Greasing System.....	10-223
Grease Lubrication System Diagram.....	10-228
Component Parts of Grease Lubrication System.....	10-231
Swing System	10-235
Layout Drawing of Swing System.....	10-235
Swing Control System Diagram	10-239
Component Parts of Swing System.....	10-245
Travel System	10-304
Layout Drawing of Travel System.....	10-304
System Diagram of Travel Control System.....	10-307
Component Parts of Travel System.....	10-309
Undercarriage and Frame	10-333
Layout Drawing of Undercarriage.....	10-333
Lifting System	10-335
Hydraulically Operated Stairway System.....	10-335
Component Parts of Lifting System	10-338
Work Equipment	10-342
Structure of Work Equipment	10-342
Function of Work Equipment.....	10-343
Work Equipment Clearance Adjustment Shim.....	10-344
Bucket Clearance Adjustment Shim	10-345
CAB Related Parts.....	10-346
CAB	10-346
CAB Mount	10-347
CAB Tipping Stopper	10-348
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC950-11R.....	20-3
Standard Value Table for Engine: PC950-11R(SE).....	20-7
Standard Value Table for Engine: PC950LC-11R	20-10
Standard Value Table for Engine: PC950LC-11R(SE)	20-13
Standard Value Table for Machine.....	20-16
Standard Value Table for Machine: PC950-11R	20-16
Standard Value Table for Machine: PC950-11R(SE)	20-31
Standard Value Table for Machine: PC950LC-11R.....	20-46
Standard Value Table for Machine: PC950LC-11R(SE).....	20-61
Machine Posture and Procedures to Measure Performance	20-76
30 Testing and Adjusting	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$