

KOMATSU

SHOP MANUAL

SAA4D95LE-5 S4D95LE-3 DIESEL ENGINE

SAA4D95LE-5

LIFT TRUCK MODEL

FD40Z-10

FD35/40/45-10

FD50A-10

FH40/45/50-1

FD60/70/80-10

SERIAL No.

M250-133001 and up

M252-133001 and up

M252-133001 and up

M273-138001 and up

M248-55001 and up

S4D95LE-3

LIFT TRUCK MODEL

FD40ZY-10

FD35Y-10

FD40Y-10

FD45Y-10

FD50AY-10

SERIAL No.

M250-133001 and up

M252-133001 and up

M252-133001 and up

M252-133001 and up

M252-133001 and up

ENGINE

SAA4D95LE-5

Lift truck model Serial number

FD40Z-10	M250-133001 and up
FD35/40/45-10	M252-133001 and up
FD50A-10	M252-133001 and up
FH40/45/50-1	M273-138001 and up
FD60/70/80-10	M248-55001 and up

00 Index and foreword

100 Index and foreword

Composition of shop manual	2
Table of contents	3
Safety notice	8
How to read the shop manual	12
Explanation of terms for maintenance standard	14
Handling of electric equipment and hydraulic component	16
Handling of connectors newly used for engines	25
How to read electric wire code	28
Precautions when carrying out operation	31
Method of disassembling and connecting push-pull type coupler	34
Standard tightening torque table	37
Conversion table	41

Composition of shop manual

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	4D95LE-BE4
00 Index and foreword	4D95LE-BE4 (00)
100 Index and foreword	4D95LE-BE4 (00)
01 Specification	4D95LE-BE3 (01)
100 Specification.....	4D95LE-BE3 (01)
10 Structure, function and maintenance standard	4D95LE-BE4 (10)
100 Structure, function and maintenance standard	4D95LE-BE4 (10)
20 Standard value table	4D95LE-BE3 (20)
100 Standard value table	4D95LE-BE3 (20)
30 Testing and adjusting	4D95LE-BE3 (30)
100 Testing and adjusting	4D95LE-BE3 (30)
40 Troubleshooting	4D95LE-BE4 (40)
100 Troubleshooting	4D95LE-BE4 (40)
50 Disassembly and assembly	4D95LE-BE3 (50)
100 Disassembly and assembly	4D95LE-BE3 (50)

Table of contents

00 Index and foreword

100 Index and foreword	4D95LE-BE4 (00)
Composition of shop manual	2
Table of contents	3
Safety notice	8
How to read the shop manual	12
Explanation of terms for maintenance standard	14
Handling of electric equipment and hydraulic component	16
Handling of connectors newly used for engines	25
How to read electric wire code	28
Precautions when carrying out operation	31
Method of disassembling and connecting push-pull type coupler	34
Standard tightening torque table	37
Conversion table	41

01 Specification

100 Specification	4D95LE-BE3 (01)
Outline	2
Specifications	4
General view	8
Weight table	15
Engine performance curves	16

10 Structure, function and maintenance standard

100 Structure, function and maintenance standard	4D95LE-BE4 (10)
General structure	4
General structure	4
Air intake and exhaust system	6
Air intake and exhaust unit	6
Turbocharger	8
Engine unit	12
Cylinder head	12
Cylinder block	14
Cylinder	17
Main moving parts	18
Crankshaft	20
Camshaft	21
Piston, piston ring and piston pin	22
Connecting rod	23
Flywheel and flywheel housing	24
Timing gear	28
Valve system	32
Valve, valve guide	34
Rocker arm shaft, push rod and tappet	35
Lubrication system	37
Lubrication system diagram	37
Oil pump	38
Regulator valve	40
Oil filter	41
Fuel system	44
Fuel system diagram	44
Supply pump	45
Fuel injection injector	47
Fuel filter	48
Common rail	49
Various sensor, actuator	50
Various connector	52

Cooling system.....	55
Cooling system diagram	55
Water pump	56
Cooling fan drive and thermostat.....	58
Electrical equipment.....	63
Starting and charging system electrical circuit diagram	63
Alternator	64
Starting motor	68
Starting aid	71
Engine controller	73
20 Standard value table	
100 Standard value table	4D95LE-BE3 (20)
Standard service value table for testing, adjusting, and troubleshooting	2
Running-in standard and performance test standard	5
30 Testing and adjusting	
100 Testing and adjusting	4D95LE-BE3 (30)
Testing and adjusting tools list	2
Testing exhaust temperature	3
Adjusting valve clearance	4
Testing compression pressure	6
Testing blow-by pressure	8
Testing oil pressure.....	9
Handling fuel system parts	10
Releasing residual pressure in fuel system	10
Testing fuel pressure.....	11
Reduced cylinder mode operation	12
No-injection cranking	12
Testing leakage from pressure limiter and return rate from injector.....	13
Bleeding air from fuel circuit	16
Testing fuel system for leakage	18
Testing and adjusting alternator belt tension	19
Handling controller voltage circuit.....	20
Functions of troubleshooting tool and check of failure code.....	21
40 Troubleshooting	
100 Troubleshooting	4D95LE-BE4 (40)
General information on troubleshooting	6
Points on troubleshooting	6
Failure code table	8
Information in troubleshooting table (E-mode).....	12
Method of using troubleshooting charts (S-mode).....	16
Troubleshooting for mechanical system (S-mode)	20
S-1 Starting performance is poor	20
S-2 Engine does not start	21
S-3 Engine does not pick up smoothly	24
S-4 Engine stops during operations.....	25
S-5 Engine does not rotate smoothly.....	26
S-6 Engine lacks output (or lacks power)	27
S-7 Exhaust smoke is black (incomplete combustion)	28
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	29
S-9 Oil becomes contaminated quickly.....	30
S-10 Fuel consumption is excessive	31
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down).....	32
S-12 Oil pressure drops.....	33
S-13 Oil level rises (Entry of coolant or fuel)	34
S-14 Coolant temperature becomes too high (overheating).....	35
S-15 Abnormal noise is made.....	36

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$