

 
 


Bobcat®

Service Manual

335 Compact Excavator

S/N AAD111001 & Above
S/N A9KA11001 & Above

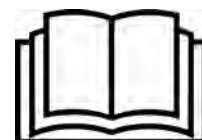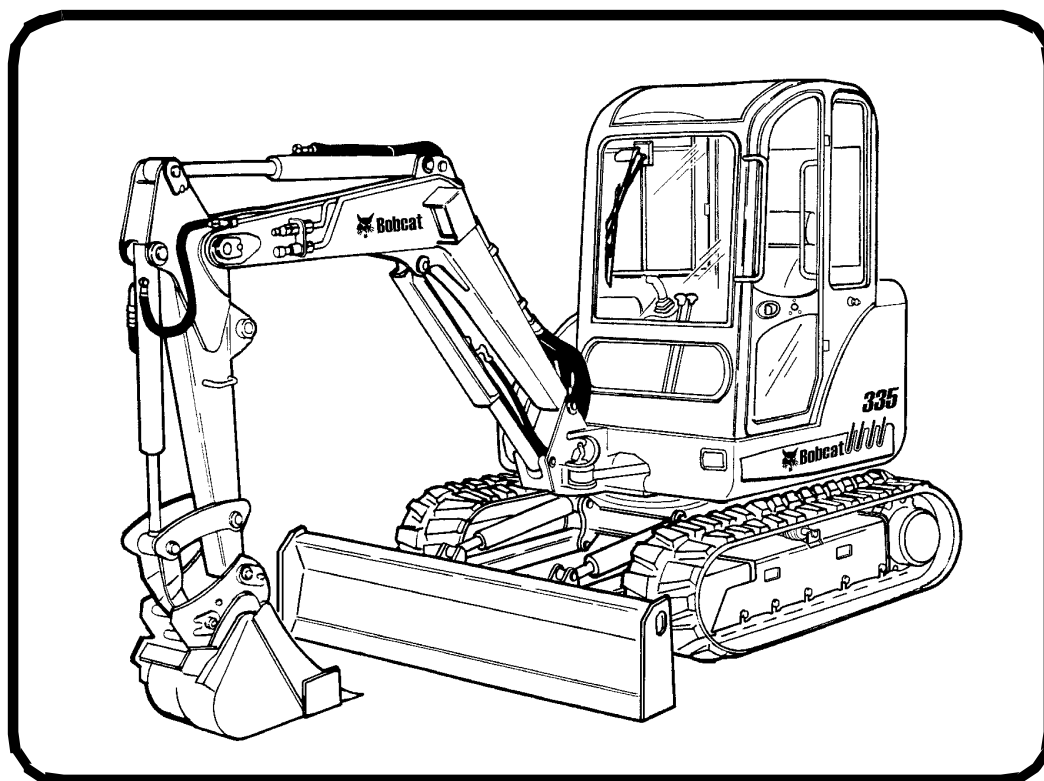

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

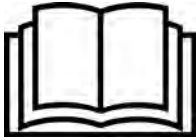

P-90216

- ⚠ Never service the Bobcat Excavator without instructions.

 
CORRECT



B-19964

- ⚠ Use the correct procedure to lift and support the excavator.


CORRECT

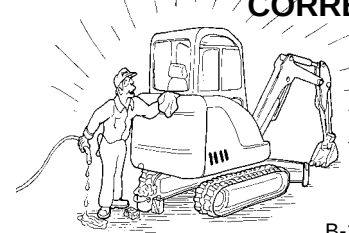

B-19959

- ⚠ Cleaning and maintenance are required daily.

 WRONG

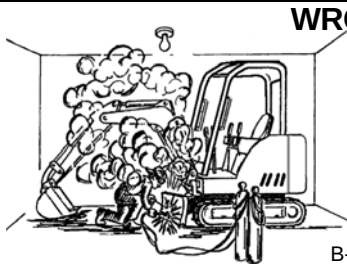

B-19965

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

 
WRONG



B-19960

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.


WRONG

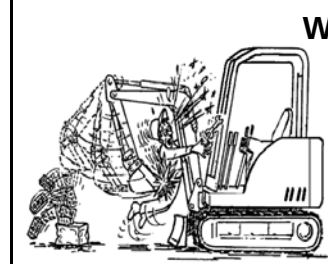

B-19966

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

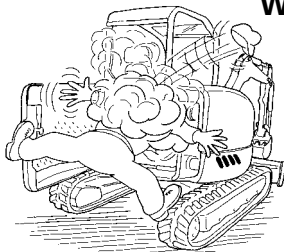

B-19962

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

 WRONG

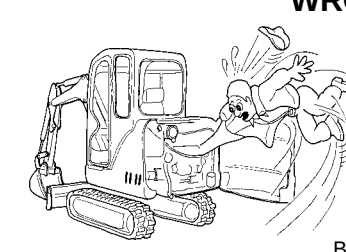

B-19958

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

WRONG



B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409



Bobcat®

ALPHABETICAL INDEX

ACCESSORY DRIVE BELT	10-01	EXCAVATOR STORAGE AND RETURN TO	
AIR CLEANER	60-01	SERVICE	10-01
AIR CLEANER SERVICE	10-01	EXPANSION VALVE	70-01
AIR CONDITIONING SYSTEM FLOW	70-01	FAN	60-01
ALTERNATOR	50-01	FLOORMAT AND FLOOR PANEL	40-01
ANGLE BLADE	30-01	FUEL LEVEL SENDER	50-01
ANGLE BLADE ASSEMBLY	30-01	FUEL SYSTEM	10-01, 60-01
ANGLE BLADE CUTTING EDGE	30-01	FUEL TANK	40-01
ANGLE BLADE CYLINDER	20-01	FLYWHEEL AND HOUSING	60-01
ANGLE BLADE VALVE	20-01		
ARM	40-01	HEATER COIL	70-01
ARM CYLINDER	20-01	HEATER VALVE	70-01
		HORN	40-01
BATTERY	50-01	HYDRAULIC CONTROL VALVE	20-01
BLADE	30-01	HYDRAULIC CONNECTION	
BLADE CONTROL	40-01	SPECIFICATIONS	SPEC-01
BLADE CYLINDER	20-01	HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
BLOWER FAN	70-01	HYDRAULIC FILTER	20-01
BOOM	40-01	HYDRAULIC PUMP	20-01
BOOM CYLINDER	20-01	HYDRAULIC PUMP START-UP	20-01
BOOM SWING CYLINDER	20-01	HYDRAULIC RESERVOIR	20-01
BOOM SWING LOCK VALVE	20-01	HYDRAULIC SYSTEM	10-01
BOOM SWING PEDAL	20-01	HYDRAULIC SYSTEM INFORMATION	20-01
BUCKET	40-01	HYDRAULIC X-CHANGE VALVE	20-01
BUCKET CYLINDER	20-01		
		LEFT CONTROL LEVER (JOYSTICK)	20-01
CAB	40-01	LEFT CONSOLE	40-01
CAMSHAFT AND TIMING GEARS	60-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
CANOPY	40-01	LIFTING THE EXCAVATOR	10-01
CASE DRAIN FILTER	20-01	LIGHTS	50-01
COMPRESSOR	70-01	LUBRICATING THE EXCAVATOR	10-01
CONDENSOR	70-01	LUBRICATION SYSTEM	60-01
CONVERSIONS	SPEC-01		
CONTROL PATTERN SELECTOR VALVE	20-01	MAGNETIC LOCKOUT SENSOR	50-01
CRANKSHAFT AND PISTONS	60-01	MAIN RELIEF VALVE	20-01
CROSS PORT RELIEF VALVES	20-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
CYLINDER HEAD	60-01		
		OIL COOLER	20-01
DIAGNOSTICS SERVICE CODES	50-01	OPERATOR CAB (ROPS/TOPS)	10-01
DIRECT TO TANK VALVE	20-01		
		PIVOT PINS	10-01
ELECTRICAL SYSTEM INFORMATION	50-01	PORT RELIEF VALVES	20-01
ENGINE COOLING SYSTEM	10-01, 60-01	PRESSURE REDUCING VALVE	20-01
ENGINE INFORMATION	60-01		
ENGINE LUBRICATION SYSTEM	10-01	RECEIVER/DRIER	70-01
ENGINE SPEED CONTROL	60-01	REGULAR MAINTENANCE	70-01
EVAPORATOR COIL	70-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
EVAPORATOR/HEATER UNIT	70-01	RIGHT CONSOLE	40-01
EVAPORATOR SPECIFICATIONS	SPEC-01	RIGHT SIDE COVER	10-01, 40-01

Continued On Next Page

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$