



EN

Service Manual

Brush Cutter



62 S/N: B53Z00101 & Above
62HF S/N: B54100101 & Above
74 S/N: B54200101 & Above
74HF S/N: B54300101 & Above
86HF S/N: B54600101 & Above




MAINTENANCE SAFETY WARNINGS



- Never service the Bobcat machine without instructions. Read and understand the Operation & Maintenance Manual, Operator's Handbook and safety signs (decals) on machine.
- Follow warnings and instructions in manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.



This Safety Alert Symbol means: "Attention! Be Alert! Your Safety is Involved!" Carefully read the message that follows.

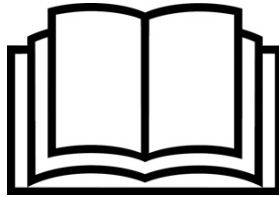

- Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
- Cleaning and maintenance are required daily.
- Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
- Always lower the attachment / implement to the ground before lubricating or servicing.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
- Stop, cool, and clean engine of flammable materials before checking fluids.
- Keep body, loose objects, and clothing away from moving parts, electrical contacts, hot parts, and exhaust.
- Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure, and flying debris or when tools are used. Use eye protection approved for type of welding.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED SERVICE BOBCAT PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

FOREWORD.....	10-1
SAFETY AND MAINTENANCE.....	20-1
HYDRAULIC SYSTEM.....	30-1
MAINFRAME	40-1
SPECIFICATIONS.....	50-1



FOREWORD

SERIAL NUMBER LOCATION 10-10-1

ATTACHMENT SERIAL NUMBER 10-10-1

DELIVERY REPORT 10-20-1

MANUAL STORAGE LOCATION..... 10-30-1

ATTACHMENT IDENTIFICATION 10-40-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$