

Concrete Mixer




Bobcat®

Service Manual

S/N 678500101 & Above

S/N A01600101 & Above

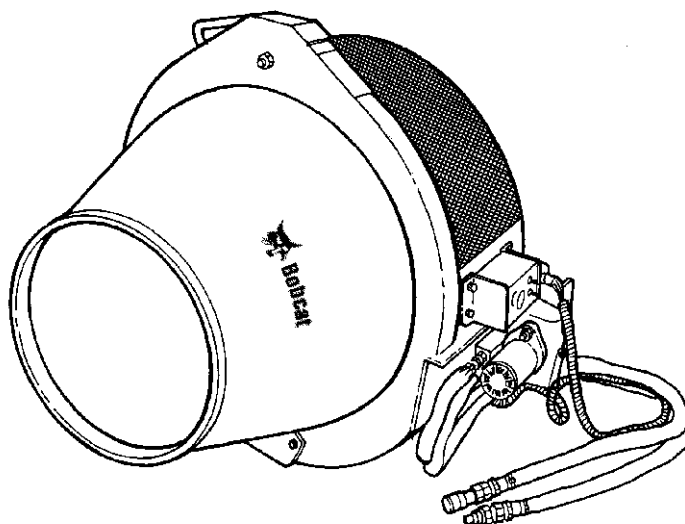

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



Printed in U.S.A.

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



B-10731a

-  **Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.**
-  **Cleaning and maintenance are required daily.**
-  **Never service or adjust attachment with the engine running unless instructed to do so in manual.**
-  **Always lower the attachment to the ground before lubricating or servicing.**
-  **Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.**
-  **Stop, cool and clean engine of flammable materials before checking fluids.**
-  **Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.**
-  **Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.**



Bobcat®

ALPHABETICAL INDEX

ATTACHMENT DELIVERY REPORT	III
BEARING.....	30-10-1
CONCRETE MIXER ELECTRICAL SCHEMATIC.....	SPEC-40-1
DRUM ROLLER.....	30-20-1
GLOSSARY OF HYDRAULIC SYMBOLS FOR ATTACHMENTS.....	SPEC-20-1
GREASE SEAL	30-30-1
HYDRAULIC CONTROL VALVE.....	20-20-1
HYDRAULIC MOTOR	20-10-1
HYDRAULIC SCHEMATIC	SPEC-30-1
IDENTIFICATION.....	IV
INNER DRUM	30-40-1
INSPECTION.....	10-30-1
LOADER REMOTE ATTACHMENT CONTROL ELECTRICAL SCHEMATIC....	SPEC-50-1
LUBRICATION.....	10-20-1
MIXING DRUM DRIVE CHAIN	30-50-1
MIXING DRUM DRIVE SPROCKET	30-60-1
MIXING PADDLES.....	30-70-1
REMOTE ATTACHMENT CONTROL	40-10-1
SHAFT MOUNT.....	30-80-1
SPECIFICATIONS.....	SPEC-10-1
TROUBLESHOOTING.....	10-10-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$