

Shop Manual

HYDRAULIC
EXCAVATOR

PC135F-10M0

SERIAL NUMBERS J10001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-14
HOW TO READ THE SHOP MANUAL	00-14
SAFETY NOTICE FOR OPERATION	00-16
PRECAUTIONS TO PREVENT FIRE	00-24
ACTIONS IF FIRE OCCURS	00-26
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-27
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-28
PRECAUTIONS FOR DEF	00-29
STORE AdBlue/DEF	00-30
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-31
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-41
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-44
PRACTICAL USE OF KOMTRAX	00-45
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-50
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-54
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-60
HOW TO READ ELECTRICAL WIRE CODE	00-61
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-65
STANDARD TIGHTENING TORQUE TABLE	00-68
CONVERSION TABLE	00-75
ABBREVIATION LIST	00-80
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-10
FUEL, COOLANT, LUBRICANT	01-12
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
BOOT-UP SYSTEM	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-5
SYSTEM OPERATING LAMP SYSTEM	10-6
BATTERY DISCONNECT SWITCH	10-8
ENGINE SYSTEM	10-9
LAYOUT DRAWING OF ENGINE SYSTEM	10-9
ENGINE CONTROL SYSTEM	10-10
AUTO-DECELERATION SYSTEM	10-12
ENGINE AUTOMATIC WARM-UP SYSTEM	10-14
OVERHEAT PREVENTION SYSTEM	10-16
TURBOCHARGER PROTECTION SYSTEM	10-18
COMPONENT PARTS OF ENGINE SYSTEM	10-19
COOLING SYSTEM	10-20
LAYOUT DRAWING OF COOLING SYSTEM	10-20
CONTROL SYSTEM	10-22
LAYOUT DRAWING OF CONTROL SYSTEM	10-22
MACHINE MONITOR SYSTEM	10-24

KOMTRAX SYSTEM.....	10-26
COMPONENT PARTS OF CONTROL SYSTEM.....	10-27
HYDRAULIC SYSTEM.....	10-54
LAYOUT DRAWING OF HYDRAULIC SYSTEM.....	10-54
CLSS	10-56
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-59
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-65
WORK EQUIPMENT SYSTEM	10-152
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-152
STRUCTURE OF VALVE CONTROL.....	10-155
PPC LOCK SYSTEM	10-156
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-157
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-158
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-160
SWING SYSTEM	10-178
LAYOUT DRAWING OF SWING SYSTEM	10-178
SWING CONTROL SYSTEM DIAGRAM	10-180
COMPONENT PARTS OF SWING SYSTEM.....	10-183
TRAVEL SYSTEM.....	10-194
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-194
SYSTEM DIAGRAM OF TRAVEL CONTROL SYSTEM.....	10-196
COMPONENT PARTS OF TRAVEL SYSTEM	10-200
UNDERCARRIAGE AND FRAME.....	10-217
LAYOUT DRAWING OF UNDERCARRIAGE	10-217
IDLER CUSHION.....	10-218
WORK EQUIPMENT.....	10-219
STRUCTURE OF WORK EQUIPMENT	10-219
FUNCTION OF WORK EQUIPMENT	10-220
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-221
BUCKET CLEARANCE ADJUSTMENT SHIM	10-222
CAB AND ITS ATTACHMENTS	10-223
ROPS CAB	10-223
CAB MOUNT	10-224
CAB TIPPING STOPPER	10-226
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC135F-10M0	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-6
STANDARD VALUE TABLE FOR MACHINE: PC135F-10M0.....	20-6
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE	20-20
30 TESTING AND ADJUSTING.....	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-9
ENGINE AND COOLING SYSTEM.....	30-11
TEST ENGINE SPEED	30-11
TEST EXHAUST GAS COLOR.....	30-13
TEST AND ADJUST VALVE CLEARANCE	30-15
TEST COMPRESSION PRESSURE.....	30-18
TEST BLOWBY PRESSURE	30-20
TEST ENGINE OIL PRESSURE	30-22
TEST FUEL PRESSURE	30-24
TEST FUEL RETURN RATE AND LEAKAGE.....	30-25
BLEED AIR FROM FUEL SYSTEM	30-30
TEST FUEL CIRCUIT FOR LEAKAGE	30-32
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-34

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$