




Bobcat®

GRADER

Service Manual

**S/N 231511101 & Above
S/N 378700101 & Above
S/N 802700101 & Above**

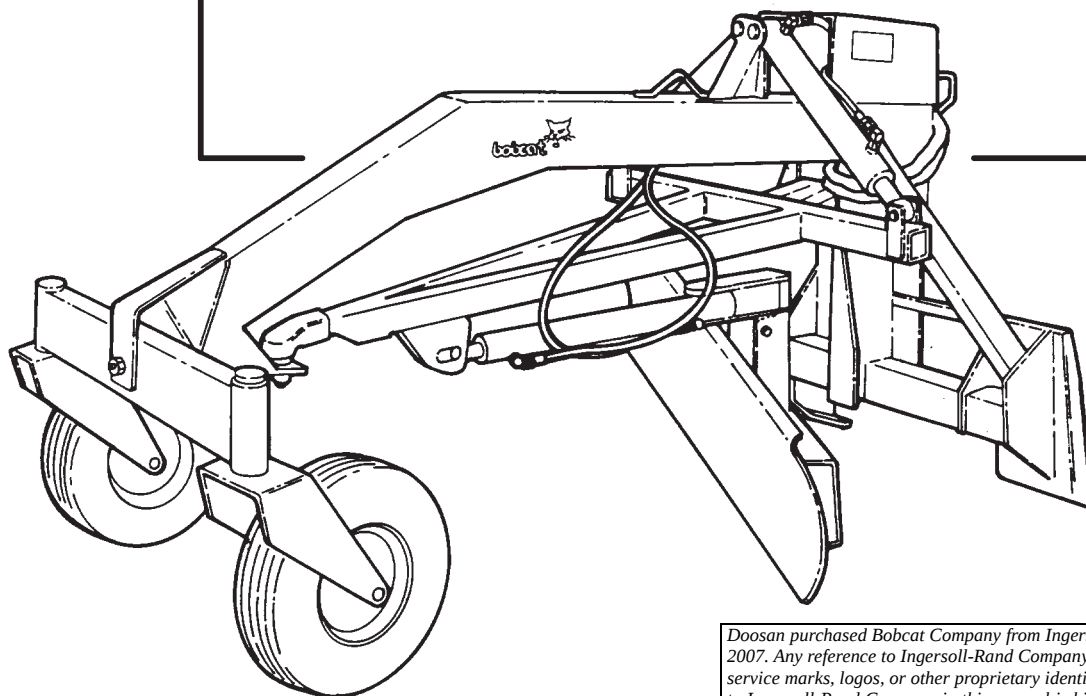

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



B-10731a

-  **Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.**
-  **Cleaning and maintenance are required daily.**
-  **Never service or adjust attachment with the engine running unless instructed to do so in manual.**
-  **Always lower the attachment to the ground before lubricating or servicing.**
-  **Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.**
-  **Stop, cool and clean engine of flammable materials before checking fluids.**
-  **Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.**
-  **Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.**



Bobcat®

ALPHABETICAL INDEX

ADAPTER WIRE HARNESS SCHEMATIC . . .	10-40-1
ATTACHMENT CONVERSION MATRIX	10-40-1
BROOM	10-30-1
CASTER WHEEL (S/N 378700101 & Above) .	10-30-1
CASTER WHEEL (S/N 802700101 & Above) .	10-30-1
ELECTRICAL AND HYDRAULIC SCHEMATIC	10-40-1
GRADER CONVERSION MATRIX	10-40-1
HYDRAULIC CONTROL VALVE (S/N 802700101-802700334)	10-20-1
HYDRAULIC CONTROL VALVE (S/N 802700335 & Above)	10-20-1
HYDRAULIC CYLINDER	10-20-1
HYDRAULIC FILTER (S/N 802700101-802700334)	10-20-1
IDENTIFICATION (S/N 378700101 & Above)	iv
IDENTIFICATION (S/N 802700101 & Above)	v
INSPECTION AND ADJUSTMENT	10-10-1
LUBRICATION	10-10-1
SCARIFIER	10-30-1
SERIAL NUMBER LOCATION	iii
SPECIFICATIONS	10-40-1
TURNTABLE	10-30-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$