

SERVICE MANUAL

Workmaster™ 55 / Workmaster™ 65 **Workmaster™ 75** Tractor

Part number 51625050

English
April 2019





SERVICE MANUAL

**WORKMASTER 55
WORKMASTER 65
WORKMASTER 75**

Link Product / Engine

Product	Market Product	Engine
WORKMASTER 55 Workmaster 55 ROPS 2WD	North America	8035.25A IIIB
WORKMASTER 55 Workmaster 55 CAB 2WD	North America	8035.25A IIIB
WORKMASTER 55 Workmaster 55 CAB 4WD	North America	8035.25A IIIB
WORKMASTER 55 Workmaster 55 ROPS 4WD	North America	8035.25A IIIB
WORKMASTER 65 Workmaster 65 ROPS 2WD	North America	8035.25B IIIB
WORKMASTER 65 Workmaster 65 CAB 2WD	North America	8035.25B IIIB
WORKMASTER 65 Workmaster 65 ROPS 4WD	North America	8035.25B IIIB
WORKMASTER 65 Workmaster 65 CAB 4WD	North America	8035.25B IIIB
WORKMASTER 75 Workmaster 75 CAB 2WD	North America	8035.25C IIIB
WORKMASTER 75 Workmaster 75 ROPS 2WD	North America	8035.25C IIIB
WORKMASTER 75 Workmaster 75 ROPS 4WD	North America	8035.25C IIIB
WORKMASTER 75 Workmaster 75 CAB 4WD	North America	8035.25C IIIB

Contents

Maintenance	00
[00.100] New unit pre-delivery operations.....	00.1
[00.150] Start-up.....	00.2
Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.112] Power shuttle transmission.....	21.2
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
Front axle system	25
[25.100] Powered front axle	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1

[35.116] Three-point hitch cylinder	35.2
[35.204] Remote control valves	35.3
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.408] Warning indicators, alarms, and instruments	55.7
[55.512] Cab controls.....	55.8
[55.DTC] FAULT CODES.....	55.9
Front loader and bucket.....	82
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
[82.AAA] Front loader and bucket generic sub-group	82.3
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$