 




Service Manual

T190 Compact Track Loader

S/N A3LN11001 & Above
S/N A3LP11001 & Above

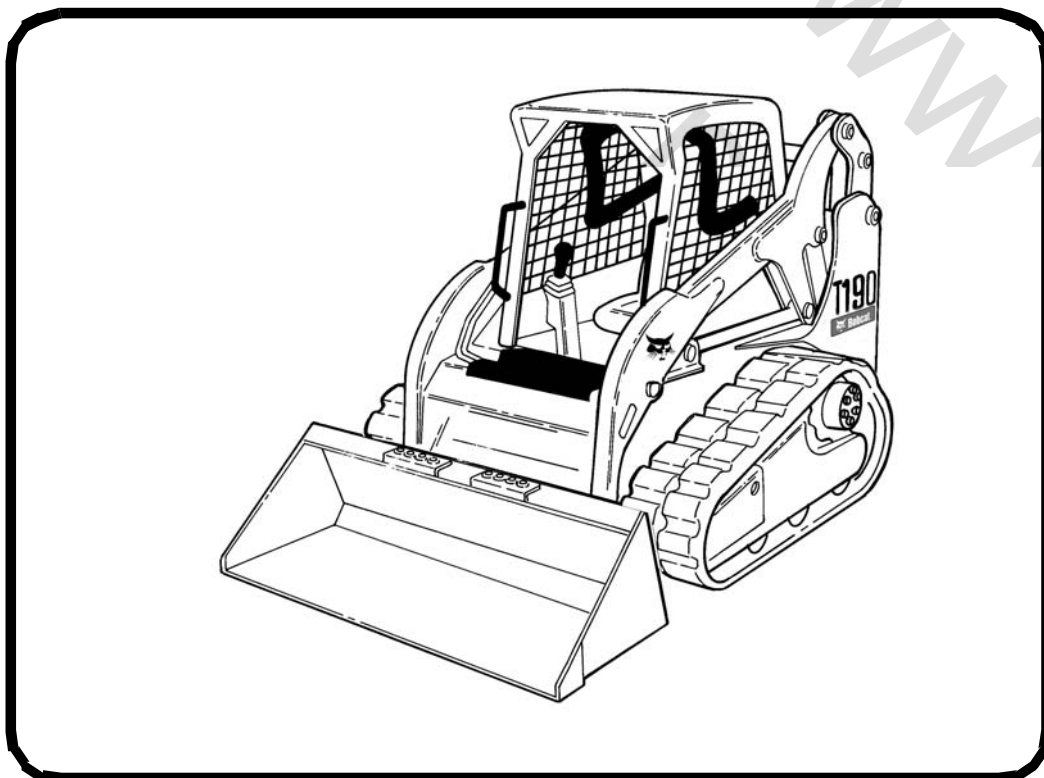

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)





MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

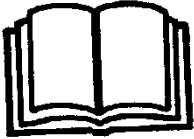

B-10731a

- Never service the Bobcat Compact Track Loader without instructions.

 
CORRECT

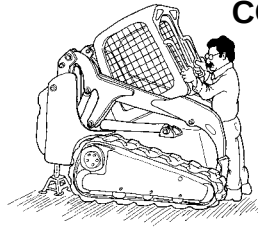

B-15954

- Use the correct procedure to lift or lower operator cab.

 
CORRECT

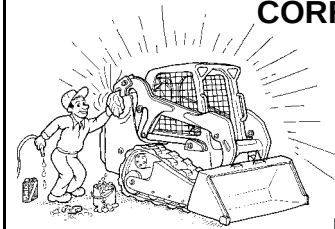

B-15956

- Cleaning and maintenance are required daily.

 
WRONG

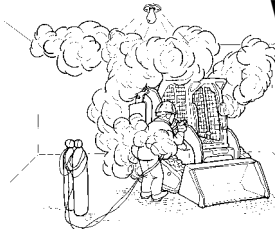

B-15967

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

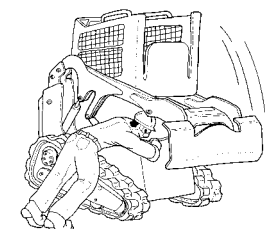

B-15958

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

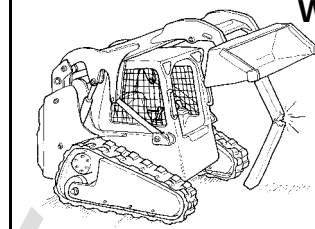

B-15955

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

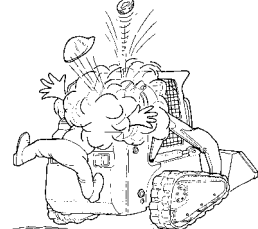

B-15966

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

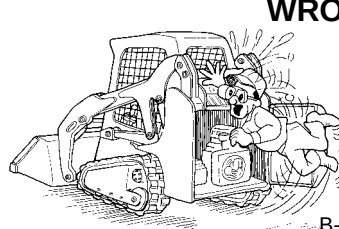

B-15951

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

MSW11-0805



Bobcat®

ALPHABETICAL INDEX

ACCESS PANEL (INSIDE)	50-01	EXHAUST GAS RECIRCULATION	
ACCESS PANEL (INSIDE) (SJC)	50-01	(EGR) SYSTEM.....	70-01
AIR CLEANER	70-01		
AIR CLEANER SERVICE	10-01	FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	FLYWHEEL AND HOUSING	70-01
ALTERNATOR	60-01	FLYWHEEL RPM SENSOR	60-01
		FRONT AUXILIARY HYD. COUPLER BLOCK	20-01
BACK-UP SYSTEM	60-01	FUEL SYSTEM.....	10-01, 70-01
BATTERY	60-01	FUEL TANK	50-01
BLOWER FAN	80-01		
BOBCAT INTERLOCK CONTROL		HEATER COIL	80-01
SYSTEM (BICS)	60-01	HEATER VALVE	80-01
BOBCAT CONTROLLER (ACS)	60-01	HIGH FLOW VALVE	20-01
BOBCAT CONTROLLER (GATEWAY AND		HYDRAULIC CONNECTION SPECS.	SPEC-01
AUXILIARY)	60-01	HYDRAULIC CONTROL VALVE	20-01
BOBCAT CONTROLLER (SJC) (DRIVE)	60-01	HYD./HYDRO FLUID SPECIFICATIONS	SPEC-01
BOB-TACH (HAND LEVER)	10-01, 50-01	HYDRAULIC FLUID RESERVOIR	20-01
BOB-TACH (POWER).....	10-01, 50-01	HYDRAULIC/HYDROSTATIC FILTERS	20-01
BRAKE	40-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
BUCKET POSITION VALVE	20-01	HYDRAULIC PUMP (STANDARD).....	20-01
		HYDRAULIC PUMP (STANDARD) (HIGH FLOW) ..	20-01
CALIBRATION	60-01	HYDRAULIC PUMP (SJC) (HIGH FLOW).....	20-01
CAMSHAFT AND TIMING GEARS.....	70-01	HYDRAULIC PUMP (SJC)	20-01
CHAINCASE	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
CHARGE PRESSURE	30-01	HYDROSTATIC MOTOR	30-01
COMPRESSOR	80-01	HYDROSTATIC MOTOR CARRIER	30-01
CONDENSER	80-01	HYDROSTATIC PUMP	30-01
CONTROL HANDLE/LEVER	50-01	HYDROSTATIC PUMP (SJC)	30-01
CONTROL HANDLE/LEVER (ACS)	50-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CONTROL HANDLE/LEVER (SJC).....	50-01		
CONTROL PANEL	50-01	INSTRUMENT PANELS	60-01
CONTROL PANEL (SJC).....	50-01		
CONTROL PANEL SETUP	60-01	LIFT ARMS	50-01
CONTROL PEDALS AND LINKAGE	50-01	LIFT ARM BYPASS CONTROL VALVE	20-01
CONTROL PEDALS (ACS)	50-01	LIFT ARM SUPPORT DEVICE	10-01
CONTROL SYSTEM (ACS).....	50-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CONVERSIONS	SPEC-01	LIGHTS	60-01
CRANKSHAFT AND PISTONS	70-01	T190 LOADER SPECIFICATIONS	SPEC-01
CYLINDER (LIFT)	20-01	LOADER STORAGE AND RETURN TO SERVICE	10-01
CYLINDER (BOB-TACH)	20-01	LUBRICATING THE LOADER	10-01
CYLINDER (TILT)	20-01	LUBRICATION SYSTEM	70-01
CYLINDER HEAD.....	70-01		
		MAIN RELIEF VALVE	20-01
DIAGNOSTICS SERVICE CODES	60-01	MAINTENANCE CLOCK	60-01
DRIVE BELT	30-01	MUFFLER	70-01
DRIVE COMPONENTS	40-01		
		OIL COOLER	20-01
ELECTRICAL SYSTEM INFORMATION	60-01	OPERATOR CAB	10-01, 50-01
ELECTRICAL/HYRAULIC CONTROLS.....	60-01	OPERATOR SEAT (SUSPENSION).....	50-01
ELECTRICAL/HYRAULIC CONTROLS (SJC).	60-01		
ENGINE	70-01	PASSWORD SETUP (IF EQUIPPED WITH	
ENGINE COOLING SYSTEM	10-01, 70-01	KEYLESS START).....	60-01
ENGINE INFORMATION	70-01	PIVOT PINS	10-01
ENGINE LUBRICATION SYSTEM	10-01	POWER BOB-TACH (OPTION).....	10-01, 50-01
ENGINE SPEED CONTROL (SJC)	70-01	POWER BOB-TACH BLOCK	20-01
EVAPORATOR COIL	80-01	PRESSURE RELIEF VALVE	80-01
EVAPORATOR/HEATER UNIT	80-01	PRESSURE SWITCH.....	80-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$