



EN

Service Manual

Compact Track Loader



T7x S/N: B61D11001 & Above



MAINTENANCE SAFETY WARNINGS



- Never service the Bobcat machine without instructions. Read and understand the Operation & Maintenance Manual, Operator's Handbook, and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments, or servicing. Check for correct function after adjustments, repairs, or service.
- Untrained operators and failure to follow instructions can cause injury or death.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner / operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



This check mark means: "Follow instructions for proper operations." Carefully read the message that follows.



- Use the correct procedure to lift or lower operator cab.



- Cleaning and maintenance are required daily.



- Grease per schedule.

MAINTENANCE SAFETY WARNINGS




This Safety Alert Symbol means: "Attention! Be Alert! Your Safety is Involved!" Carefully read the message that follows.



- Do not go under lift arms when raised unless supported by an approved lift arm support. Replace if damaged.



- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

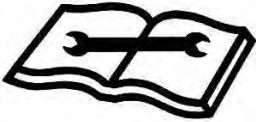

- Cleaning and maintenance are required daily.



- Stop, cool, and clean the machine of flammable materials before checking fluids.
- Never service or adjust machine with the machine running unless instructed to do so in the manual.



- Keep body, jewelry, and clothing away from moving parts, electrical contact, and hot parts.
- Wear eye protection to guard from compressed springs, and flying debris when machine is running or tools are used.



- Unplug the machine from the charging unit before maintenance or service.
- Improperly charged, damaged, or modified batteries can expel flammable gas, ignite, or explode.
- Keep arcs, sparks, flames, and lighted tobacco away from batteries.
- Make sure the power terminals are masked when handling the auxiliary battery to prevent short circuits.



- Always lower the attachment to the ground before doing any maintenance.
- Never modify equipment or add attachments not approved by Bobcat Company.



FOREWORD	10-1
SAFETY AND MAINTENANCE	20-1
DRIVE SYSTEM	30-1
MAINFRAME	40-1
ELECTRICAL SYSTEM	50-1
SPECIFICATIONS	60-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$