

Engine Manual Workshop Manual

4HK1 Interim Tier 4 Compatible

4HK1 INTERIM TIER 4 COMPATIBLE ENGINE MANUAL WORKSHOP MANUAL

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following sections.
Technical Manual (Operational Principle)
Technical Manual (Troubleshooting)
Workshop Manual
Engine Manual

FOREWORD

This manual describes the service procedures for the 4HK1 diesel engine (Interim Tier 4 compatible).

The contents of this manual are current at the date of issue, but may differ slightly from your engine due to specification changes or other modifications made thereafter.

This manual consists of the following sub-sections.

Publication No.	Publication Name	Sub-sections	
IDE-2620H	ENGINE	0	Introduction
		14A	Service Information Guide
		15B	Maintenance Information
		15C	Functional Inspection
		15D	Symptom
		15E	DTC Information
		1A	Engine Control
		1B	Mechanical
		1C	Fuel System
		1D	Cooling
		1E	Lubrication
		1F	Induction
		1G	Exhaust
		1H	Aux. Emission Control Devices
		1J	Electrical
		-	Wiring Diagram

Introduction

Introduction

(All)

Table of Contents

Introduction.....	0-2
safety information.....	0-2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$