

Workshop Manual

ZW 150-6 150PL-6 Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TOPTC50-EN
Technical Manual (Troubleshooting) : Vol. No.TTPTC50-EN
Workshop Manual : Vol. No.WPTC50-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling	W1-1-1-1
--	----------

Group 2 Tightening

Tightening Bolts and Nuts	W1-2-1-1
Piping Joint	W1-2-1-4

Group 3 Painting

Painting	W1-3-1-1
Painting (Parallel Link)	W1-3-2-1

Group 4 Bleed Air from Circuit

Bleeding Air from Hydraulic System	W1-4-1-1
Bleeding Air from Fuel System	W1-4-1-3
Bleeding Air from Brake (Axle)	W1-4-1-4

Group 5 Preparation

Preparation before Inspection and Maintenance	W1-5-1-1
Hydraulic Circuit Pressure Release Procedure	W1-5-1-6
Pressure Release from Ride Control Accumulator	W1-5-1-7
Pressure Release from Hydraulic Oil Tank	W1-5-1-8
Pressure Release from Expansion Tank	W1-5-1-9

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body
Center Hinge.....W2-1-1-1

Group 2 Front Attachment
Pin and Bushing.....W2-2-1-1
Standard Dimensions for Lift Arm and Bucket...W2-2-2-1
CylinderW2-2-3-1

Group 3 Front Attachment (Parallel Link)
Pin and Bushing.....W2-3-1-1
Standard Dimensions for Quick Coupler and
Bucket.....W2-3-2-1
CylinderW2-3-3-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$