

Workshop Manual

ZW 150-6 150PL-6 Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TOPTC50-EN
Technical Manual (Troubleshooting) : Vol. No.TTPTC50-EN
Workshop Manual : Vol. No.WPTC50-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling.....W1-1-1-1

Group 2 Tightening

Tightening Bolts and Nuts.....W1-2-1-1

Piping JointW1-2-1-4

Group 3 Painting

PaintingW1-3-1-1

Painting (Parallel Link).....W1-3-2-1

Group 4 Bleed Air from Circuit

Bleeding Air from Hydraulic SystemW1-4-1-1

Bleeding Air from Fuel System.....W1-4-1-3

Bleeding Air from Brake (Axle)W1-4-1-4

Group 5 Preparation

Preparation before Inspection and MaintenanceW1-5-1-1

Hydraulic Circuit Pressure Release ProcedureW1-5-1-6

Pressure Release from Ride Control Accumulator.....W1-5-1-7

Pressure Release from Hydraulic Oil TankW1-5-1-8

Pressure Release from Expansion TankW1-5-1-9

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body
Center Hinge.....W2-1-1-1

Group 2 Front Attachment
Pin and Bushing.....W2-2-1-1
Standard Dimensions for Lift Arm and Bucket...W2-2-2-1
CylinderW2-2-3-1

Group 3 Front Attachment (Parallel Link)
Pin and Bushing.....W2-3-1-1
Standard Dimensions for Quick Coupler and
Bucket.....W2-3-2-1
CylinderW2-3-3-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$